

This is a digital copy of a book that was preserved for generations on library shelves before it was carefully scanned by Google as part of a project to make the world's books discoverable online.

It has survived long enough for the copyright to expire and the book to enter the public domain. A public domain book is one that was never subject to copyright or whose legal copyright term has expired. Whether a book is in the public domain may vary country to country. Public domain books are our gateways to the past, representing a wealth of history, culture and knowledge that's often difficult to discover.

Marks, notations and other marginalia present in the original volume will appear in this file - a reminder of this book's long journey from the publisher to a library and finally to you.

Usage guidelines

Google is proud to partner with libraries to digitize public domain materials and make them widely accessible. Public domain books belong to the public and we are merely their custodians. Nevertheless, this work is expensive, so in order to keep providing this resource, we have taken steps to prevent abuse by commercial parties, including placing technical restrictions on automated querying.


We also ask that you:

- + *Make non-commercial use of the files* We designed Google Book Search for use by individuals, and we request that you use these files for personal, non-commercial purposes.
- + Refrain from automated querying Do not send automated queries of any sort to Google's system: If you are conducting research on machine translation, optical character recognition or other areas where access to a large amount of text is helpful, please contact us. We encourage the use of public domain materials for these purposes and may be able to help.
- + *Maintain attribution* The Google "watermark" you see on each file is essential for informing people about this project and helping them find additional materials through Google Book Search. Please do not remove it.
- + *Keep it legal* Whatever your use, remember that you are responsible for ensuring that what you are doing is legal. Do not assume that just because we believe a book is in the public domain for users in the United States, that the work is also in the public domain for users in other countries. Whether a book is still in copyright varies from country to country, and we can't offer guidance on whether any specific use of any specific book is allowed. Please do not assume that a book's appearance in Google Book Search means it can be used in any manner anywhere in the world. Copyright infringement liability can be quite severe.

About Google Book Search

Google's mission is to organize the world's information and to make it universally accessible and useful. Google Book Search helps readers discover the world's books while helping authors and publishers reach new audiences. You can search through the full text of this book on the web at http://books.google.com/

Library of the University of Wisconsin

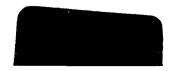



		·	
•	•		
			•
			•

INDIAN STORAGE RESERVOIRS WITH EARTHEN DAMS.

.

INDIAN STORAGE RESERVOIRS WITH EARTHEN DAMS:

BEING

A PRACTICAL TREATISE ON THEIR DESIGN
AND CONSTRUCTION,

ΒY

WILLIAM LUMISDEN STRANGE,

MEMBER OF THE INSTITUTION OF CIVIL ENGINEERS; CHIEF ENGINEER IN SIND (RETIRED).

SECOND AND ENLARGED EDITION.

16 PLATES AND 59 ILLUSTRATIONS.

"For in the wilderness shall waters break out, and streams in the desert. And the parched ground shall become a pool, and the thirsty land springs of water."—ISAIAH XXXV. 6, 7.

LONDON:

E. & F. N. SPON, LTD., 57, HAYMARKET.

NEW YORK:

SPON & CHAMBERLAIN, 123, LIBERTY STREET.

1913

BRADRURY, AGNEW, & CO., LD., PRINTERS, LONDON AND TONBRIDGE. 178036 OCT -9 1913

(v)

SWM ST8.

TABLE OF CONTENTS.

									Page No.
Pre	FACE TO SECOND EDITION								xix
	, TO FIRST EDITION						•••		XX
	ENDICES	•••					•••		xiii
	OF PLATES							•••	xiv
	FIGURES IN TEXT								χv
Gros	SSARY OF ABBREVIATIONS.		•••						xvii
u		2020.	•••		•••		•••	•••	
		OTTA	PTER	т					
	_		Reserv						
		Selection	on of t	he Site	•				
Para. No.	•	8	Bubject.						
1.	Comparison of Near and D	istant	Reserv	oira					1
2.	Loss in Transit down Natu								2
3.	Loss in Transit down Cana	ls			•••	•••	•••		2
4.	Selection of the Site of the	Dam	•••	•••		•••			3
5.	Selection of the Storage Be		•••						4
	ŭ				•••		•••	•••	-
			atchme	nt Area	ı.				
6.	Classification of Reservoir	Catchn	nents	•••	•••	•••	•••	•••	6
7,	Yield from the Catchment		•••	•••	• • •	•••	•••	•••	7
8.	Partly Natural and Partly	y Artif	ficial C	atchme	nts∸I	Equiva	lent Ca	tch-	
	ment Area		•••	•••		•••	•••		8
9.	Subsidiary Reservoirs	•••	•••	• • •	•••	•••	•••		9
10.	Wholly Artificial Catchmer	nts	•••	•••	•••	•••		•••	11
11.	Measurement of the Catch	ment A	lrea.	•••	•••	•••	•••		11
	111	Rainfe	all and	Run	A				
10		•			•				
12.	Natural Disposal of the Re		••• •••••					•••	12
13.	Variations in Rainfall and							•••	12
14.	Necessity for maintaining			, ,	 £-11	•••	•••	•••	14
15.	Examples of the Proportio					•••	•••	•••	14
16.	Tabular Statement of Rain					···		• • • •	17
17.	The Effect of the Intensit	•				Satur	ition of	the	••
10	Ground on the Run-off	···		•••	•••	•••	•••	•••	18
18.	Tabular Statement of Dail			···		•••	•••	•••	18
19.	Estimation of the Run-off	from t	ne Dan	y Kain	itali	•••	•••	•••	20
	IV. The S	torage	Capaci	y of Re	eservoir	rs.			
20.	Proportion of the Storage (-	-	• •			tchmen	t	21
21.	Calculation of Storage Cap			• • • • • • • • • • • • • • • • • • • •				- ···	23
22.	Loss by Evaporation and	•			oirs			•••	24
	u	P				•••	•••	•••	~3

CHAPTER I. THE RESERVOIR—continued.

IV. The Storage Capacity of Reservoirs-continued.

Para. No.	Subject.		Page No.
23.	Observations of Loss by Evaporation and Absorption in Rese	rvoirs	20
24.	Observations of Loss by Evaporation and Absorption in Cans		29
25.	Comparative Cost of Storage	•••	31
26 .	Estimate of the Storage required for a certain Irrigable Area		32
27.	Estimate of Expenditure from Storage—Duration of Supply	•••	32
28.	Preliminary Estimate of the Cost of a Storage Reservoir	•••	33
	•		
	V. Irrigational Considerations.		
29.	The Amount of Storage dependent upon the "Duty"	•••	34
3 0.	The Proportion of Irrigable Area to Culturable Area under Con	nmand	36
31.	The Proportions of different Crops under Irrigation	•••	37
32.	The Rotation of Crops	•••	38
	VI. Reservoir Basins.		
33.	The Proportion of the Submerged Culturable Area to the Area	Irriga	ble
	by the Project		38
34.	The Retentiveness of the Reservoir Basin	•••	40
35	The Extent and the Utilisation of the Land to be acquired	•••	40
	VII. The Silting of Reservoir Beds.		
3 6.	The Necessity and the Methods for the Reduction of Silt Dep	osit	42
37 .	The Classification of Silt	•••	43
3 8.	The Proportion of Silt to Water	•••	44
39.	The Determination by Cross-sections of the Amount of Silt dep		-
40.	The Determination by Silt Boxes of the Amount of Silt depos		46
41.	The Determination by Observations of Inflow and Outflo		
	Amount of Silt deposited		47
42.	The Level at which the Outlet Sill should be placed	•••	47
43.	The Advantage of Earthen compared with Masonry Dams in		
TŲ.	the Silt Difficulty	···	48
	VIII. Survey and Investigation Work.		
43A.	Irrigation Reconnaissance Survey	•••	49
44.	Survey for the Works	•••	50
45.	Survey of the Capacity of the Reservoir Basin	•••	51
46.	Rainfall and River Discharge Observations	•••	52
	· ·		
	IX. The Utility of Reservoirs.		
47.	The Utility of Reservoirs in Times of Scarcity and Deficiency	f Rain	fall 54
48.	The Comparative Utility of Small and Large Reservoirs	•••	55
49 .	Revenue Prospects of Reservoirs	•••	56
50 .	The Suitability of Reservoir Works for the Employment of	f Fam	ine
	Labour		

TABLE OF CONTENTS.

CHAPTER II.

THE DAM EMBANKMENT.

I. Various Kinds of Dams.

Para. No.		8	Bubject.	•					Page No.
51.	Classification of Dams	•••	•••	•••	•••		•••		59
52.	Earthen Embankments	•••	•••	•••	•••	•••	•••	•••	59
53.	Advantages of Earthen En			•••	•••	•••	•••		60
54.	Masonry Dams-Composite					•••	•••		60
5ő.	American Types of Dams			•••	•••	•••	•••		61
56.	"Rock-fill" Dams		•••	•••	•••	•••	•••	•••	62
57.	" Hydraulic-fill " Dams	•••	•••	•••	•••	•••	•••	•••	62
58.	Earthen Embankments wit					•••	•••	•••	65
						•••	•••	• • • •	
	II. Th	teoretic	cal Con	sideral	ions.				
59 .	The Deficiency of the Theo	ry of	Earthw	vork	•••	•••	•••	•••	67
6 0.	General Causes affecting th				work	•••	•••	•••	68
61.	The "Historical Element"	of E	rthwo	rk	•••	•••	•••	•••	69
62.	The Effect on Earthwork					ently	to its	Con-	
			•••	•••	•••	•••	•••	•••	70
63.	The Behaviour of Puddling	Clay	with V	Vater	•••	•••		•••	72
64.	The Rate of Filtration thro	ough S	oils—T	he De	oth of t	he Pu	ddle Tr	ench	73
	III. The L)esign	of Dan	n Emb	ankmen	ıts.			
6 5.	The Section of the Dam E	mbank	ment	•••		•••	•••	•••	74
6 6.	The Height of the Dam	•••			•••	•••	•••	•••	75
67.	The "Free Board" of the		•••		•••	•••	•••	•••	76
68 .	The Top-width of the Dam	ı	•••	•••		•••	•••		76
69 .	The Side-slopes of the Dan	ı	•••	•••	•••	• • •	•••	٠	77
69A.	The Effect of Percolation of			•••	•••	•••	•••	•••	77
70.	The Crest of the Dam—Th	e Cres	t Wall	•••	•••	•••	•••		80
71.	The Width of the Dam at I	ligh-fl	ood Le	vel and	l Full-s	upply	Level		81
72.	Allowance for Settlement	• • •	•••	•••	•••	• • •	•••	•••	82
73.	The Sectional Area of a Da	am En	abanku	nent	•••	•••		•••	84
74.	Sections required at Partic	cular S	Sites—(Gorge 1	Emban	kment	s—Dan	as on	
	Inferior Foundations	•••	•••	•••	•••		•••	•••	84
75.	Breaching Sections	•••	•••	•••	•••	• • • •	•••	•••	86
76.	Berms	•••	•••	•••	•••	•••	•••	•••	87
77	Toe Walls	•••	•••	•••	•••	•••	•••	•••	89
78.	The Relative Cost of the I	Dam ai	nd the	Waste-	Weir	•••	•••	•••	90
	IV. Mate	rials j	for Dan	m Cons	tructio	n.			
79.	Selection of Material neces	sary	•••	•••	•••	•••	•••	•••	91
80.	The Disposition of Materia	d in th	ie Secti	ion	•••	•••	•••	•••	92
81.	The Casings of the Dam	•••	•••	•••	•••	•••	•••	•••	95
82 .	The Utilisation of Spoil	•••	•••	•••	•••	•••	•••	•••	96
83.	American Practice		•••	•••	•••	•••	•••		96

CHAPTER II. THE DAM EMBANKMENT-continued.

	V. The I	uddle :	Trench.					
Para. No.		lubject.						Pag No
84.	The Object of the Puddle Trenc	h				•••		9'
85.	The Position of the Puddle Tren			•••		•••	•••	98
.86.	The Depth of the Puddle Trench			•••	•••	•••	•••	99
87.	The Bottom-Width of the Puddl							10
88.	The Side-slopes of the Puddle Tr	_	•••	•••	•••	•••		102
89.	The Length of the Puddle Trend					•••		103
90.	The Height of the Puddle Filling			•••				103
91.	The Continuity of the Puddle Tr	-						104
92.	Filling the Puddle Trench	•••						108
93.	Concrete Trenches						•••	107
94.	Concrete Key Trenches		•••	•••	•••		•••	108
95.	The River Crossing of the Puddl							109
96.	The Drainage of the Puddle Tree		•••		•••			110
97.	The Construction of the Puddle				•••		•••	111
98.	Infiltration not induced by the I						•••	114
99.	Puddle Trenches not suitable for				•••			115
100.	Nulla Puddle Trenches				•••			116
101.	Proposed Concrete Trench for th							116
102.	Excavation in the Reservoir Bed							118
102.	Data vacion in the reservoir bed		•••	•••	•••	•••	•••	110
	VI. The I	uddle	Wall.					
103.	Central Puddle Walls	•••						119
104.	Slope Puddle Walls	•••	•••	•••		•••	•••	120
105.	Puddle Walls not now adopted in							121
				-100			•••	
	VII. The Dra	inage o	f the L	Iam.				
106.	The Necessity for Drainage	•••	•••	•••	•••		•••	122
107.	The System of Drains Prop	osed'	The "	Surface	Dra	in "—?	Che	
	" Downstream Drain "		•••		•••		• • • •	123
108.	"Rear Drains"							126
109.	Open and Underground Drains							128
110.	The Self-drainage of Earthwork	•••	•••	•••				129
				_				
	VIII. The Foun	dations	of the	Dam.				
111.	Order of Suitability of Natural F	'oundat	ions	•••	•••	•••	•••	131
112.	"Foundation Trenches and Drai	ns ''	•••	•••	•••	•••	•••	132
113.	Benched Foundations of the Dan		•••	•••	•••	•••	•••	134
114.	Deep Black "Cotton-soil" Foun	dations		•••	•••	•••	•••	136
115.	Sandy River Bed Foundations	•••	•••	•••	•••	•••	•••	136
	IV MI Constantion		D 0.					
	IX. The Construction	nj the I	vam si	upersiri	iciure.			
116.	General Formation	•••	•••	•••	•••	•••	•••	137
117.	Watering	•••	•••	•••	•••	•••	•••	137
118.	Spreading and Mixing	•••	•••	•••	•••	•••	•••	138
119.	Consolidation	•••	•••	•••	•••	•••	•••	139
1 2 0.	Thickness of Layers	•••	•••	•••	•••	•••	•••	142
121.	Slopes of Layers	•••	•••	•••	•••	•••	•••	143
122.	Uniform Construction necessary	•••	•••	•••		•••		143

TABLE OF CONTENTS.

CHAPTER II. THE DAM EMBANKMENT—continued.

IX. The Construction of the Dam Superstructure-continued.

Para. No.	8	ubject.						Page No.
123.	Junctions of Earthwork—Cross-s			•	dinal	Additio	aac	
	to Height	•••	•••	•••	•••	•••	•••	144
124.	Finishing off the Dam	•••	•••	•••	•••	•••	•••	145
125.	Observations during Construction		•••	•••	•••	···	•••	146
126.	General Remarks: Setting out the					Templa	ites	
	-Minor Arrangements-Meth	od of E	xecutir	ig Wor	k	•••	•••	147
	X. Compound Dar	ns with	Dryst	one To	es.			
127.	Objections to High Earthen Dan	as	•••	•••	• • •			149
128.	The Drystone Toes of the "Com	pound	Dam "	•••		•••		151
129.	The Construction of the Dryston			•••	•••			152
130.	The Advantages of the "Compo			•••		•••		153
	XI. The Clo	sure of	the D	am.				
131.	The Importance of the Closure	•••	•••	•••	•••	•••	•••	154
132.	The Ordinary Method of Closure	•••	···	•••	•••	•••	•••	154
133.	The Revised Method of Closure	•••	•••	•••	•••	•••	•••	156
134.	The Temporary Waste-Weir	•••	•••	•••	•••	•••	•••	157
135.	The Closure of a Large Dam	•••	•••	•••	•••	•••	• • •	159
136.	The Preliminary Closure	•••	•••	•••	•••	•••	•••	159
137.	The First Closure	•••	•••	•••	•••	•••	•••	160
138.	The Second Closure	•••	•••	•••	•••	•••	•••	162
139.	The Final Closure	•••	•••	•••	•••	•••	•••	163
140.	Quantities of Work to be done in	each (Closure	•••	•••	•••	•••	164
	XII. Earthwork	Slins a	nd thei	r Repa	ir.			
141.	The Necessity for the Sound Con	• .						165
142.	Faulty Foundations					•••	•••	166
143.	77 101.11	•••	•••	•••	•••	•••	•••	166
144.	-	···	•••	•••	•••	•••	•••	167
144. 145.	Defects in Construction and Desi Changes in Chemical Constitution	_	•••	•••	•••	•••	•••	167
146.	T 01 A TTT .		•••	•••	•••	•••	•••	168
147.	T	•••	•••	•••	•••	•••	•••	169
148.	Profile of Slips Slips in Pure Black "Cotton-soil	····	•••	•••	•••	•••	•••	171
149.	•		•••	•••	•••	•••	•••	171
	Slips in Gritty Soil		•••	•••	•••	•••	•••	
150.	Repair of Slips—Preliminary Ope			•••	•••	•••	•••	172
151.	Repair of Slips—Final Operation	8	•••	•••	•••	•••	•••	173
	XIII.	Pitchi	ny.					
152.	The Necessity for Pitching	•••	•••	•••	•••	•••	•••	174
153.	The Laying of Pitching	•••	•••	•••	•••	•••	•••	175
154.	The Extent and Thickness of Pit	ching	•••	•••	•••	•••	•••	176
155.	Foundation and Top Courses of I	Pitching	ζ	•••		•••	•••	177
156.	Concrete Packing of Pitching	•••	•••	•••	•••		•••	177
157.	Concrete and Brick Pitching			•••	•••	•••	•••	178
158.	Grass or Reed Revetments							179

CHAPTER III.

THE WASTE-WEIR.

I. The Weir Proper.

Para. No.	1	Subject,						Page No.
159.	Different Forms of Waste-Weir	•••	•••	•••	•••			181
160.	Drowned Channels and Weirs	•••	•••	•••	•••	•••	•••	182
161.	Clear Overfall Weirs	•••	•••	•••	•••	•••	•••	182
162.	Positions of Weirs—Flank and			•••		•••		183
163.	Sections of Weirs	•••	•••	•••		•••		185
164.	The Approach Channel	•••	•••	•••		•••	•••	186
165.	Safety Flood Cuts	•••		•••	•••			188
166.	The Depth of the Maximum Flo					•••		189
167.	The Factors producing the Max						•••	190
168.	Formulæ for the Rate of Man							130
100.	Craig's					•		191
169.	The Limited Utility of Run				d Ober	···	•••	151
100.	~ .							193
170.	Cyclones Tanks in Series			•••	•••	•••	•••	195
171.	Empirical Allowances for Waste		 Duna a	æ	•••	•••	•••	
					•••	•••	•••	196
172.	High-Flood Run-off from Differ				•••	•••	•••	198
172.	Formulæ for the Discharge of V					•••	•••	202
173. 174.	Calculation of the Discharge of					•••	•••	203
175.	The Discharge of a 200-foot Wa					•••	•••	205
	Formula for the Discharge of D					•••	•••	206
176.	Formula for the Discharge of C	iear Ov	енан у	Y 8.8TO-	M eils	•••	•••	207
	II. The	Tail C	hannel					
177.	The Section of the Channel		•••					208
178.	"Retrogression of Levels"			•••		•••	•••	210
179.	The Effect of the Bed Slope							
	Discharge			•	•••	•••	•••	212
180.	The Outfall of the Tail Channel				•••	•••	•••	213
181.	Design with the Tail Channel P					•••	•••	214
	III. The Flood-Absor	ptive C	apacity	of Re	eservoirs	ı .		
182.	The Regulating Power of Lakes	3	•••		•••	•••	•••	216
183.	The Necessity for Large Absorp					•••		216
184.	Method of safely utilising the P					a		217
185.	The Allowance for Flood-Absor					•••		219
185A.	. Mathematical Calculation of the	-				a		220
186.	Examples of Reservoir Flood-A					•••		222
	•	•						
	IV. The "S	tepped	Waste-	Weir.')			
187.	Objections to the Usual Form of	of Leve	l Waste	-Weir	•••		•••	223
188.	General Description of the "St							224
189.	Advantages of the "Stepped W			•••		•••	•••	226
190.	Objections to the "Stepped Wa			•••	•••	•••	•••	227
191.	Detailed Description of a "Ste							229

TABLE OF CONTENTS.

CHAPTER I	II. T	HE W	aste-W	EIR-cont	inued.
-----------	-------	------	--------	----------	--------

IV. The "Stepped Waste-Weir"—contin

Para. No.		Subject.						Page No
192.	The Under-sluices and Tempora	arv Wei	r Crest					230
	The Automatic Gates				•••	•••	•••	23
193.	Flood Calculation of the "Step	ned Wa	ste-We	ir"	•••		•••	236
194.	Working of the "Stepped Was							237
195.	Saving effected by the Adoptio	n of the	"Sten	ned W			•••	238
200.	baving encoura by one macpute	n or the	Осер	peu vi	G6300- V	VOII	•••	200
	CHA	PTER	IV.					
	Тн	E OUTL	BT.					
		neral Re	marks.					
196.	The Object of the Outlet	•••	•••	•••	•••	•••	•••	242
197.	The Location of the Outlet	•••	•••	•••	•••	•••	•••	242
198.	The Number of Outlets	···· ·	•••	•••	•••	•••	•••	244
199.	The Level of the Outlet Sill	•••	•••	•••	•••	•••	•••	245
2 00.	Subsidiary Uses of the Outlet	•••	•••	•••	•••	•••	•••	245
	II. Differen	t Forme	of Ou	tlet.				
201.			•			•••		247
202.	General Remarks on Outlet Cul						tion	
	necessary—Water-tight Com							
	Culvert Arch Ring—The Con-							
	—The Size of the Vent of the							
						viii ou	···	251
203.	Pipe Outlet			•••	٠	•••		254
204.	Siphon over the Dam	•••			•••	•••	•••	254
205.	Headwall in the Centre Line of		m	•••	•••	•••	•••	255
206.	The Advantages and Disadvant		he Hee	dwell				200
200.	of the Dam							257
207.	Outlet Tower in the Centre Lin			•••	•••	•••	•••	259
208.					•••	•••	•••	261
209.	Headwall across an Open Chang			 Dom	•••	•••	•••	262
208. 210.						 Pa:1 Da	•••	202
210.	General Remarks: The Out						•	000
	Gratings-The Outlet Gauge-	ruspec	COOL OI	тие О	utiet C	uivert	•••	263
	III. Reg	nılating	Works.					
211.	General Description	•••	•••	•••	•••	•••	•••	265
212.	Outlet Towers	•••	•••	•••	•••	•••	•••	265
213.	Outlet Headwalls	•••	•••	•••	•••	•••	•••	266
214.	The Approach Bank	•••	•••	•••	•••	•••	•••	267
215.	Double Control over Sluices		•••	•••	•••	•••	•••	268
216.	Dam Slope Outlet	•••	•••	•••	•••	•••	•••	270
	IV. Valı	ves and	Sluices					
917	Ordinary Valves and Sluices							272
	"Pole-and-Plug" Valves	•••	•••	•••	•••	•••	•••	
218.	Lois-wid-Link AwiAss	•••	•••	•••	•••	•••	•••	273

CHAPTER IV. THE OUTLET-continued.

	1	[V. Va	lves an	d Sluic	:esco1	ntinued	l.	•		
Para. No.				Subject						Page No.
219.	Equilibrium Valve	esW	orking	of Ordi	inarv V	alves	•••		•••	276
220.	Testing Gates—Ca		_		•	•••	•••		•••	276
221.	Suggested Arrange					•••	•••	•••		279
222.	General Remarks									
	as a Source of V					_	·	•••		279
22 3.	Lifting Rods and				-					280
224.	Stops	•••	•••	•••	•••	•••	•••	•••	•••	
444.	Capstan Heads	•••	•••	•••	•••	•••	•••	•••	•••.	404
			CHA	APTEI	R V.					
			Miso	ELLAN	EOUS.					
		I.	Water-	Supply	Schem	les.				
22 5.	Proximity of Stor	age to	the To	wn nec	essary	•••	•••	•••	• • •	284
22 6.	Amount of Storag	ө, &с.,	requir	ed to e	nsure (Certain	ty of S	ıpply	•••	284
227.	Sanitation of the	Catch	ment .	Area-	Conser	vancy	of Vill	ages in	the	
	Catchment Area	.—Filt	ration	•••	•••	•••	•••	•••	•••	285
228.	The Works of a W	ater-S	Supply	Storage	e Reser	voir	•••	•••	•••	287
22 9.	Utility of Water-S	upply	Storage	Reser	voirs as	Famir	e Relic	f Work	s	291
		11	4		. e W					
000	Camanal A			•	of Wo					291
230.	General Arrangem		•••	•••	•••	•••	•••	•••	•••	291
231.	Works Arrangeme	ents	•••	•••	•••	•••	•••	•••	•••	202
	1	III. Pl	ant Re	quired	for the	Work	9.	•		
232.	General Remarks	•••		- 	•••	•••	•••			294
233.	Tram Plant	•••	•••	•••	•••		•••		•••	294
234.	Rollers	•••		•••	•••	•••	•••	•••	•••	295
235.	Pumps		•••		•••	•••	•••		•••	295
236.	Stone-metal Crush	iers au	d Cone	rete M	ixers				•••	295
237.	Tools and Instrum		•••		•••				•••	296
		T 3.7	1/ !		- 8 117 -	1				
238.	The Dam				of Wa					296
239.	The Dam The Waste-Weir	•••	•••			•••	•••	•••	•••	297
	The Outlet	•••	•••	•••	•••	•••	•••	•••	•••	298
240.	The Reservoir	•••	•••	•••	. •••	•••	•••	•••	•••	298
241.	The reservoir	•••	•••	•••	•••	•••	•••	•••	•••	290
	V. The H	Report,	Plans,	Estim	ates an	d Spec	ificatio	ns.		
242.	The Report : Ger	neral I	Descrip	tion—I	Prepara	tion of	the P	roject-	-The	
	Site and the W									
	Floods—Reven									
	Report									299
243.	The Plans	•••	•••		•••		•••	•••	•••	301
244.	The Estimates	•••	•••					•••	•••	303
24 1. 245.	The Specifications					•••	•••	•••	•••	303
44 0.	The openications	• • • • • • • • • • • • • • • • • • •					···	•••	•••	000
	INDEX									433

APPENDICES.

•		R	eference.		
Appen- dix No.	Subject.	Chap- ter No.	Paragraph No.	Page No.	
1.	Comparative Statement of Dimensions and Cost of Storage Works with Earthen Dams in the Bombay Presidency (Deccan)	I.	28	304^	
2.	Table of Total Monsoon Rainfall and estimated Run-off and Yield per Square Mile from Catch-			302	
3.	Calculation of the Amount of Storage required for the Irrigation of a Certain Area and to supple-	I.	13, 16	305	
	ment the Discharge of a Natural Stream	I.	26	306	
4.	Reservoir Expenditure Estimate	I.	27	308	
5.	Estimate of the Duration of a Water-Supply	_	_	ł	
	Storage	<u>I</u> .	27	310	
6. 7.	Statistics of Certain Irrigation Works in India Estimates of Revenue Results from Reservoir	I.	29—31	312	
_	Storage	<u>I</u> .	28, 29, 32	316	
8.	Table of Waste-Weir Runs-off	III.	171	319	
9.	Tables of Values of Bazin's Coefficients for Earthen and Masonry Channels	III.	172	320	
10.	Table of the Discharge of a Waste-Weir Channel having a Bed Width of 200 feet and a Bed Slope of 1 in 100	***	374	000	
11.	Table of the Discharge from each Foot of Length of	III.	174	322	
12.	a Clear Overfall Weir in Cubic Feet per Second Máládevi Tank Project. Temporary Waste-Weir	III.	176	324	
12.	Flood Calculations—First Closure	II.	137	326	
13.	Máládevi Tank Project. Temporary Waste-Weir	11.	101	320	
	Flood Calculations—Second Closure	II.	138	328	
14.	Maladevi Tank Project. Permanent Waste-Weir				
	Flood Calculations	III.	193	330	
15.	Recapitulation of Maladevi Tank Project	V.	244	332	
16.	Abstract Estimate of Maladevi Tank Project	v.	244	333	
17.	Maladevi Tank Project. Table of Reservoir Con-	-			
18.	specifications for the Puddle Trench, Dam Em-	Ι.	21	338	
	bankment and Pitching	<u>v</u> .	245	339	
18^.	Specifications for the Waste-Weir and Outlet	v .	245	357	
19.	Tables of the Cross-sectional Areas of Puddle Trenches	n.	92	386	
20.	Tables of the Cross-sectional Areas of Dam Embankments	II.	73	388	
21.	Tables of the Cross-sectional Lengths of Pitching	ii.	152		
22.	Notes on the Arrangements for and Management	11.	102	393	
	of Large Works	II.	126 (c)	396	
23.	Table of Task-work in different Soils	_		415	
24.	Tables for ascertaining the Cost of Carriage by	i			
- 1	Coolies and by Carts	<u> </u>	-	420	
25.	Useful Memoranda	_	- 1	423	
26.	Statistical Information required for a Project	V. I	242 (a)	427	

LIST OF PLATES.

Plate No.	1. Diagrams.
1.	Diagram showing Approximate Amounts of Percentage of Run-off to Rainfall, Depth of Run-off due to Rainfall, and Yield of Run-off, from Good, Average, and Bad Catchments.
2.	Diagram of Rate of Waste-Weir Runs-off in inches per hour.
24.	Diagram of High-Flood Discharges from different Catchments.
2В.	Diagram of Waste-Weir Discharges with varying Tail Channel Depths and Afflux Heights.
	2. Máládevi Tank Project.
3.	General Plan, showing Catchment Area and Reservoir.
4.	Dam Embankment, General Plan and Longitudinal Section.
5.	,, ,, Cross-sections.
6.	Waste-Weir, General Drawings.
7.	" Enlarged General Drawings.
8.	,, Detailed Drawings.
9.	Outlet, General Drawings.
10.	" Detailed Drawings.
	3. MISCELLANEOUS DRAWINGS.
11.	Dhupdal Storage Reservoir: Design for 7' 0" × 4' 6" Sluice Gate.
12. {	Waghad Tank Outlet Sluice: Details of Ironwork. Bateman's Capstan Head.
13.	Hubli Waterworks -Outlet: General Drawings.
14.	,, ,, Detailed Drawings of Ironwork.

LIST OF FIGURES IN THE TEXT.

CHAPTER I.

Figure No.	8	lubject.						Pag
A.	Curves showing Effect of Stat	te of Gr	ound o	n Ru	n-off	•••	•••	19
	СНА	PTER	II.					
1.	Core Wall of new Croton Dan	n				•••		68
	. Diagram of Dam Percolation			•••		•••		78
2.	Plan of Berm	•••	•••	•••	•••		•••	88
3, 4	Sections of Toe Walls	•••	:::		•••	•••	•••	90
5, 4 .	Ordinary Type Sections of Da			••• h	•••	•••	•••	93
в. 7. 8.	Puddle Trench Sections		•		•••	•••	•••	112
9, 10.	Proposed Bohio Dam, Panama		··· Ionaiti	 Idinal	ond or		··· tions	117
11.	Section of Dam proposed by !	-	_					126
11. 12.	Cross-sectional Junction of Er			•••	•••	•••	•••	144
13.	Longitudinal Junction of Emb			•••	•••	•••	•••	145
14.	Setting-out Template	Janua III O		•••	•••	•••	•••	148
15.	Usual Closure of a Dam Embs	 nkman	•••	•••	•••	•••	•••	155
16.	Proposed Closure of a Dam Ember			•••	•••	•••	•••	156
17.	Cross-sections of Slip of Wagh			•••	•••	•••	•••	170
	Foundation and Top Courses			•••	•••	•••	•••	177
18, 19	Foundation and Top Courses of	OI FIW:D	mig	•••	•••	•••	•••	177
	СНАР	TER I	II.					
20.	Flank of Waste-Weir, Plan an		on of	•••	•••	•••	•••	184
21-24.	Sections of Waste-Weir Walls		•••	•••	•••	•••	•••	185
25 .	Flood Section of a Waste-Wei	r Chann	el	•••	•••	•••	•••	202
26 .	Flood Section of a Drowned V			•••	•••	•••	•••	207
27.	Flood Section of a Clear Overl	fall Was	te-We	ir	•••	•••	•••	208
28	Plan of a Waste-Weir Channel	l	•••	•••	•••	•••		209
29.	Section of Waste-Weir Water	Cushion	ıs in Se	eries	•••	•••	•••	211
3 0.	Plan of Waste-Weir with Para	llel Tail	Chan	nel	•••		•••	215
31.	Design of a "Stepped Waste-V	Weir" i	or a F	lank \	Veir	•••	•••	224
32.	Design of a "Stepped Waste-							225
33.	Cross-section of an Automatic					•••	•••	232

xvi

LIST OF FIGURES IN THE TEXT.

CHAPTER IV.

Figure No.	Subject.						Page No.
34.	Outlet, Headwall and Approach Bank	κ					248
35.	Section of Junction of Outlet Tower		ulvert			•••	250
36.	Longitudinal Section of Outlet Sipho	n			•••		255
37.	Plan of "Dry-well"						260
38.	Plan of Outlet Tunnel				•••		261
39.	Plan of Outlet Headwall across an O	pen C	hannel				262
40, 41.	Plans of Outlet Approach Banks				•••	•••	267
42.	Headwall in Centre Line of Dam, Pla	n and	Section	n		•••	269
43.	Dam-Slope Outlet, Plan and Section						271
44.	"Pole-and-Plug" Outlet Headwall						273
45.	Iron "Pole-and-Plug" Valve	•••	•••	•••	•••	•••	274
46.	"Pole-and-Plug" Outlet Tower	•••	•••	•••	•••	•••	274
47.	"Plug" Outlet Tower	•••	•••	•••	•••	•••	275
48.	"Pole-and-Plug" Dam-Slope Outlet		•••	•••	•••	•••	275
49.	Equilibrium Valve, Diagram of	•••	•••	•••	•••	•••	276
50.	Test of a Sluice Gate, Diagram of Fo		•••	•••	•••	•••	278
	CHAPTER	V.					
		• •					000
51.	Outlet Pipe-hanger	•••	•••	•••	•••	•••	288
52.	Plan of Inlet Filter	• • •	•••	•••	•••	•••	289
53.	Plan of Setting-out Borrow-pits	• • •	•••	•••	•••	• • •	293

GLOSSARY OF ABBREVIATIONS AND INDIAN WORDS.

```
F. S.
                    = full-supply.
F. S. L.
                ... = full-supply level.
H. F. L. ...
                ... = high-flood level.
M. S. L. ...
                ... = mean sea level.
R. L.
                ... = reduced level.
Cusecs ...
                ... = cubic feet per second.
Cft. ...
                ... = cubic feet.
Mill. eft. ...
                ... = million cubic feet.
Rft. ...
                ... = running feet.
Sft.
                ... = square feet.
T. P.
                ... = trial pit.
Anna
                    = \frac{1}{16} \text{th rupee} = 1d.
Bábhul ...
                   = a common hard and tough wood (Acacia Arabica).
Bhistie ...
                   = a water-carrier.
Coolie ...
                   = a works labourer.
Geru ...
               ... = a soft clay rock.
Ghát
               ... = main mountain range.
Kankar ...
               ... = nodular hydraulic limestone.
               ... = a gray marly soil charged with salts.
Kárkun ...
               ... - a works clerk or timekeeper.
Kharif ...
               ... = the season from February 15th to October 14th.
Maistry ...
               ... = a works foreman.
Mán ...
                    -- a hard brown clay soil.
Monsoon ...
               ...
                   - the rainy season.
Muccadum
               ... a works gang-man.
Murum ...
               ... - disintegrated trap rock.
Nulla.
               ... = a water-course.
One lakh ...
              ... -= 100,000
Peon ...
               ... -= an office messenger.
Pie
               \dots = \frac{1}{12}th anna = \frac{1}{12}th penny.
Rabi
         ...
               ... = the season from October 15th to February 14th.
Rupee
               ... = 1s. 4d.
        ...
Shadu
               ... - a white marly soil.
Sáp
               ... - a basket scoop for bailing water.
Tamarisk ...
                   = a jointed evergreen reedy plant growing on riversin
                         lands (Tamarix Gallica).
Tank
                    = a storage reservoir.
                                                               b
I.R.
```

	·				
			`		:
					·
					;
	•				
-				·	
					,

PREFACE TO SECOND EDITION.

For this edition the original one has been thoroughly revised and amplified where necessary. A few new paragraphs, appendices, plates and figures have been added; these have been numbered so that their numbering does not interfere with that of the original ones. The figures in the text have been redrawn and an index made. The Máládevi project has now been abandoned, vide the footnote to paragraph 48^a.

W. L. S.

READING, April, 1913.

PREFACE.

It is probable that one of the first results of the inquiries made by the Indian Irrigation Commission will be the construction of storage reservoirs to serve parts of the country which are peculiarly liable to drought. Indeed, several such schemes have already been submitted, and investigations in respect to others—some of the largest magnitude—are now in progress. that but few works of this class have been constructed anywhere in recent years, and that they are now being commenced for the first time in certain provinces, it occurred to me that a book treating of the different problems which present themselves, both in the design and in the construction of storage reservoirs, would be of use as a guide to those entrusted with their execution. I have written the following pages, however, in the hope that they may prove helpful both to those who have already had to deal with this class of work as well as to those who have not yet had any connection with it.

My own experience has been gained in the Bombay Presidency, and I have endeavoured to describe the practice which usually obtains there, as well as certain modifications and improvements of it which appear to me to be desirable. Although that experience and practice are necessarily of a local character, it is not unlikely that similar conditions to those which prevail in Bombay will be found in other parts of the Empire which lend themselves to the construction of storage

reservoirs, and I therefore trust that this work will be of general utility in India.

Mr. Fanning observes 1: "An earthwork embankment appears to the uninitiated the most simple of all engineering constructions, the one feature that demands least of educated judgment and experience." I hope that the following pages will show that this opinion of the uninitiated is entirely erroneous, and that for the proper design and construction of such a work a very considerable amount of skill and attention is absolutely necessary if success is to be attained.

The fact is that in the case of earthen embankments we are dealing with a material which is unsatisfactory and unreliable unless carefully treated, whereas, if it is properly utilised it has peculiar advantages of its own and is permanent to an eminent degree, as some of the oldest works in the world testify. Such embankments are, moreover, the cheapest structures whereby water can be stored, and they are particularly suitable for the employment of the large amount of unskilled labour which is available in ordinary times in India, and for which work has to be found in times of scarcity. I have therefore described in detail the precautions which it is most desirable to take—precautions which involve careful supervision rather than greatly increased expenditure. Naturally, they are needed more in the case of large and important works than in that of small and relatively insignificant ones.

Reservoirs in India are required either for irrigation or for the water-supply of towns. The former class, being the more important from an engineering point of view, has been described in detail, while the latter has been subsequently dealt with at less length. The

¹ "A Treatise on Hydraulic and Water-Supply Engineering." 15th edition, 1902. Page 334.

different parts of the complete project—the dam, the waste-weir, and the outlet—form the subjects of separate chapters, which, for the sake of easy reference, have been divided into numbered sections and paragraphs. The general conditions which have to be taken into account are discussed in the initial chapter, while the final one is devoted to miscellaneous subjects; at the end has been added a series of appendices which deal with and illustrate the general matters noticed in the earlier part.

The book is intended to be entirely practical, and, I believe, covers ground which has not been occupied before, as descriptive engineering works dealing with a variety of subjects do not usually go into complete detail in respect to any one of them. It has been my object to treat this one class of work as exhaustively as possible, so that an engineer not previously acquainted with it should, after studying these pages, be able to design correctly, and to construct securely, a storage reservoir with an earthen dam.

I am indebted to the Institution of Civil Engineers for permission to make free use of Paper No. 2996, which I contributed to Volume CXXXII. of their "Minutes of Proceedings," and of another Paper, which was not published, both of which deal with the same subject. I am also much obliged to Sir Thomas Higham, K.C.I.E., and to Mr. R. B. Buckley, C.S.I., for permission to make use of their books. I have acknowledged in the text my obligations to the other authorities whom I have consulted.

I have endeavoured to distinguish clearly between matters of ordinary practice accepted in Bombay and my own suggestions and recommendations, but, as the book is written impersonally, it may be as well, in order to avoid any chance of misapprehension, to say that the following are put forward from the results of my own experience:—

PARA
The substitution of subsidiary reservoirs for
simple feed channels
The crest wall of the dam
Breaching sections
The uniform construction of the dam 80
The drainage of the puddle trench 96—98
The system recommended for the foundation
and the drainage of the base of the
dam 107, 108, 112, 118
The "Compound Dam"
The system to be adopted for the closure of a
high dam
The waste-weir with parallel tail channel 181
The "Stepped Waste-Weir" for the utilisation
of the flood-absorptive capacity of the reservoir
187—195
The recommendation for the adoption of the
"Headwall on the centre line of the dam" to
secure the subsidiary uses of the outlet 206
The sanitary treatment of catchment areas 1 . 227
The appendices, with the exception of Nos. 1, 6, 9
23, 24, and 25, are original.
Ag it is somewally found assist to follow a compact

As it is generally found easier to follow a concrete example than an abstract description, I have, in order to make the latter clearer, taken for the former the project for the Máládevi Tank, which I drew up some years ago. This large scheme comprises practically all the features with which it is necessary to deal in the design and construction of a reservoir with a high earthen dam.

In conclusion, I may state for the benefit of engineers without Indian experience that the following are the conditions which have to be met in India. The rainfall is almost entirely confined to the monsoon months, and

¹ Also, safety flood cuts, paragraph 163, and the double control over outlet aluices, paragraph 215.

is very capricious in amount and intensity. The rest of the year is generally characterised by a total absence of rain, and during this period a fall seldom occurs sufficient to produce replenishment. Constructional work is practically impossible during the rains, and the programme for the execution of the work has therefore to be confined to the seven fair-weather months of the year. Owing to these climatic conditions, and also to the tropical heat and storms, a large amount of storage has to be effected, and a large provision for the safe discharge of floods has to be made.

The labour available is unskilled, and the amount of skilled supervision is limited.

W. L. STRANGE.

SIMLA, Apri/, 1903.

I have to acknowledge the great assistance that I have received from Mr. G. W. Herdman, B.Sc., in the revision of the proofs, and from Mr. Buckley in arranging for the publication of the book.

W. L. S.

PRETORIA, February, 1904.

INDIAN STORAGE RESERVOIRS WITH EARTHEN DAMS.

CHAPTER I.

THE RESERVOIR.

I. SELECTION OF THE SITE.

1. Comparison of Near and Distant Reservoirs.—In respect to their position, reservoirs may be classified as being either near to, (say within 10 miles of), or far from, the area to be irrigated by them. Compared with distant reservoirs, near ones have the following advantages:—It is easier to arrange for regulating the supply of water which is required from them, and generally to manage them, and their supervision can be effected at a cheap rate: they will generally be nearer to markets and to good land for irrigation. They have, however, the following disadvantages:—The country in which they will be situated will generally be of a more open character and will have less pronounced ridges, thus involving greater expense in construction; the land to be submerged will usually be of a higher quality and thus more costly to acquire; and, finally, the rainfall is likely to be less in amount and more uncertain in character, while the proportion which runs off from the catchment area, owing to its more cultivated character and gentler slopes, as a rule will be less.

В

last is the greatest disadvantage, as an assured and ample replenishment is a matter of the first importance.

2. Loss in Transit down Natural Stream Beds.— There is another advantage which near reservoirs possess, and that is that there is less loss of water in transit from them to the headworks of the canals which they supply, and, when these take off immediately from them, there is, of course, no such loss. The loss in transit is due partly to evaporation from the exposed water surface and partly to absorption by the bed of the channel down which the supply flows. What the loss may amount to it is impossible to estimate exactly in the absence of careful experiments, and it is difficult to arrange for these before the works are constructed, as usually water will then not be available during the hot dry season in which afterwards it will have to be passed down. The best method of estimation is to gauge the natural stream at different points as late in the hot weather as possible, and thus to determine the losses between these selected places.

If the supply is to be let down the natural channel of the feeding river, much will depend upon its bed—if that is sandy, the loss may be very great; whereas, if it is rocky, it may be small, as the fissures may naturally be charged with subsoil water, and thus not greatly absorbent. A tortuous channel will increase the loss both by its increased length, leading to increased absorption, and by the increased surface it will offer to evaporation; it will, however, be but rarely that the natural course can be improved at an economical cost, as the improvements made in one year are liable to be injured in the subsequent monsoon.

3. Loss in Transit down Canals.—If the supply is passed down to the irrigated area by an artificial channel, the loss in transit will generally be less than it would be

if the water were let down the river bed, but, in this case, the cost of the connecting works would have to be taken into account. Certain experiments of the loss of water in transit which have been made on canals are detailed in paragraph 24. The loss on canals diminishes greatly after they have been constructed for some time, as their wetted section becomes puddled by silt deposited on it by the water.

4. Selection of the Site of the Dam.—When choosing a site for a dam it should be remembered that generally the longitudinal section determines the cost of the scheme; the sites available for waste-weirs and outlets, its feasibility; and the nature of the reservoir basin, whether open or restricted, the relative cost of storage.

The best site for a dam is usually one which has ridges running down from high land on both sides to the stream to be impounded; such ridges will very greatly reduce the cost, as the section of a dam varies roughly as $2\frac{1}{2}$ times the square of its height (vide paragraph 73); long, low dams are thus frequently cheaper than short, high ones, and are also much safer.

A ridge, moreover, offers facilities for the proper drainage of the dam. The ridge should, however, not be very narrow, for, if it is, it may be liable to leak; may not allow space for the future raising of the embankment, should that ever become necessary; and may also lead to greater cost and difficulty in construction.

It should be seen that the longitudinal section provides proper sites for the outlet, temporary (vide paragraph 134) and permanent waste-weirs, and for "breaching sections" of the dam (vide paragraph 75), at which, in the event of the work being breached, the resulting flood will do the least amount of damage. Generally, the best site is one at which the gorge part of the dam is separated from the

flank embankment by a hillock rising above the level of the top of the dam, as then these portions of the work can be completed independently of each other. This formation is peculiarly suited for composite dams (vide paragraph 54), as the gorge portion can be constructed in masonry, while the flank can be made in embankment.

When the basin of the reservoir is underlain by permeable strata, or when the site of the dam consists of permeable or insecurely-bedded strata, careful geological investigation thereof is necessary, so that, if possible, proper precautions may be taken to remedy these defects, or so that the site may be rejected if the natural conditions are such as will make it dangerous or impracticable to construct the works thereon.

The abundance and proximity of all materials required for construction—such as the proper class of soil for the embankment, water, sand, lime, wood for fuel, and stone for masonry and pitching—should also be taken into account. It is generally not practicable economically to construct an ordinary earthen dam if sufficient good soil does not exist within half a mile of its site.

5. Selection of the Storage Basin.—After a site has been found which satisfies purely replenishment and constructional requirements, its storage capability has next to be ascertained. The cross-sectional slopes of the country can easily be seen by inspection, but the longitudinal slope, which is far more important, may not so readily be ascertainable, as, not only is it much longer, but also it may be concealed by the windings of the valley. It is upon this latter slope that the extent of storage chiefly depends, and the most capacious reservoirs having a moderate cost of storage are generally long and narrow ones. Some excellent ones are shown in plan in Schuyler's book on reservoirs—the reservoir basins in the western

part of the United States appear to be conspicuously good ones.

The longitudinal slope of the basin will generally be similar to that of the river, and any variation of the two can easily be seen by noting the heights of the river banks. The fall of the river in reservoir limits can be determined roughly by an inspection of its pools and rapids; if, however, the river course is tortuous, this fact must be taken into account, as it will then generally have a flatter slope than that of the country. As a rule, the reservoir basin will be found to be flat at the head of rapids in the river, especially if it is of ancient lacustrine origin. longitudinal section of the valley can often be roughly ascertained by an inspection of its topographical map; it will generally be flat if the river is shown to have windings of large curvature; if, however, the river is straight, or has numerous sharp, small bends, its fall is likely to be One of the most favourable sites for a dam is below the junction of two streams, as then storage will be obtained up both their valleys; such a place is frequently an indication of good foundations, (as hard substrata may have deflected the tributary into the main river), and also that the ridge lines on the opposite sides of the valley approach each other. Some engineers, however, consider that the presence of ridges is an indication of former geological disturbance which may have fissured the substrata and thus made them more permeable, and therefore less suited for the foundation of a dam.

The longitudinal slope of the river within the reservoir basin varies in Bombay examples from 2.5 feet to 61.00 feet a mile. In respect to storage capacity, a slope less than 10 feet a mile may be considered a good one; one from 10 feet to 20 feet a mile, a fair one; and one exceeding 20 feet a mile, a poor one. The effect of the longi-

tudinal slope may be modified by the nature of the side slopes of the main valley and by the character of the basins of the tributary streams.

II. THE CATCHMENT AREA.

- 6. Classification of Reservoir Catchments.—Reservoir catchments may be classified into those which are:—
 - (a) Wholly natural;
 - (b) Partly natural, partly artificial;
 - (c) Wholly artificial.

A wholly natural catchment (vide Plate 3) is one which is bounded by a dam, that without the aid of subsidiary works, intercepts all the drainage which replenishes the reservoir. It is, as a rule, the cheapest variety, both in capital cost and annual maintenance.

A partly natural and partly artificial catchment is one where the natural catchment is supplemented by the entire, or partial, artificial diversion of the drainage from neighbouring catchments naturally separated from it. It will generally be dearer in capital cost than (a), unless, which is not often likely, the cost of leading the drainage from the subsidiary into the main catchment is less than the excess expenditure that would be entailed by damming the latter either lower down or at a less favourable site. The cost of its maintenance will almost always be higher than that of (a). Such aided catchments are usually not desirable, except in the case of water-supply schemes, for which the sites for tanks are limited to those in proximity to the population to be served, and for which an assured replenishment in all years is a sine qua non.

A wholly artificial catchment is one where the storage is effected in a basin without any appreciable extent of drainage area of its own, and which has, therefore, entirely to be supplied from a neighbouring area. Should this be arranged for by a channel from a large stream, it will be the safest system to work, as it will be most under control, and, if that stream is one with an ample and unfailing supply, this form will give the most certain replenishment. It will, however, as a rule, be the most costly class to construct and to maintain.

7. Yield from the Catchment.—The yield from a catchment depends upon its size; the nature of the surface, whether hilly or flat, barren or cultivated, treeless or wooded, impermeable or permeable, wet or dry, free from or containing minor reservoirs; the extent, intensity and frequency of the heavy falls of rain, which produce practically all the run-off; and the general conformation of the area and the position it occupies with respect to the direction of the reservoir-filling storms. In regard to the last it may be noted that reservoirs have been known to have bad replenishments because their catchments are to the leeside of ranges of hills, on which side there is but little precipitation.¹ In Appendix 2 are given approximate calculations of the amount of the yield of typical catchments (see also paragraph 16).

The proper replenishment of a reservoir is the most important consideration in connection with it, for, with a deficient or uncertain supply, the utility of the work is diminished. The catchment should, therefore, be of sufficient extent to give the required full storage in an ordinary bad year. It is not necessary that it should be large enough to fill the reservoir during an exceptionally bad famine year, as then even the largest areas, if situated in a drought-stricken country, will probably fail to produce a sufficient replenishment. It may be that a reservoir is

¹ The most notable instance of this is afforded by the Cordillera of the Andes, which shuts off the trade winds from the Pacific littoral for a length of 1,400 miles and a width of from 80 to 100 miles. That area is treeless and without vegetation, except what is grown under irrigation, and is absolutely rainless. On the eastern side of this mountain range the rainfall is of tropical intensity.

not required in years of ordinary rainfall, and, if wrongly placed, may fail in years of drought. Such conditions may best be met by forming the storage in an area where the replenishment in all years is assured, e.g., near the western ghâts in Bombay, and all such areas should certainly be utilised to the greatest extent possible.

On the one hand, there are cases where a moderate amount of storage may be beneficial to a large area of irrigation by providing supply to tide over breaks in the monsoon, and such storage may be obtained in the plains in years of light rainfall, provided the catchment area is of fair extent. On the other hand, as irrigation schemes should be fairly remunerative, excessively large catchment areas should be avoided, as these entail large wasteweirs and involve rapid silting up of the reservoir basin.

8. Partly Natural and Partly Artificial Catchments -Equivalent Catchment Area. -- Reservoirs of class (b) usually depend upon the assistance afforded by intercepting the drainage from subsidiary areas by means of feed It is, however, economically impossible to construct feed channels of any length of a section sufficiently large to carry the whole run-off due to the heavy falls of rain, which are the ones chiefly productive of replenishment. Moreover, with a very large section there is the chance that a considerable portion of the run-off from light showers will be lost in transit by absorption in the bed of the channel. It will, therefore, be generally advisable to design the feed channel of a size sufficient to carry one-eighth of the estimated run-off produced by the downpours of greatest intensity and to calculate on its diverting not more than one-fourth of the whole run-off of the year. By dividing the area of the subsidiary catchment by four and by adding this to the natural catchment is obtained what may be called the "equivalent catchment "of the reservoir. Unless the equivalent catchment of the subsidiary drainage area bears a fair proportion to the natural catchment of the main drainage area, it will not, as a rule, be advisable thus to increase the replenishment of the reservoir. It must always be remembered that these minor areas may have a yield not directly proportional to that of the main one: they may be passed over by the heavy reservoir-filling rain, or may have flatter slopes, or a more absorbent surface than has the main catchment.

Feed channels, from their nature, are peculiarly liable to damage in heavy storms, and may breach during their continuance and thus fail to intercept the run-off. They are further likely to cost an amount for maintenance largely disproportionate to their reservoir-filling value.

In some old native examples channels have been made to serve a double purpose, i.e., as feed channels to increase the replenishment of a tank during the monsoon and, thereafter, as irrigation channels to lead water from it. This is not a desirable practice to follow, as the bed levels will be against it; either the channel will have to head up to a considerable extent at the tail in order to admit the water into the tank, or, the slope of the channel will have to be so flat that flow in either direction can be produced by a moderate amount of heading up at one end or the other. In either case it is probable that a considerable amount of silting will be caused, and that an otherwise unnecessarily large section of the channel and heavy embankments will be required.

9. Subsidiary Reservoirs.—There is another device by which the rainfall of subsidiary catchments may be diverted more effectually into the main reservoir, and that is by forming small tanks where the feed channel crosses the minor streams, thus impounding them. It will suffice

to make these tanks of a capacity only large enough to contain the run-off due to the ordinary maximum daily rainfall, as, during the intervals between falls of rain, their storage can be run down the connecting channel to the main reservoir, and they will thus regain capacity for storing the run-off due to the next fall of rain. system of minor tanks is decidedly better than that of the simple feed channel, as by it practically all the run-off from their catchments in ordinary years may be passed into the main reservoir. Moreover, should the connecting channel be damaged at any time, the supply may be shut off from passing down it until repairs have been effected. However, the capital cost involved by the combined system will generally be greater than that of the simple feed channel, even although the size of the connecting channel of the former is made considerably smaller than the latter, as it should be, by being designed to carry, during intervals between storm replenishments, only the average supply from the subsidiary drainage area.

Occasionally a subsidiary reservoir may have to be formed downstream of a main one and then the working of the system will have to be reversed. Such a subsidiary reservoir should have a capacity sufficient to intercept the run-off due to its catchment during a few days of successive rainfall, and to supply, partly or wholly, the irrigated area during a subsequent break in the monsoon. In this latter time it will be run dry, and thus will be ready to store the next series of replenishments, and, if its capacity is not sufficient to tide over a break, it can be supplemented by supply from the main reservoir. That work would be reserved for this purpose, but chiefly for the requirements of irrigation after the close of the monsoon, as evaporation from it will be relatively less than that from the shallower, subsidiary reservoir.

- 10. Wholly Artificial Catchments.—Reservoirs class (c) will generally be supplied from large rivers, on which will be constructed weirs from which the required discharge will be led by means of connecting channels to the reservoirs. These systems will usually be the most expensive of all to construct, but in certain cases they may be the only ones practicable; in others they may be economical, as the capacity of the reservoirs can then be reduced so as to be only large enough to tide over the period when the natural discharge of the parent streams will not suffice for the requirements of irrigation—the shorter this period, the less the storage required. Such reservoirs are of great utility in insuring the irrigation of perennial crops, which would otherwise be impossible from the natural streams, and will frequently be of much use in vears of deficient rainfall, as the streams which supply them will usually have even then a total run-off sufficient for the area under command if a large proportion of it is impounded during the monsoon.
- 11. Measurement of the Catchment Area.—To determine the catchment area, it will generally suffice to mark the watershed on the topographical maps, and to measure the enclosed drainage area either by ruling squares over it or by means of a planimeter. Where, however, the natural features are undefined on the maps, the watershed line should be marked on the ground by actual inspection and surveyed.

The most exact way of calculating the run-off efficiency of the catchment is to divide it into areas on which, throughout their extent, the rainfall is of uniform amount, and the slopes and general character of the surface are the same. The average yield of each constituent area can then be estimated, and the total calculated average yield will be equal to their sum. It is, however, not usual to work this out in detail, a general rate of run-off being usually estimated for the whole catchment area.

III. RAINFALL AND RUN-OFF.

- 12. Natural Disposal of the Rainfall.—When rain falls on a catchment, a part of it remains on the surface until it is dissipated by evaporation; another part is absorbed by the surface soil or by plant growth and eventually is lost by evaporation; and another part penetrates more deeply and produces springs, (which supply the fair-weather flow of streams), but in India these generally give an insignificant amount of discharge. Finally, another part runs off the surface to the drainage lines; it is this which produces the monsoon flow of streams, and constitutes the large bulk of the supply available for replenishing reservoirs. The proportions in which the total rainfall will thus be disposed of will depend, (as described in paragraph 7), upon the nature of the surface, the intensity and amount of the showers and the intervals at which they occur.
- 13. Variations in Rainfall and Determination of the Run-off therefrom.—In England, where the total annual rainfall does not vary greatly, the following laws have been put forward. "Glaisher's law" is that the average fall of three consecutive years yielding the least fall may be taken as the average minimum fall. "Hawksley's law" is that from the average fall of twenty years one-sixth should be deducted to obtain the average of the three years of minimum fall. These two laws should agree in any selected case.

In India such general rules have not been devised, and, if devised, would probably not hold good owing to the extreme variations that there exist—on the one hand

between famine years, when there may be a very small fall of rain, and, on the other, years of excessive fall, when the precipitation may greatly exceed that during an average year.

In years of deficient fall, to mitigate the effects of which storage reservoirs are chiefly required, not only is the total precipitation small, but the proportion of it which runs off, compared to that of average years, may considerably diminish. The behaviour of each catchment in this respect requires individual study, as each has its local peculiarities, but much may be learnt from that of similarly situated catchments generally resembling the one under consideration. It is therefore highly important in connection with proposed works, to maintain observations relating to this subject on all existing works, and for as long as possible (vide Appendix 2).

For existing works it is easy to measure the total runoff by the replenishment received until the time when the reservoir fills, and this is done in the Bombay Presidency. It is, however, equally, if not more, important to continue the observations throughout the whole year, but this has not usually been done there. In order to determine the run-off during the whole year it will be necessary to ascertain the total discharge passed off by the waste-weir, either by frequent observations of the depth flowing over it, or by obtaining a continuous diagram of these depths by means of a self-recording instrument, such as the "automatic water-level recorder," made by the Glenfield Co., Kilmarnock. From such a diagram another diagram of discharges can be prepared by plotting the rate of discharge corresponding to each depth on the weir crest and the duration of flow, and the total discharge can be ascertained by measuring the area included by this second diagram. Or, a recorder designed to register the amount of the discharge automatically (also made by the same firm) may be used.

For proposed works the total run-off of the year is ascertained by gauging the stream once or twice daily during ordinary flow, and at more frequent intervals during floods, when the level changes rapidly (vide paragraph 46). It is, however, difficult to arrange for such observations at night and during floods of great intensity, and it is therefore advisable to instal automatic discharge recorders in order to obtain more accurate results.

- 14. Necessity for maintaining several Rain-gauges. -To compare the average rainfall on a catchment with the run-off it is not sufficient to maintain a single rain-At the Khás tank in the Satára district, Bombay, the rain-gauge, which is at the site of the dam, records only the minimum precipitation; the maximum fall occurs on that part of the watershed which is situated on the crest of the ghats. The variation between the two is very great, although the catchment is very small (1.97 square miles). The result is that the total annual run-off sometimes exceeds the amount which would be produced were the gauged rainfall uniform over the catchment and wholly to flow off it. Generally speaking, in hilly tracts the rainfall at the dam site is always considerably less than the average fall on the catchment. It is therefore necessary in order to ascertain this average fall, to have numerous rain-gauges properly distributed over the catchment: the number of gauges required depends upon the physical characteristics of the drainage area (vide paragraph 11).
- 15. Examples of the Proportion of Run-off to Rainfall.—A few instances are given below of the percentage of run-off to rainfall.

Observations 1 recorded at Nágpur and at Jubbulpore, in the Central Provinces, showed that in ordinary years the total run-off from a rocky catchment of 5 or 6 square miles was 40 per cent. of the total rainfall. At the Oopahalli tank, in Mysore, the total run-off from 1878 to 1883 varied from 10 to 19 per cent. only of the total rainfall; at the Hulsar tank, at Bangalore, during three years the percentage was 14.

In the Bombay Administration Report of the Public Works Department for 1890—91 is a statement showing the behaviour of the catchments of 19 tanks in the Deccán during the monsoon rainfall, which varied generally from 20 to 30 inches, but fell in some cases to as little as 4 or 5 inches. The 114 observations showed that there were:—

26	cases where	the	flow-off	was less than 10	per cent.
44	,,	,,	,,	between 10 & 20	of the
25	,,	,,	,,	,, 20 & 30 (total
19	,,	,,	,,	above 30	rainfall.

Year.		Catchmo	id Tank. ent Area, . miles.	Catchm	Tank. ent Area, miles.	Ekruk Tank. Catchment Area, 159 sq. miles.	
		Monsoon Rainfall, Inches.	Percent- age of Run-off.	Monsoon Rainfall. Inches.	Percent- age of Run-off.	Monsoon Rainfall. Inches.	Percent- age of Run-off,
1884—85		13.40	9.2 {	Abnor- mally small	3 1.9	20.39	17.8
1885—86 1886—87 1887—88 1888—89	•••	20.01 28.88 27.76 21.00	28·0 15·5 12·1 10·5	28·91 29·21 18·16	24·5 16·5 18·3	27·93 33·05 35·88 24·75	21·5 22·6 33·8 19·8
Average		22.31	14.34	22.24	18.69	28.40	24.04

¹ Buckley's "Irrigation Works in India and Egypt," pp. 63 and 64.

In Bombay it is generally assumed that the run-off will be only 25 per cent. of the monsoon rainfall, when this varies from 20 to 25 inches.

The record of observations on the previous page is taken from the Bombay Irrigation Revenue Reports.¹ These tanks are situated in the "Famine Zone." It will be noticed how small is the run-off percentage; that in a year of abnormally small rainfall it practically vanishes; that the run-off does not vary directly with the total monsoon fall, as it is due principally to individual heavy storms; and that, (owing to their physical peculiarities), the average percentage run-off differs considerably for the three catchments although the average rainfall on them does not vary greatly.

The following record is taken from the report of the Rushikulya project in Madras¹:—

				inadi. 900 sq. mile«.	Ruchikulya. Catchment, 850 sq. miles.		
	Year.		Rainfall of the Year. Inches.	Percentage of Run-off.	Rainfall of the Year. Inches.	Percentage of Run-off.	
1868 1869 1870 1871			44·1 59·6 55·5 43·7	9·6 36·1 59· 5·5 51·3 52·		6·3 31·0 74·2 8·4	
Average		50.43	29.60	49.6	32.2		

The above shows that the percentage of run-off generally decreases with the total annual rainfall, but that it does not always do so. This point is noticed in paragraph 17.

The following table shows the effect of the state of saturation of the ground on the percentage of run-off.

² Ibid., p. 65.

¹ Buckley's "Irrigation Works in India and Egypt," p. 64.

The observations were made on a catchment of about 100 square miles near Calcutta:—

		Percentage of I fall during	Run-off to Rain- the Month.	
Month.		In Years of Ordinary Rain- fall.	In Years of Heavy Rain- fall.	Remarks.
June		5.0	10.0	At end of hot weather.
July	•••	10.0	20.0	
August	•••	25.0	50.0	Monsoon well established.
September	•••	40.0	50.0	
October	•••	40.0	50.0	End of Monsoon.

16. Tabular Statement of Rainfall and Run-off.—Careful experiments were made during the monsoon of 1872 by Mr. (now Sir Alexander) Binnie on the Ambájhari reservoir catchment near Nágpur, in the Central Provinces, and a table of the percentages of run-off to rainfall was published 1 by him. In Appendix 2 is a similar table in which the percentages are given for a regularly ascending scale of rainfall, and under three conditions, viz., of a bad, of an average, and of a good catchment. The results are plotted in the diagram, Plate I.

This classification of catchments relates to their capabilities of producing runs-off, and the figures for a good catchment approximate to those given for Ambájhari. The table is based on general ideas, and it is hoped will prove useful. It would be of great utility were similar tables constructed by engineers for different actual catchments. The general result to be noticed from this table is that in years of deficient rainfall the percentage of run-off rapidly diminishes, so that, on account of the smallness both of the fall and of the percentage of run-off, the replenishment of a reservoir in such years is very small

[&]quot; Minutes of Proceedings, Inst. C. E.," Vol. xxxix.

when compared with that in a year of good rainfall, or even in one of average fall.

17. The Effect of the Intensity of the Rainfall and the Saturation of the Ground on the Run-off.—The chief defect of such a table is that it is based on the annual fall, and not on the intensity and amount of the individual showers of rain which actually produced the run-off, and the condition of the catchment when those showers fell. Thus, considering the same catchment, two years with identically the same total rainfall may produce replenishments of greatly differing amount. It is evident that if the total rainfall is fairly distributed over sixty days it will produce much less run-off than if it fell during thirty days, and still less than if it occurred during only fifteen The proper way, therefore, is to take into account the intensity, or rate of precipitation, and the amount of the individual falls of reservoir-filling rain. It would be best to consider the hourly intensity, but, as this is seldom recorded, the daily intensity may, in default, be taken. A great advantage of automatic over ordinary rain-gauges is that they record the rate, as well as the amount, of the rainfall.

The intensity of the rainfall is not, however, the sole factor which determines the rate of run-off. Cases have been known where even heavy falls of rain at the beginning of the monsoon, or after long breaks in it, when the surface was dry and absorbent, have not produced any run-off whatever, while falls of the same or of less amount, when the soil was saturated, have caused floods. It is evident, therefore, that the degree of saturation of the surface must also be taken into account when estimating the proportion which the run-off will bear to the rainfall.

18. Tabular Statement of Daily Runs-off.—As far as is known, careful observations of this latter effect have not

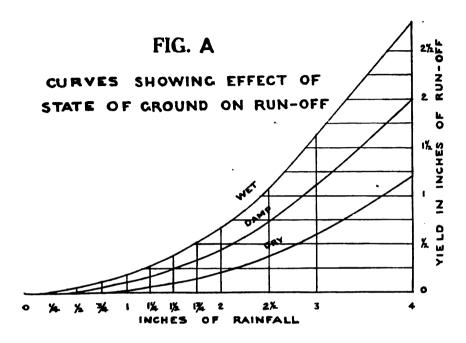


TABLE OF DAILY RUNS-OFF.

I	2		3	1	4					
	Run-off Per	Run-off Percentage and Yield when the original state of the ground was								
Daily Rainfall in inches.	Di	ry.	Da	mp.	Wet.					
	Per- centage.	Yield in inches.	Per- centage.	Yield in inches.	Per- centage.	Yield in inches.				
0.52		_			8	0.03				
0.20		_	6	0.03	12	0.06				
0.75	-	l —	8	0.06	16	0.13				
1.00	3 5 6	0'03	11	0.11	18	0.18				
1.22	5	0.06	14	0.12	22	0.58				
1.20	6	0.00	16	0.24	25	0.38				
1.75	8	0.12	19	0.33	30	0.25				
2.00	10	0.31	22	0.44	34	0.67				
2.20	15	0.38	29	0.73	43	1.08				
3.00	20	0.60	37	1.13	55	1.62				
4.00	30	1.50	50	2.00	70	2.80				

been recorded. The percentages of run-off will of course vary with the other conditions of the catchment, but the table on p. 19 is given as a rough approximation of what may be expected from an ordinary drainage area. The percentages will increase with a good, and diminish with a bad, one.

In this table, the percentages of run-off from wet surfaces, compared with those from dry surfaces, are proportionately greater for light falls than they are for heavy falls. In the case of the latter class, the surfaces originally dry will have become saturated before the heavy falls have ceased, and the conditions producing run-off from both states of surface will thus be more alike. Compared with each other, the percentages of run-off from each state of the ground increase directly with the intensity of the rainfall. The defect of the table is that it takes into account the daily, and not the hourly, intensity of the rainfall. However, as explained in paragraph 17, it is the former which is generally observed.

19. Estimation of the Run-off from the Daily Rainfall.—The proper way to estimate the run-off, in the absence of observations of it, will be to proceed on the lines of the above table, and, if a few discharge observations have been taken, to construct the table with reference to them. If the rainfall for a series of years is thus dealt with, a very fair idea can be obtained of the sufficiency, or not, of a catchment. If it is thus ascertained that during years of average rainfall the tank will probably fill, and that in years of scanty rainfall, not amounting to absolute deficiency, there will be a fair replenishment, the catchment may be considered a sufficiently large one. As such a determination will be based on estimates of the percentages of run-off, care should be taken not to over-estimate them.

Another way of estimating the sufficiency of a catchment is to take, for a series of years, the average annual amount of the heavy falls of rain, each exceeding one inch (excluding years both of excessive and of greatly deficient precipitation, and falls which occurred when the ground was dry), and to apply a general percentage for run-off to this. If the result shows that the catchment is likely to produce the required replenishment, it may be accepted as sufficiently large. This method is less laborious than the former one, but, in proportion to its diminished detail, is less likely to be accurate.

Such estimates are but approximations, and should be resorted to only in the absence of actual discharge observa-It is a matter of the first importance to have such observations for as many years as possible, and, therefore, whenever practicable a large scheme should not be proceeded with until a record of at least ten years has been obtained. Of course, where they exist, the results of observations for other similar and similarly situated catchments may be utilised to diminish the period of examination. Even when this can be done, it is advisable for large schemes to institute comparative, concurrent observations of the run-off of the catchments to be dealt with, with those for which observations have already been recorded, so as to determine what factor should be applied to the previous results of the latter to enable them to be utilised for the former.

IV. THE STORAGE CAPACITY OF RESERVOIRS.

20. Proportion of the Storage Capacity to the Yield from the Catchment.—It is necessary to determine the storage capacity of a reservoir by reference chiefly to the run-off from the catchment which can be impounded, as,

in the large majority of cases, the area which can be commanded will be in excess of that which can be irrigated by the scheme. Where this is not the case and the area of irrigable land is limited, its extent has also to be taken into account in the manner described in paragraph 26.

It will be best to limit the storage capacity to that which can be replenished in an ordinary year, as it is desirable in irrigation from reservoirs that the irrigated area should not greatly fluctuate. If that capacity is made much greater than this, it will be only in good years that the reservoir will fill, and, in all other years, there will be a certain amount of unproductive capital expenditure due to the increased size of the works beyond the requirements of the then storage. A small increase of storage in excess of the average amount of replenishment, i.e., one not exceeding 10 per cent., is, however, desirable to compensate for the reduction of capacity that will occur by the silting up of the tank basin. The future need not be much anticipated in this respect, as the original amount of storage, when greatly reduced by silting, may be restored by raising the full-supply level and the height of the dam above it. It is, moreover, not desirable at first to incur much increase of capital expenditure on this account as it will be unproductive for many years. A slight increase of storage may, however, be advisable to provide for a possible under-estimation of the run-off, and so as to take advantage of years of good replenishment.

If the storage capacity is originally made much less than the average replenishment, there may be a diminished rate of return on the capital expenditure on the work, as the cost of storage per million cubic feet usually decreases with an increase of storage. There will also be an increase in the proportion of silt deposited to storage impounded. If monsoon irrigation is to be practised under a reservoir, the quantity of water required for it should be taken into account. The catchment will in this case produce a certain amount of replenishment, of which part will be expended during the monsoon, and the size of the reservoir should therefore be limited so as to store only the remainder.

21. Calculation of Storage Capacity.—The calculation of the storage contents of a reservoir is made by summing up the contents between each of its contours. The formula to be used for this is:—

$$Q = \frac{H}{3} (A + a + \sqrt{A \times a}),$$

where Q is the storage in cubic feet;

A, the area of a contour in square feet;

a, that of the adjacent contour in square feet; and H, the vertical distance between the contours in feet.

Although it is unnecessary that contours should be surveyed at small vertical distances apart, the calculation of the storage will be more exact if such contours are taken into account. The general practice is to survey them at vertical differences of 10 feet and by calculation to interpolate others at 1 foot intervals. To determine the areas of these interpolated contours, it is usual to take the square roots of the surveyed contours and to consider that the square roots of the interpolated ones vary in exact proportion to their vertical distances apart from the others. A calculation of the capacity of a reservoir is given in Appendix 17, and this shows the method followed in ascertaining the areas of the interpolated contours and the storage contents between them.

In determining the total storage capacity of a reservoir, it is not usual to add the further capacity due to the

excavation of the borrow pits which furnish material for the dam. The contents of these will be very small relatively to the amount of natural storage, and, in respect to the capacity available for irrigation, will be still smaller, as a large proportion of them will be below outlet sill level.

From the gross capacity of the reservoir has to be deducted the storage below outlet sill level, as this cannot be utilised for irrigation except by pumping, which, in practically all cases, is too expensive a measure to which to resort. The balance storage—the quantity above outlet sill level—is known as the "gross available capacity." and this is all that can be taken into account when determining the irrigating capability of the reservoir. it is not likely in most cases that the storage will fall below outlet sill level before the commencement of the monsoon, it will generally be quite safe to take only this "gross available capacity" into account when considering the total amount of probable replenishment. After the reservoir has been drawn down to a little above the fullsupply level of the canal from it, the rate of discharge of the canal will necessarily be reduced, but then, anyhow, economy in utilising that discharge will have to be practised. In the last resort the water from the reservoir can be lifted to supply the canal, and hence all the contents of the tank down to outlet sill level may be taken as "gross available capacity."

22. Loss by Evaporation and Absorption in Reservoirs.—In order to ascertain the irrigating capability of a reservoir, it is necessary to deduct from its "gross available capacity" an allowance for evaporation and absorption. The total loss on these accounts can be measured by noting the total fall of the reservoir surface, and by deducting from the loss of storage thus indicated

the actual, measured amount utilised for irrigation. separate estimation of the amount of loss due to each of these causes is not so easy to determine. The loss due to evaporation in an experimental cistern can, of course, be easily measured, but this will be due solely to the effect of the temperature of the air on the surface of the water and on the sides of the cistern, which sides, of course, introduce an artificial condition. In the case of a large body of water, such as a reservoir, the amount of evaporation, however, greatly depends also upon the drying effect of wind, (producing waves and spray), which will not materially affect the contents of a small cistern, and cannot therefore be ascertained by its use. reason it is usual to take together the amounts of the losses due to both evaporation and absorption. respect to evaporation alone, the loss will be in direct ratio to the dryness and velocity of the air and to the area of the water surface, and will be in inverse ratio to the depth, as the temperature of shallow water is always higher in the tropics than that of deep water.

The loss due to absorption alone depends upon the nature of the bed of the reservoir basin and the depth of the storage. It will increase with the porosity of the underlying strata, and with the pressure due to the depth of water. In ordinary cases, and more especially after some years when the bed of the reservoir has become waterproofed by the deposit of silt, the loss from absorption will generally be much less than that from evaporation; hence deep reservoirs, which present a comparatively small surface, will usually suffer less total loss on these accounts than will shallow ones. In the case of porous basins the loss by absorption will to some extent be diminished by springs feeding the reservoir from its margin, which will generally be equally porous.

In the loss by absorption is included the loss by leakage under the dam, to reduce which a puddle trench is formed under the embankment. This loss should be comparatively very small.

The total loss will depend upon the time that these causes act on the storage, and will vary with the season. During an ordinary monsoon, as the air is then charged with moisture and is fairly cool, there would be comparatively little evaporation but for the fact that then the wind for many days blows with violence and thus causes a good deal of it to take place. In this period, however, the rainfall which falls on the water surface of the reservoir will be wholly impounded, and this should fully make up for the evaporation which then takes place, as in the runoff calculations it is not usual to consider the area of the tank separately from that of the rest of the catchment, from which the run-off is only a fraction of the rainfall.

In the cold weather evaporation will not be great, as, not only will the temperature then be low, but there will generally be an absence of high winds. In the hot weather, when the temperature rises, and hot, dry winds of considerable velocity may be expected, the loss will be at a maximum, and may amount to as much as 0.4^{-1} inch a day.

23. Observations of Loss by Evaporation and Absorption in Reservoirs.—The table on p. 27 records some observations of the amount of loss that have been made.

In Madras the S.W. monsoon (June to September) does not produce much rainfall and the temperature is then high; there most of the rainfall occurs during the N.E. monsoon (October to January) which takes place in the cold weather—that season is, however, much warmer there than it is in the more northerly parts of India.

Buckley's "Irrigation Works in India and Egypt," p. 65,

S.W. Monsoon.			Cold Wea	Hot Weather.					
Month.	No. of years ob- served.	Loss in inches.	Month.	No. of years ob- served.	Loss in inches.	Month		No. of years ob- served.	Loss in inches,
uly	4	0.33	November	1	0.27	March	 -	5	0.56
August		0.35	December	2	0.13	April	• • •	5	0 30
September	I	0 38	January	4	0.24	May		5	0 37
October	I	0.27	February	2	0 24	June	•••	4	0 30

1 AVERAGE DAILY LOSS IN THE RED HILL TANK, NEAR MADRAS.

The average daily loss throughout the year was found to be 0.28 inch and the annual loss, 8.39 feet; this large amount seems to indicate that there was much loss by absorption. The heaviest rainfall is in October and November, when it varies from 10 to 13 inches each month.

In the Ekruk tank, near Sholapur, Bombay Presidency, the loss from evaporation and absorption from April 17th to May 29th, the hottest part of the year, averaged 0.384 inch a day, while the similar loss, increased by some leakage, during November to March averaged 0.232 inch a day.

The loss 1 in tanks in Rajputana is given by Mr. W. W. Culcheth as follows:—

5	Average daily loss in inches.				
Season.	Evaporation.	Absorption.	Total.		
During the irrigation season, October					
to March	0.12	0.02	0.30		
During the hot season, April to June During the rainy season, July to	0.50	0.12	0.46		
September	0.31	0.50	0.41		
Average of the year	0.30	0.13	0.35		

⁴ Buckley's "Irrigation Works in India and Egypt," p. 66.

The soil was porous, and yet the loss from absorption was considerably less than that from evaporation; the former loss is irregular in amount, and it was probably difficult, as explained before, to measure it exactly. The total loss in the year is given as 9.77 feet, of which it is said 6.11 feet was from evaporation and 3.66 feet was from absorption. These figures are unusually high.

In the Páshán tank, near Poona, the average daily loss, from evaporation alone, was in inches:—

 October.
 November.
 December.
 January.
 February.
 March.
 April.
 May.

 0.25
 0.19
 0.14
 0.17
 0.14
 0.17
 0.27
 0.38

During these eight fair-weather months, the total loss was 4.33 feet.

The usual allowance made in Bombay projects for all losses is 4 feet, measured on the mean area of the tank, although, in some cases, it has been taken as low as 3 feet. and, in others, as high as 7 feet (vide Appendix 1). the surface contour areas of a reservoir in Bombay are largest during the monsoon when evaporation is little, and are smallest during the hot weather when evaporation is great, the estimate of the total amount of loss during the year, which is arrived at from an assumed vertical depth on the mean area of a reservoir, is equal to a greater vertical depth of evaporation on the actual contour areas exposed during the different seasons. Moreover, as stated in paragraph 22, credit is not taken for the extra amount of the yield of the rain falling on the surface of the reservoir, and this may be considered as a reduction of so much loss by evaporation.

If it is desired to make a detailed estimate of the amount of evaporation, the following may be taken as

the average monthly loss during the principal seasons of the year:—

Cold weather .. 3 ins.—total for four months .. 12 ins. Hot weather .. 8 ins. ,, ,, ,, .. 32 ins. Monsoon .. 4 ins. ,, ,, .. 16 ins.

Total for year .. 5 feet, or 60 ins.

It will be seen from the above that for irrigation schemes it is not economical to store water for two years, as the loss from natural causes during so long a period will amount to a very large proportion of the total storage. It would be far better, both for Government and the cultivators, to utilise in one season the full supply available, so as to sustain only one year's loss by evaporation and absorption. The money value of the quantity of water which would thus be lost by storage for irrigation for a second year is considerable, and such storage would, moreover, be rendered unnecessary (at least temporarily) by a good replenishment during the second year. Storage to tide over a second year with bad replenishment is justifiable only in the case of a reservoir for the waterworks of a town, as for that a continuous supply must be secured even at the increased cost of a capacity larger than is required for the wants of a single year.

- 24. Observations of Loss by Evaporation and Absorption in Canals.¹—As feed channels have to be made in connection with some reservoirs, the following results of the observations of loss on certain canals are given:—
- (a) The Háthmathi Canal, Ahmedabad district, Bombay, with an ordinary discharge varying from 20 to 100 and

¹ Buckley's "Irrigation Works in India and Egypt," pp. 68 and 69.

a maximum discharge of 191 cusecs, is estimated to lose 50 per cent. of its discharge in the first 10 miles of its course.

- (b) The Nirá Canal, in the Poona district, Bombay, with a head discharge of 455 cusecs and a length of 101 miles, has been gauged to lose 1 cusec a mile, or, altogether, 22 per cent. of the initial supply.
- (c) The Muthá Canal, also in the Poona district, with a maximum discharge of 412 cusecs, loses from 0.8 to 0.9 cusec a mile.
- (d) The Patna Canal, Bengal, having a bed-width of 69 feet and an average depth of about 6 feet, had a gauged loss of 40 cusecs in a length of 7 miles when it was new. The rate of loss has decreased greatly since the canal has silted.
- (e) On the Bári Doab Canal, in the Punjab, after the canal had been open for from sixteen to eighteen years, the following gaugings were made 1:—

		Upper Gauge.		Lower Gauge.		Loss.		
Section of Canal.	Date of Observa- tion.	Mean velocity,	Dis- charge in	Mean velocity,	Dis- charge in	Dis- charge in	Percentage.	
		ft. per cusecs.		ft. per sec.	cusecs.	cusecs.	Total.	Per mile.
Between Mad-	March 1st and 2nd May 26th	-	2,009	2.68	1,728	281	14.0	0.32
hopur and Chandeki, 52	and 27th May 28th	4'44	2,142	2.03	1,874	268	12.2	0°24
miles apart	and 29th June 9th	4'33	2,036	2.79	1,789	247	12.1	0.53
Between Hib-	and toth	4'44	2,165	2.77	1,874	291	13.2	0.50
ban and Gan- dian, 63 miles	July 31st	_	289.4	_	243*2	46.3	15'9	0.52
apart.	August 2nd	_	384'3	_	29814	85*9	22'4	0.32

When such observations are to be taken, a canal should be made to have a constant discharge for a few days before

¹ Buckley's "Irrigation Works in India and Egypt," p. 69.

and during the time of the gauging, so that its perimeter may be thoroughly wetted (in order that excess absorption may be prevented), and during that time all distributaries should be closed and all excess leakage should be cut off.

As in reservoirs so in canals, the total loss is due to the combined effects of evaporation and absorption. The amount evaporated will depend upon the temperature, dryness of the air and the velocity of the wind. The loss by absorption will vary with the porosity of the strata passed through, and will usually diminish as the canal gradually puddles its wetted perimeter by the deposit of silt on it. The usual allowance in Northern India for the total loss is 8 cusecs per million square feet of wetted perimeter; the surface area of the water is there not taken into account.

25. Comparative Cost of Storage.—In comparing the relative costs ("works" charges only) of storage of different schemes, the rates of storage per million cubic feet of "gross available capacity," and not of "gross storage," should be taken into account, because for the purposes of irrigation the storage below outlet level is useless. A more exact comparison would be made if also the amount of loss by evaporation and absorption were deducted from the available capacity. This is, however, never done, because its amount is not known exactly but has to be estimated; moreover, it will vary with the way in which the storage is expended, being least when the contents of the reservoir are drawn on extensively in the early part of the season.

This comparison of rates of storage is a most valuable one, as from it can be seen at once if a scheme is likely to be a remunerative one or not. In Bombay, where the rate of earthwork varies from about Rs. 1.2.0 per 100 cft.

in small dams to about Rs. 1.8.0 in large dams, the following would be considered fair rates of storage for—

	Mill. cft.	Rs. per mill. cft. available capacity.
Small reservoirs storing less than	200	750
Medium reservoirs storing from 200 to	1,000	500
Large reservoirs storing more than	1,000	400 to 300

- 26. Estimate of the Storage required for a certain Irrigable Area.—In some cases there may be a definite area to be irrigated, either wholly by the storage impounded in a reservoir, or, partly, by the natural discharge of a stream and, partly, by storage, and the amount of the storage required has to be determined. typical calculation to determine this is given in Appendix 3. In this case a full-supply storage is assumed at first and the effect of the draw-off from the reservoir is worked out. If this shows a deficiency of supply, the maximum amount of deficiency should be added to the assumed storage, and to this should be added proper allowances for evaporation and absorption and loss in transit down the feed channel to give the required amount of storage. If the reservoir with the storage originally assumed shows an excess supply, the amount of the excess should be deducted from it before adding the allowances mentioned above.
- 27. Estimate of Expenditure from Storage—Duration of Supply.—The expenditure of water from a reservoir should be regulated as carefully as expenditure of money, for, otherwise, the storage may not suffice till the monsoon of the next year restores it. For this purpose an estimate of draw-off, &c., should be made, as given in the example in Appendix 4, and as explained in the notes appended to it, and the calculated rate of draw-off should not be allowed to be exceeded.

In Appendix 5 is given another estimate of the duration of a water-supply storage, and the method of its calculation is explained therein.

28. Preliminary Estimate of the Cost of a Storage Reservoir.—Before drawing out a scheme in detail, it is necessary to ascertain approximately if it will, or will not, be financially remunerative. The cost of a reservoir depends chiefly upon that of the dam, and this can be estimated roughly and quickly from the longitudinal section. To it have to be added the costs of the outlet, waste-weir and land compensation, which can be taken out either approximately and independently, or with reference to the rough estimate of the dam, or can be arrived at from the cost of similar existing works.

The following table shows the comparative total costs of the subworks, &c., of twenty completed projects with earthen dams in the Bombay Presidency (vide Appendix 1). It will form a guide as to the amounts which the subworks of a contemplated project should cost.

· I	2	3	4
Subwork.	Total Cost in 20 Projects. Rs.	General Per- centage Cost of Subwork of Total Cost.	General Per- centage Cost of Subwork of Cost of Dam.
1. Dam	33,70,028 2,33,473 4,08,654 3,11,218	77 [.] 95 5 [.] 40 9 [.] 45 7 [.] 20	100·00 6·93 12·12 9·23
5. Total	43,23,373	100.00	128.28

The total cost of the individual projects varied from Rs. 30,732 to Rs. 9,43,421: 7 works cost under Rs.1 lakh each; 9 works, from Rs.1 to Rs.3 lakhs each; and 4 works cost over Rs.3 lakhs each.

In the table, col. 3 gives the general percentage cost of I.R.

each subwork of the total cost of the projects, and col. 4, that of the total cost of the dams alone.

The capacity of the reservoir having been ascertained, the approximate rate of storage per million cubic feet can thus be found out. The rate due to the canal and distributing works will then have to be added, the total cost of these being deduced from that of existing projects. The approximate net return from one million cubic feet of storage can be estimated as shown in Appendix 7, and it can then be seen if this is sufficient to produce a proper return on the expenditure.

V. IRRIGATIONAL CONSIDERATIONS.

29. The Amount of Storage dependent upon the "Duty."—In order to ascertain the quantity of storage required in a reservoir to irrigate a certain area, or, vice versa, the extent of the area which can be irrigated by a certain amount of storage, it is necessary to know first what is the irrigational "duty" of the different classes of crops. One way of defining "duty" is to take it as the acreage which can be brought to maturity by the constant flow, during the season the crop is on the ground, of one cubic foot of water a second. By this definition a "duty" of 100 acres means that one cubic foot a second will suffice for maturing that area of crop. The definition refers only to the rate of irrigation and not to the total quantity of water required (as it does not take the element of time directly into consideration) and it assumes that the rate of supply is constant throughout the whole period of cultivation, which, however, is not the case.

Another way of reckoning the "duty" is to consider the average depth of water poured over the area during the whole irrigation season: in Northern India this depth is called "delta," or Δ , and the efficiency of irrigation thus varies inversely with Δ . A similar method is to express the duty in terms of "acre feet"; an "acre foot" is the volume of water standing one foot deep on an acre of land. The number of "acre feet" utilised in irrigation is the area in acres irrigated multiplied by the average depth of the water poured on to it: this quantity in cubic feet is found by multiplying the number of "acre feet" by 43,560, the number of square feet in an acre (vide Appendix 25).

A third way of stating the "duty" is with reference to the number of acres which can be irrigated by the storage of one million cubic feet of water. Thus a reservoir will have a "duty" of 4 acres per million cubic feet if the crops on that area can be brought to maturity by applying to them a million cubic feet of stored water (vide Appendix 7).

The "duty," in whichever of the three ways it is reckoned, depends upon where the measurement of the water is taken, i.e., at the source of supply or at the head of the irrigated area. It has been estimated that only between 50 and 60 per cent. of the water which enters a canal actually reaches the fields. The greater the "duty," the larger the irrigated area.

Appendix 6, Table I., gives the duties which have been obtained during some non-famine years on certain irrigation works in India supplied by reservoirs and canals. It will be seen from this that the duties vary greatly, and that the main general result is that they are smaller on works dependent upon reservoirs than on those that are served by canals without artificial storage. This is due to the fact that the country in the neighbourhood of reservoirs is generally of a more irregular nature, and the area under irrigation by them is less concentrated, than

is the case in the alluvial tracts irrigated from canals without storage.

Appendix 6, Table II., gives the duties which have been obtained during some non-famine years on certain irrigation works in Bombay (Deccán). These also vary considerably owing to local peculiarities; the main general result is that the kharif duties are higher than the rabi ones; this is probably due to the rainfall, which is practically limited to the former season.

To determine the amount of storage required, it is best to ascertain the duties obtained from constructed works in the neighbourhood, but, where this information is not available, it will be necessary to estimate, or assume, them. As a general estimate it may be assumed that under reservoirs the following will be the average duties when irrigation is fully established:—

Rice, 40; monsoon dry crops, 160; rabi crops, 120; perennial crops, 100; and hot weather crops, 60 acres per cusec (vide Appendix 7 (1)).

Area under Command.—Owing to the expense of, and soil exhaustion produced by, irrigation, it is not likely that the whole culturable area commanded by a reservoir will be irrigated. Appendix 6, Table III., shows the actual results obtained on irrigation works in the Bombay Presidency (Deccán). During the latest years therein recorded the percentage of the irrigated to the culturable area under command was 38.9, but, as on these works the land at the tail of the systems had generally not been brought under command, and, as the proportion irrigated there will be less than it will be at the head, it will be safer to assume that not more than one-quarter of the culturable land under command will eventually be irrigated annually by a reservoir.

On the great canal systems of Northern India, in certain tracts where water-logging and consequent salt efflorescence have to be prevented, the percentage of irrigated area has to be restricted, rather than increased. It has been decided that, in the area served by the Chenáb Canal. as long as the spring level is more than 40 feet below the surface, the limit of the percentage of irrigated to culturable area may be 50, but, as the water level rises the limit is to be reduced, until when the subsoil saturation plane is within 10 to 15 feet of the surface, irrigation is to be stopped altogether. On lands irrigated by reservoirs where the surface of the ground is generally not uniform in level and is intersected by numerous well-defined drainage lines, such water-logging is rarely to be feared or guarded against, but still cases of it have there occurred. The remedy to be applied is the proper drainage of the area affected.

- 31. The Proportions of different Crops under Irrigation.—To estimate the revenue probable from a work it will also be necessary to take into account the proportions in which the different crops are likely to be irrigated, as the quantities of water required for them and the assessments on them vary. The factors which determine these proportions are:—
 - (a) The suitability of the soil and climate;
 - (b) The sufficiency of the water supply;
 - (c) The market prices of the produce.

Of these (a) are fairly constant; (b) should, as far as practicable, be made constant by good arrangements; but (c) is beyond local control, and variations due to it must be accepted as not preventable.

¹ "Recent Developments in Punjab Irrigation," by Sidney Preston, C.I.E., "Journal of the Society of Arts," Vol. i., No. 2,584, May 30th, 1902, p. 607.

Appendix 6, Table IV., shows the average results obtained during certain years on certain works in Bombay (Deccán). It is best to take into account the results of neighbouring works situated under like conditions to the project under preparation, but, where such works do not exist, it will be fairly correct to assume that the following percentages of crops will be irrigated:—

Perennial and hot weathe	r	20 \	
Rabi		20	Matal 100
Rabi Monsoon dry		40	10tai 100.
Eight months			

(Vide Appendix 6, Table IVA.)

32. The Rotation of Crops.—The above percentages indicate that a system of quinquennial rotation is practised under the recently established Bombay irrigation tanks, namely two years of monsoon dry to one year of each of the other classes of crops. This is the lowest form of rotation, while triennial rotation—perennial, eight months, and rabi crops—is the highest. Rotation is necessary to secure restoration of fertility to the soil, which would, without it and artificial help from manures, soon become exhausted if constantly irrigated by stored water, as this is practically devoid of fertilising silt. rotation should, however, be as high as possible, for the revenue and value of the produce chiefly depend upon the proportion of the perennial crops to the whole area under irrigation (vide Appendix 7 (3)).

VI. RESERVOIR BASINS.

33. The Proportion of the Submerged Culturable Area to the Area Irrigable by the Project.—The storage of water in a reservoir involves the submergence of the land in its basin, and this, in the majority of

cases, renders it unculturable. If the catchment area is rocky, the bed of the reservoir will in time become covered with a layer of sandy material, which is unsuited to cultivation. If, however, the drainage area is of soil, the bed will eventually be covered with fertile silt. which may render it better fitted for agriculture than it was originally; but, even in this case, it will at first be too damp to plough, and may subsequently cake in drying, so that crops cannot be grown on it. Moreover, the bed may not be laid dry until the cultivating season has passed. Generally only shallow tanks, the contents of which are expended during the monsoon, can have their beds cultivated, and that can be done chiefly in the rabi season. It may thus be said that the construction of a reservoir usually throws the submerged area permanently out of cultivation: much of this owing to its situation in a valley may originally have been very fertile. It is therefore necessary that this area. when culturable, should be as limited in extent as possible, for the land to be served by the work may not always be irrigated, and, if the submerged culturable area bears a large proportion to it, there may not be. in a series of years, a substantial increase of cultivation compared with that which existed before the construction of the project. This argument, of course, applies only to culturable land, or land which can be cultivated, as waste lands, except so far as they are useful for grazing, need not be taken into account in this connection. Moreover, in regard to the culturable land, it has to be remembered that its produce will be largely increased by irrigation. Speaking generally, the culturable area in a reservoir basin should not exceed one-fifth of that which can be irrigated by the work. In newly settled countries, especially, it is desirable to obtain favourable basins for storage before the areas are occupied and become too valuable for acquisition.

For this reason deep reservoirs, which occupy little land compared with the quantity of their storage, are to be preferred to shallow ones. The former have the added advantage that, as they have a comparatively small surface area, the loss by evaporation from them will be at a minimum. In this respect the best storage basins are those which open out immediately behind the dam, as this part of their area has the greatest depth of water over it. The slopes of the country near the dam should preferably be flat ones, but it is not of so much importance that those at the head of the reservoir should be gentle, as there the depth of water will be shallow.

- 34. The Retentiveness of the Reservoir Basin.—It is necessary for economical storage that the bed of the basin should be of a retentive nature, so that the loss by absorption may be minimised as much as possible. It is true that the longer the tank is in use, the more will it be water-proofed by the deposit of silt on its bed; but this silt is itself naturally porous, owing to its recent deposition and want of consolidation by pressure, and it is therefore best to start with naturally retentive substrata. Moreover, if a large area of the tank bed is annually laid dry, the overlying silt will absorb an appreciable amount of storage. The most retentive basins are those with deep, clayey, alluvial beds, and the least retentive are those with vertical and fissured strata.
- 35. The Extent and the Utilisation of the Land to be acquired.—When land has to be acquired for a reservoir, it should be taken up at least to high-flood level, as otherwise the submergence during floods of marginal crops may lead to their destruction and to

claims for the payment of compensation. In fact, if the land is cheap, it should be acquired originally to a slightly higher level to permit of the future increase of the storage being obtained without having subsequently to pay extravagantly for the marginal land, which may, by that time, have become increased in value, either from natural circumstances, or through advantage being taken by its proprietors of the necessity for its purchase. The limits of the acquired land should at once be permanently marked by boundary stones, the positions of which with reference to the ordinary field survey marks should be off-setted and recorded on the maps and in tabular statements.

In order to render the acquired marginal land as productive as possible, it should be planted out at once with trees, as the young plantations can best be watched while the construction of the works is in progress. Bamboos and trees which flourish in damp situations should be planted in the zone next full-supply level, and fruit-bearing trees, which will produce an annual revenue, should be reared in solid blocks near the dam, where they can most easily be guarded. The rest of the area should be devoted to less valuable trees, which can be cut down periodically for timber or fuel.

Reservoir irrigation exhausts the land very much, as the supply from storage is nearly clear and devoid of most of the fertilising silt which is suspended in the water of canals fed by perennial rivers flowing through alluvial soils. In order to develop such irrigation it is necessary that there should be a plentiful supply of manure, and, as in India manure is much used for fuel, it is most desirable to establish fuel plantations to set this artificial soil-stimulant free for agricultural purposes.

The reservoir plantations recommended will serve usefully for this purpose. Other plantations can be formed with advantage on waste lands commanded by the canal.

VII. THE SILTING OF RESERVOIR BEDS.

36. The Necessity and the Methods for the Reduction of Silt Deposit.—As noted in paragraph 34, the silting of reservoir beds has the advantage of making them more retentive, but it has also the disadvantage of reducing the storage capacity, which is a result far outweighing the former one. It is not economically practicable to remove this silt by any artificial means, as the cost of storage is very small compared with that of any system of excavation. For this reason it is desirable to diminish the accumulation of silt by choosing a bare or rocky catchment, which will not produce much deposit, and one with a certain replenishment, which will not necessitate an increased catchment area to insure a full storage in bad years, as, under ordinary conditions, the water which enters a reservoir will deposit practically all its silt in the basin.

The most heavily silt-laden floods are those which come early in the monsoon, as they carry down with them the soil which has been desiccated and loosened during the preceding fair season. The best way of dealing with the silt difficulty is to pass these early discharges out of the reservoir as rapidly as possible by means of outlets with large discharging power. The amount of replenishment due to these floods can, however, be foregone only in cases where the subsequent run-off is sufficient to ensure the filling of the reservoir. Such reduction of silt can best be effected when it is necessary to impound only the clear-water flow subsequent to the

close of the monsoon: an example of this treatment is furnished by the large Assuan reservoir on the Nile.¹

Probably the simplest method of removing part of the silt which is practicable in India is to plough the dry bed of the reservoir as early as possible so as to loosen and desiccate its surface. The scouring action of the rain will carry some of this silt into the pool at the bottom of the tank basin, and it can thence be discharged through the outlet. With a similar object in view, the deposit for a short distance round the margin of this pool may also be moved closer to it by means of scrapers.

- 37. The Classification of Silt.—The deposit in reservoirs may be divided into three classes:—
- 1. Heavy detritus, consisting of stones, pebbles, and large sand;
- 2. Heavy silt, consisting of fine sand and coarse earthy matter which is deposited in a few days;
- 3. Fine silt, consisting of flocculent earthy matter which is held in suspension for many days.

The first class is deposited directly the velocity of the inflow is checked by its entry into the reservoir pool, and will thus be found along the beds of the feeding streams, and particularly at the head of the reservoir. If the outlet is kept open for some time in the early part of the monsoon and so as to give a large discharge, the deposits of the previous years may gradually be moved forward towards the dam, and a part of them may eventually be swept through the outlet, but the proportion thus disposed of will generally be very small compared with the total quantity deposited.

The second class, being originally distributed uniformly throughout the contents of the reservoir, will be deposited in direct proportion to the depth of the storage, and its

^{1 &}quot;Minutes of Proceedings, Inst. C. E," Vol. clii., Paper No. 3361.

deposit will thus be thickest in the deep parts of the reservoir nearest the dam, and in the most favourable position for being passed out through the outlet. Being, however, of a tenacious and compact nature, it will resist removal unless loosened artificially, say, by ploughing, as mentioned above.

The third class will, similarly to the second one, but more slowly, gradually be deposited, and chiefly near the dam, and can similarly be dealt with. In both these classes the amount which can be removed by being passed out through the outlet will be only a small portion of the whole deposit. As the water stored in the reservoir will be in a state of quiescence for several months, practically most of the silt which enters the tank will be deposited in it: only the light sediment which would be held in suspension for some days will be carried over the waste-weir when that is flowing.

38. The Proportion of Silt to Water.—The total quantity of silt brought into a reservoir will depend upon the nature and yield of its catchment. The table 1 below gives the results of some observations of the weight of silt which is carried by rivers.

These large rivers flow through fertile areas, and consequently carry much silt. Generally, reservoirs will be situated in hilly and less fertile tracts, and, in their case, the weight of silt will probably be less, and might on an average be taken as $\frac{1}{1000}$ of the weight of the water.

The silt when first deposited will be of a light, bulky nature, but, in course of time, will become more compact, and thus will occupy less volume, and eventually will attain a density nearly equal to that of ordinary soil. Taking the weight of soil as about 100 lbs. per cubic foot, the final bulk of the silt will be about two-thirds

¹ Buckley's "Irrigation Works in India and Egypt," pp. 36 and 37.

of that of the volume of water to which it was originally equal, and thus the volume of silt deposit, compared with that of the water in which it was suspended, will be about two-thirds of the proportion by weight.

I	2	3	4	5	
River.	Experimenter.	Approximate Velocity, ft. per second.	Proportion of Silt to Water by Weight.	Remarks:	
7. Rio Grande ¹	Humfreys and Abbot Gorsse and Subours Lombardini Spittel Hartsoeker Letheby Anson Mills Tremenheere Medlicott	4 8 	5 7 2 4 5 3 0 0 4 5 1 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	River partly frozen. { Equal parts of sand and } mud. { By volume. Average of } 118 samples. { Equal parts of sand and } mud. At head of Ganges Canal.	

- 39. The Determination by Cross-sections of the Amount of Silt deposited.—There are three ways in which the amount of silt which is being deposited in a tank may be determined, by:—
 - 1. Section lines across the reservoir bed;
 - 2. Silt boxes on the reservoir bed;
- 3. Direct measurement of the inflow into and outflow from the reservoir.

In the first system, cross-section lines are ranged at intervals across the basin and have their ends permanently marked by masonry pillars about 5 feet high, so as to be visible from each other, and with their distinctive numbers and levels engraved on their capstones. Where it crosses the 10 feet contours each line is marked with headerstones, also engraved with their distinctive numbers and having their surfaces at original ground

¹ Schuyler's "Reservoirs," p. 361.

Iron index rods projecting 3 feet above ground level are fixed close to the headers so that their positions may be readily ascertained even after their tops are covered by silt. The original sections are plotted, and they are relevelled and replotted at intervals of a few years. Although this system will give the exact depths of deposit varying from point to point on the sections, it has the objections that it will take several years to ascertain any great difference of level, during which the record may be lost, and also that the number of lines has necessarily to be small, so that the total deposit over the whole bed may not be exactly ascertainable from them. In order to avoid an accumulation of errors of observation, each section taken at intervals of time should be compared with the original one, and not with the one taken just previously on the same line.

40. The Determination by Silt Boxes of the Amount of Silt deposited.—In the second system, wrought-iron boxes, about 2 feet square and 1 foot high with closed bottoms and open tops, are placed at intervals along section lines ranged across the basin. Each box has fastened to it a substantial chain by which it can be lifted, and to this is fixed a light wire attached to a large float, so that the position of the box can be ascertained when the reservoir is full. When the boxes have to be examined, they are carefully lifted and the contained silt is either measured or weighed. The objections to this system are :-- the floats may break loose in stormy weather; the boxes are difficult to lift when in deep water, and, possibly, their contents may be upset when they are being lifted; and the number of lines and of boxes in them have to be too few to determine accurately the total amount of deposit over the whole bed of the tank.

- 41. The Determination by Observations of Inflow and Outflow of the Amount of Silt deposited.—In the third system, samples of the inflowing water are taken, daily when the rate of inflow is steady and at more frequent intervals when it varies, and the proportions of silt to water, either by volume or weight, are ascertained by passing the whole samples through filter papers and collecting the silt on these. Until the waste-weir comes into action, the increase in the contents of the tank can be readily ascertained from the tank capacity table. While the waste-weir is flowing, samples of its discharge have similarly to be taken, the amount of that discharge has to be calculated, and the amount of silt carried away can then be determined and deducted from that estimated as brought into the tank. By this system a very fair approximation to the actual amount of silt deposited can be obtained, but the way in which the deposit is distributed over the bed cannot thus be ascertained: this is, however, not a matter of much importance. The objections to this system are that it involves a large series of observations: that the samples of water taken may be not truly representative of the whole inflow and outflow; and especially, that the amount of heavy detritus deposited at the heads of the river and of its tributaries within the basin are not measurable by it. Still, it affords the quickest and most exact form of silt measurement, and can be made more accurate by combining with it measurements on cross sections of the heavy silt deposited at the heads of the principal inflowing streams.
- 42. The Level at which the Outlet Sill should be placed.—It does not require any system of silt measurement to prove that the amount of deposit from ordinary catchments is very considerable, as after a few years

this is most perceptible, and, even in twenty years, in many cases has been sufficient seriously to diminish the storage contents of existing reservoirs. It is for this reason not desirable to place the outlet sill at a very low level, for, if this is done, the tank bed will soon silt up above it. As a rule it will be advisable to fix its level, so that the original storage below it will be about 10 per cent. of that of the whole reservoir. The original contents of twenty existing tanks in Bombay above and below their outlet sills were 10,108·120 and 779·834 mill. cft. respectively, or 92.84 and 7.16 per cent. of their total storage capacity. Deducting one tank, where the storage below outlet sill was proportionately very small, viz., 20 mill. cft., compared with that above it, 3,310 mill. cft., the storage capacity below outlet sill of the remaining 19 tanks was originally 10 per cent. of the total storage.

As the bottom contours are of small area, this allowance for silting will entail the raising of the outlet sill some feet above the lowest bed level of the dam. A further raising to any extent of the sill may not be desirable, if this will much lessen the storage to be drawn upon for a number of years, and increase its cost, before the silt occupies the space below the outlet, and will thus lead to a reduced area of irrigation and to a loss of return on the capital expenditure. Another consideration in regard to the level at which the sill should be placed, is that the higher such level, the greater will be the command per mile of its length of the canal led from the outlet. In some instances this may justify the raising of the sill to a level higher than is necessary to allow space for the deposit of silt below it (vide paragraph 199).

43. The Advantage of Earthen compared with Masonry Dams in respect to the Silt Difficulty.—

Although it is economically not possible artificially to remove much of the silt deposited, the original storage, in the case of an earthen dam, can be easily restored when necessary, and at a cheap rate, by raising the dam and the full-supply level. This is one of the chief advantages of an earthen dam over a masonry one, for in the case of the latter, raising the levels is not so easy a matter unless that had been arranged for originally by providing a wider section to permit of it. If, however, this had been allowed for, it means that a considerable amount of the capital cost will be unproductive until the time for raising has arrived.¹

VIII. SURVEY AND INVESTIGATION WORK.

43¹.—Irrigation Reconnaissance Survey.—Before a project is selected for detailed investigation, it is essential that the whole of the country in its neighbourhood should be examined by means of a reconnaissance. The principal objects of this preliminary survey are to obtain, at comparatively small expenditure of time and money, general information as to the nature of the tract examined, the facilities offered by it for irrigation, and the relative merits of all projects practicable in it. Such a reconnaissance enables a general plan to be drawn up so as to utilise those facilities in the best and most comprehensive manner possible, and so that each individual project proposed will work in, and will not clash, with other schemes practicable. Thus will be avoided the fatal mistake of carrying out irrigation work in a piecemeal way without reference to an all-inclusive plan.

¹ Since this was written, the Assuán Dam has been cheaply raised by a new method; in this the section is first widened by a strip of masonry on the downstream side, and then the top is heightened (*The Engineer* of 21st February, 1908, and *Engineering News* of 30th September. 1909). It is proposed similarly to raise the Bhátgarh Dam near Poona.

To enable a proper comparison to be made of the relative advantages of competing schemes, approximate general surveys should be undertaken, and rough plans and estimates of the proposed works should be made. The designs for these should not be considered as final ones, nor the estimates for them as exact, but sufficient care should be taken in their preparation to obviate extensive alterations thereafter as these may greatly lessen the value of the preliminary work. In particular. that work should be based on liberal assumptions of the nature of the foundations, the character of the designs and the costs of the construction, as it is almost the invariable rule that the estimates of detailed projects amount to more than those of preliminary ones. Care should also be taken to prepare the designs and estimates of competing projects as far as possible on the same general lines so that a fair comparison as to their costs and advantages may be obtained.1

44. Survey for the Works.—After the reconnaissance has determined which is the best scheme practicable, the first survey work to be undertaken in connection with the detailed examination of that project will be for the proper location of the dam line. A trial centre line should first be set out and contours should be run at convenient intervals, say 4 feet apart, over the whole area which is likely to contain the final line. After this work is plotted to a large scale, the most economical line can be ascertained by trial in office, *i.e.*, by setting

¹ The Maladevi site was selected many years ago after the valley of the Pravara River, in which it is, had been thoroughly examined, and a better site could not then be found. Recently, the Bhandardara site was investigated and preferred; at it a masonry dam 250 feet high is being constructed across a very narrow gorge—previously so high a dam was not contemplated. The Maladevi site, which is 11 miles to the cast and lower down the river, is, however, not affected by this newer scheme, and can be utilised hereafter to provide additional storage when that is required. Objections have, however, been raised to it on account of the height of the dam proposed and the nature of the foundations.

out on the plan different alternative lines practicable, and by estimating roughly the costs of dams to be constructed on them.

When the final line has thus been selected, it should be levelled over, points in the longitudinal section at every 100 feet being noted and also those where the ground slopes change. Longitudinal and cross-sections of the waste-weir and outlet channel lines should then be taken and the plan completed by running contour lines at 2 feet apart vertically over the whole area likely to be occupied by the works. From such a plan it will be easy to make any changes in the design which may be found necessary when working up the project (vide Plate 4, Fig. 1). The plan should be extended by ordinary survey so as to include the whole area on which temporary works may have to be constructed.

The areas from which the different soils required for construction are to be obtained should next be surveyed and plotted, small trial pits being excavated to test the depths of the soils. From this plan a tabulated statement of quantities, leads and lifts can be prepared in order to ascertain the earth-work rate to be allowed for the construction of the dam. Similarly, the sites from which all other requirements, such as water, sand, lime, fuel, and building and pitching stone are to be procured, should be ascertained and the quantities available roughly determined so as to arrive at the probable cost of these materials.

45. Survey of the Capacity of the Reservoir Basin.

—After this investigation has been completed, the reservoir basin should be carefully contoured. For large storages the contours are usually taken at vertical intervals of 10 feet apart, but for small ones cross-sections may be run at intervals across the basins, and

the contours can then be plotted from them. It is as well first to fix the contour points by level and then to triangulate the areas comprised by them so as to ascertain the extent of those areas correctly, or, the survey can. be carried out by the tacheometer. Where necessary, tie lines should be measured in addition. As village maps are not very accurate, the contour plan should be prepared independently of them, but the contours may also be laid down on these maps with reference to field boundaries, so that the levels of outlying temporary works may be ascertained at any time, and also, so that the extent of land to be acquired may be marked on The limits to be acquired should be defined permanently by stones, on some of which bench marks should be engraved. These stones should, as a rule, be fixed on field boundaries, and their distances from field marks should be measured, or off-setted, and recorded both on the plan and in a tabulated statement.

46. Rainfall and River Discharge Observations.— Rain- and river-gauges should be established as soon as the investigation of a project is determined on. regard to rain-gauges it has to be remembered that a single gauge may not be representative of the rainfall on the whole catchment, and will certainly not be so if it is of any extent and if its physical character varies considerably (vide paragraph 14). It is best, therefore, to fix a rain-gauge to ascertain the rainfall of each constituent area with a characteristic fall, and especially should this be done during the years in which the construction of the tank is in progress, as then there will be superior establishment available for checking purposes. With a series of such numerous observing stations continued for a number of years, it will be possible to ascertain the relative rainfall on the different constituent areas of the whole catchment, and, when this has been found, the number of stations can subsequently be reduced greatly and the results from the diminished number applied to the whole catchment. There are several forms of automatic recording rain-gauges, but these are not usually employed in India, although in such cases they might well be used for checking purposes and to obtain records of the intensity of the rainfall.

The rainfall observations should always be supplemented by ones of river discharge, for these will give the actual amount of run-off and will take into account all the factors producing it. It is most important that the discharge available should be correctly ascertained. as on it depends the proper determination of the storage capacity of the reservoir. The river-gauge should preferably be established just below where the outfall of the waste-weir enters the stream, so that observations of it may be continued, if necessary, after the completion of the work. It should be permanently set out and cross-sections of the gauge station taken, so that from them a tabular statement of the different discharges at different gauge readings may be made out and utilised in the future. For this purpose a reach of the river should be selected where the bed is uniform, both in longitudinal and cross-section, and where the velocity of flow is regular and not extremely great even during ordinary floods.

A clear overfall weir (vide paragraphs 161 and 176) forms the most accurate gauging station; for important projects where such a weir is not available, one might be constructed, and might have the depth of flow over it continuously recorded by an automatic gauge. Where the expense of the construction of a new gauging weir will be considerable, a pair of automatic flood-level

recorders might be established instead at some distance apart from each other, so that from them might be obtained a record of the varying surface slopes of the floods, and thereafter the discharge could be calculated from the velocities thus deduced and the areas of the flood sections.

IX. THE UTILITY OF RESERVOIRS.

47. The Utility of Reservoirs in Times of Scarcity and Deficiency of Rainfall.—There is an idea generally prevalent that, by the construction of numerous reservoirs, the country may eventually be protected from the worst effects of famine, but it is questionable It has been explained in if this is a correct one. paragraph 7 that, in the case of storages situated in the plains and in the area of uncertain rainfall, the catchment areas, however large, in such seasons may not be productive of run-off sufficient to fill them. run-off were then sufficient, this would imply that there would be a still larger quantity of rainfall in order to produce it, and this amount of rainfall would probably suffice to prevent entire scarcity. The real benefit of reservoirs constructed in such areas is that, when the rainfall is deficient on the whole, or is so irregularly distributed as not to be capable of bringing crops to maturity, their storages will be able to supplement it and to permit of the growth of some crops. many more years of deficient and irregular rainfall than there are ones of total scarcity, and it is during these former years that reservoirs will be of substantial benefit and their construction will thus be justified.

While the failure of even the largest storages constructed in the plains may be expected in years of great

deficiency of rainfall, the case is different with those that are situated in the ghâts, which have an unfailing rainfall. Although the rainfall there is also liable to great variations, still even in the worst years in such localities it is sufficient to cause run-off, which is all the greater owing to the steep, hard and bare slopes which usually characterise the surface of such catchments. It is therefore highly desirable that all such sites should fully be utilised first, as storages there are likely to produce most revenue and benefit to the people, and to postpone works in the plains until it is necessary to construct them for the purpose of employing relief labour.

48. The Comparative Utility of Small and Large Reservoirs.—A small tank, under the most favourable circumstances, will irrigate only a small area, and this, considered with reference to the whole country, will be of little benefit. Moreover, in times of scarcity of rainfall, the replenishment of such tanks is likely to be deficient or totally to fail, and they will then be practically, or wholly, useless. The maintenance of tanks each having a storage of less than 50 million cubic feet, if attended to by Government, will be comparatively costly, and it will be more difficult to arrange for the supervision of numerous small works than of a few large ones having the same total storage.

The advantages of small tanks are that they will utilise small catchments which might otherwise be wasted, and will provide for the irrigation of isolated areas which might not otherwise be developed. If, moreover, they are not too large, and each can serve only one or two villages, their management might be entrusted to the cultivators, Government attending only to the maintenance of the works.

Large reservoirs, on the other hand, will have larger

and more unfailing catchments; will be capable of irrigating large areas which will sensibly affect the productive capacity of the country as a whole; their rate of storage will be less costly; and their maintenance will be comparatively cheap and their supervision easy. Owing to the variety of the interests they will have to serve, their management will have to be arranged for entirely by Government.

In regard to mitigating the effects of scarcity, the proper programme therefore seems to be to construct in the first instance large reservoirs with unfailing catchments, then those with less certain ones, and finally small tanks for the benefit of isolated areas.

49. Revenue Prospects of Reservoirs.—Owing to the low rates charged in India for irrigation, to the excessive loss of water by evaporation, &c., in the storage reservoir. to the large quantity required to bring the crops to maturity, and to the great cost of storage works, it is doubtful if at first reservoir irrigation will ever be remunerative; but, as time goes on and the value of the produce increases, the rates may be increased proportionately, and the revenue results will consequently improve. Moreover, the benefit to the country as a whole has also to be taken into account: in normal years storage works will produce crops which will add to the wealth of the cultivating classes, while in an abnormal year works with an assured supply may easily mature crops the value of which will be nearly equal to the capital expended on irrigation. Should an irrigation work pay a little more than its working expenses during normal periods, it may, from this point of view, be accepted as a scheme financially sound in regard to the country as a whole, although far from being a directly remunerative one to Government. If expenditure on

relief during times of famine is devoted to the construction of such works, instead of being incurred on works of only temporary utility, each successive famine will thus permanently enrich the country and render it better able to withstand the effects of future scarcity.

It is useless to expect from irrigation from reservoirs the good returns which are derived from the large canals that are supplied by the great perennial rivers and do not require expensive storage works, as the natural conditions are unfavourable to the former and are favourable to the latter. The proper way of regarding reservoir schemes is to remember they are the only ones available for the lands they serve, and that it is the duty of Government to develop the country so far as their finances will permit.

50. The Suitability of Reservoir Works for the Employment of Famine Labour.—The construction of reservoirs affords the most suitable work for famine The quantity of work available on them for unskilled labour is so great that it will give employment for large numbers during the whole time of scarcity. There is not thus the necessity for the expense of having to move the people frequently and to make numerous camps and other arrangements for them which obtains in the case of such less concentrated works as roads and railways. Moreover, the nature of the work is suitable for the agricultural population, that will comprise the large bulk of those who come for employment. supervision of the people will be easier, and will be arranged for more cheaply, than it can be on any other less concentrated class of work.

An objection raised to reservoir works is that they cannot be completed in the one season during which alone it is considered likely that famine conditions will

prevail. However, recent experience has shown that distress may last for more than a single season, and, even if it is not subsequently acute, it is fairly certain to exist in a more or less pronounced degree for some time during which the provision of employment is desirable in order to enable the people to recuperate both physically and financially. The construction of reservoirs will not interfere with, but will be in addition to, their usual employment, whereas, if in times of scarcity they are put on such works as metal-breaking for roads, many will be deprived in subsequent years of their ordinary means of subsistence.

It is, of course, necessary that a well-considered programme of works should be arranged before a famine has to be dealt with, so that during it the construction of projects with poor prospects may be avoided.

CHAPTER II.

THE DAM EMBANKMENT.

- I. VARIOUS KINDS OF DAMS.
- 51. Classification of Dams.—The different descriptions of dams may be classified thus:—
 - 1. Purely earthen embankments;
- 2. Earthen embankments with dry-stone toes ("compound dams," vide paragraph 128);
 - 3. Masonry dams;
 - 4. Composite dams;
 - 5. American types of dam.
- 52. Earthen Embankments.—A purely earthen embankment may be formed in the following ways, with:—
- (a) A puddle wall at the centre, or, on the water slope, or, in some intermediate position;
- (b) A clay hearting supported on each side by more stable material (this hearting is practically a very wide puddle wall);
 - (c) A homogeneous section, without a puddle wall.

In English practice (a), having the central puddle wall, is the type generally adopted; in recent practice in Bombay (b) has been followed; while the earlier dams there were constructed according to (c), which, with an important modification of these examples, to be described hereafter, (vide paragraph 80), is the type now recommended.

Earthen embankments with dry-stone toes ("compound dams") may, in respect of the upper part, be constructed

in any of the ways adopted for purely earthen dams; they differ from them, in respect of the lower part, in having dry-stone toes to support the base when the work has to be carried to a great height.

- 53. Advantages of Earthen Embankments.—These two classes of earthen embankment are the ones which will be dealt with in this chapter. The advantages they possess over other types are:—
- (1) They do not require such expensive and solid foundations.
- (2) The materials for their construction being necessarily close at hand (or they would not be economically practicable) labour on them can be concentrated and easily supervised, and they are therefore peculiarly well adapted for the employment of famine labour.
- (3) They can be raised from time to time to meet the demand for more water, or to restore the deficiency of storage due to the silting up of the reservoir.
- (4) They can be constructed quickly and by unskilled labour.
- (5) They are the cheapest type, and, with suitable design and construction and by the adoption of proper precautions, can be made of any height which is ordinarily required in practice.
- 54. Masonry Dams—Composite Dams.—Masonry dams are the most stable of any form of dam. They, however, generally require deep and expensive foundations, and their construction is slow and costly. They cannot be raised beyond their originally designed height 1 unless their section has been made sufficiently wide at first for this purpose, a proceeding which involves the locking up of unproductive capital until the increase in height has been

¹ See footnote to paragraph 43.

carried out. They are the best form for large and deep water-supply reservoirs, where risk of failure must be avoided at all costs.

Composite dams are ones in which part of the length is formed as an earthen embankment and part as a masonry dam. In respect of costliness they are a mean between the two forms of which they consist. They are best adapted to sites where the river crossings are deep and the flanks are on high ridges. The junction between the masonry and the earthen embankment has to be most carefully made in order to prevent water finding its way through the structure at this point.

- 55. American Types of Dams.—Schuyler i gives the following classification of "rock-fill" dams, i.e., those having an upstream:—
 - 1. Facing of two or more thicknesses of planking;
- 2. Facing of asphalt concrete laid on a sloping dry wall;
- 3. Facing of Portland cement concrete laid on a dry wall:
- 4. Facing of masonry built vertically and backed with earth which is covered on the downstream side with blocks of stone laid in mortar;
- 5. Facing of steel plates laid on the upstream slope of a dry, hand-laid wall;
 - 6. Facing of earthen embankment; or, having a
- 7. Central core of steel plates without hand-laid facing walls.

Other types of American dams are:-

- 8. "Hydraulic-fill" dams;
- 9. Earthen embankments with masonry core walls;
- 10. Earthen embankments with steel-plate core walls.

¹ Schuyler's "Reservoirs," p. 1.

56. "Rock-fill" Dams.—The rock-fill dams are cheap to construct, but depend for safety on the facing, for, if that is injured, or decays, the great pressure of water in the reservoir would rapidly disintegrate the hearting and carry away its constituent blocks, no matter how large.

There have been several instances of the failure of this class of dam, and the bursting of the Gohna Lake,1 which was formed by a large landslip blocking the Biráhi-gangá, a tributary of the Alaknanda, (a principal affluent of the Ganges), in a narrow valley in the Himalayas, by a natural rock-fill dam of immense thickness (2,000 feet wide at the top, 11,000 feet at the base, and about 900 feet high), shows that this form of construction cannot be depended upon, so far as the hearting is concerned. It is true that the primary cause of the breaching of this mass was its being overtopped by the lake, but it early showed signs of failure due to percolation, which percolation eventually amounted to 350 cusecs.

Most of the facings described above appear to be of a temporary nature, and sufficient time has not elapsed since they were constructed to test their permanency thoroughly.

When steel-plate cores are used, they are sometimes protected by casings of asphalt concrete, 4 inches thick, but these have been known to slip off 2 during construction, and the steel plates themselves to buckle 3 by expansion. In 2 one example the steel plate was 15 inch thick for the lowest 20 feet, ½ inch for the middle 20 feet, and 3 inch for the top 28 feet.

57. "Hydraulic-fill" Dams.—The hydraulic-fill dam4

¹ Selections from the "Records of the Government of India in the Public Works Department," No. cccxxiv.

2 Schuyler's "Reservoirs," p. 64.

⁸ *Ibid.*, p. 22. ⁴ *Ibid.*, pp. 76—116.

is formed by sluicing an earthen area with a hydraulic jet and by conveying the resulting silt-charged stream on to the site of the dam, where the earth is deposited between shallow side banks, with the finer material as the hearting and the coarser as facings, while the clear water is allowed to pass off. This form of construction requires:—

- 1. An abundance of water at the proper elevation to provide a sufficient "sluicing head";
- 2. An abundant deposit of suitable material for forming the dam, conveniently situated at each flank and high enough above the top of the dam to permit of the flow of the material required to complete it.

Where these conditions exist, the construction of the dam is both rapid and cheap, but the absence of water at a sufficient elevation will generally prevent, in India, the adoption of this form of dam making. This method of construction is considered in America to be a sound one; the objections to it are apparently that the layers may be stratified (vide paragraph 118), are deposited very wet (vide paragraph 117), and are consolidated entirely by settlement (vide paragraph 119). It would therefore seem proper to form the whole dam of self-draining material (vide paragraph 110), to carry it up slowly so that it may have time to consolidate itself, and not to subject it to infiltration from the reservoir until settlement has practically ceased.

The failure of the important Necaxa Dam¹ in Mexico which was constructed by this method is instructive. That work was designed to be about 1,200 feet long and of a maximum height of 190 feet: its top to be 54 feet wide and 16 feet above full-supply level: and its upstream and downstream slopes respectively to be 3 to 1

¹ Engineering News, Vol. lxii., No. 3, of 15th July, 1909, pp. 72-74, 77, and 78; ibid., No. 4, of 22nd July, 1909, p. 99.


and 2 to 1. The central part was constructed of a pure clay of a highly retentive nature to a base width of about 365 feet and side slopes of about 1 to 1. This was to be kept in place by side fillings of material varying gradually from partly porous soil next the clay to rock-filling on the outer slopes; on the upstream side the side-filling was about 350 feet wide at the base and on the downstream side was about 250 feet wide. The total contents of the dam were estimated at 2,130,000 cubic yards, of which 1,926,000 cubic yards had been formed by May 20th, 1909; on that date a slip of 720,000 cubic yards of the upstream slope at the left flank occurred very suddenly, and the semi-liquid clay of the hearting flowed for 1,200 to 1.500 feet into the reservoir. The dam had then been raised to about 45 feet below its designed top. This slip compares unfavourably with the one of an ordinary dam shown in Fig. 17, p. 170.

It was expected that the side fillings would weight and drain the whole of the clay hearting but it was found that they had drained and consolidated the outer part only from 6 to 16 feet in thickness, and that the central part was so soft that six men were able to force 1-inch pipes into it to a depth of 50 or 60 feet. The downstream rock casing was of heavy limestone and had been carried up to full thickness and height; the upstream casing was of "tepetate" of only half the weight of the limestone, and, moreover, had been constructed of reduced thickness and height. This explains why the theoretically less stable 2 to 1 downstream slope was able to withstand the pressure of the soft clay hearting which carried away the 3 to 1 upstream slope. The dam was constructed very quickly and had continually on top a summit pond formed by the water from the hydraulic jets and this produced extra hydrostatic pressure.

The lessons in connection with hydraulic-fill dams to be learnt from this failure are apparently:-

- (a) A hearting of pure retentive clay should not be formed, but the whole section should be of self-draining material:
- (b) The work should be carried up slowly and evenly and to the full section: and
- (c) The heaviest dry material available should be used for the outer casings and especially for the upstream one.
- 58. Earthen Embankments with Masonry Core Walls.—American engineers are greatly in favour of the construction of masonry core walls for earthen dams.

FIG. 1 CORE WALL OF NEW CROTON DAM

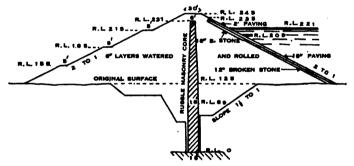

One section² for the wall which has been recommended is 4 feet or 5 feet thick at foundation level, 8 feet thick at ground surface level, and 4 feet thick at the top. Another was only 2 feet thick, uniformly from top to bottom. These sections appear too thin to cut off infiltering water under great pressure, and the first one, although superior to the second in this respect, appears to have been copied from puddle wall practice, and is not of a stable form for

Schuyler's "Reservoirs," p. 281. Engineering News, Vol. xlvii., p. 153, Feb. 20th, 1902.

2 "Minutes of Proceedings Inst. C. E.," Vol. cxxxii., p. 254.

masonry. A much better section proposed for the new Croton Dam, New York (Fig. 1), had the trench portion 18 feet thick throughout, for 89 feet from foundation level to within 36 feet of ground level, and was thereafter battered uniformly on both sides for 136 feet up to its top. which was 6 feet wide and 20 feet below the top of the dam: that top was 245 feet above the foundation of the Even this thickness of core wall does not seem sufficient to stop entirely the filtration due to the enormous pressure, nor to be able to resist any unequal settlement of the earth on the two sides, which is the great danger to be feared in this form of construction. To prevent this unequal settlement occurring and producing lateral and unsupported pressure, the earthwork should be carried up uniformly on the two sides of the core wall and with its layers on each side sloping slightly to that wall.

The following advantages² are claimed for a masonry core wall:—

- (1) If founded on an unyielding, impervious stratum, it forms a perfect cut-off in the centre of the dam, preventing water which percolates into the upstream slope from reaching the downstream one. (Against this it may be said that masonry, especially if thin, is not absolutely water-tight when subjected to great water pressure.)
- (2) It cannot be washed out, as a puddle wall may be, should a leak through it be formed; in fact, such a leak through the masonry is more likely to silt up than to be enlarged.
- (3) It separates the dam into two distinct portions, an upstream one, which should be made as water-tight as possible, and a downstream one, which shou'd be made

¹ "Minutes of Proceedings Inst. C. E.," Vol. exxxii., p. 267.
² Ibid., pp. 267 and 268.

as stable as possible. If these two kinds of earthwork joined each other without the interposition of the core wall, cracks might occur in the centre of the dam on account of differences in their settlement. (Such different settlements might, however, still happen if the core wall were built, and might then lead to its fracture.)

- (4) It enables the outlet culvert to be carried through the dam with perfect safety.
- (5) It enables the outlet tower to be replaced by a "dry well" tower, built upstream of, and in connection with, the core wall, thus dispensing with the need of an outlet tower and bridge (vide paragraph 207).
- (6) It gives an earthen dam greater strength to resist the erosive action of water passing over its top. (This topping of a dam should be prevented by providing sufficient waste-weir discharging power, and water should not be allowed to rise to within several feet of the top of the dam).

On the whole it appears that the masonry core wall is superior to the puddle wall, but its expense would probably be prohibitive in India.

To sum up, it may be said that in India rock-fill dams would be considered to be dangerous to construct in view of their apparently temporary nature: hydraulic-fill dams are not practicable on account of the absence of water at a high level; and earthen dams with masonry core walls are too expensive.

II. THEORETICAL CONSIDERATIONS.

59. The Deficiency of the Theory of Earthwork.—Properly constructed earthen dams are amply sufficient to resist the pressure of the water which they hold up. The only way water can and does act prejudicially against them is by infiltration, thus diminishing their frictional

resistance and adhesion. The risk of failure lies in the l ability of the earthwork itself to slip. There have been many mathematical invest gations as to the behaviour of earthwork, but, naturally, these have been confined to laboratory experiments; and, although they are most useful in indicating the character of the forces at work, they cannot, from the nature of things, be based on actual and comprehensive data, and cannot, therefore, give the actual amounts of those forces in all the varying circumstances which occur in practice. Sir Benjamin Baker,1 Past President, Inst. C.E., has given numerous examples showing that the lateral pressure of earthwork against walls is, at most, only one-half of that pointed out by theory, and he states that practical considerations, rather than theoretical ones, should be taken into account when designing walls to resist earth pressure. Mr. (since Sir) G. H. Darwin, M.A., F.R.S., concludes: "The soundest view seems to be that engineers have no better practical course open to them than, neglecting the elaborate formulas which have been suggested, to work with semiempirical rules such as those of Coulomb, and to allow a large coefficient of safety."

Rankine³ has stated: "There is a mathematical theory of the combined action of friction and adhesion in earth: but for want of experimental data its practical utility is doubtful."

60. General Causes affecting the Stability of Earthwork.—Earthwork gives way by the slipping, or sliding, of its parts on each other. The resistance to this is due partly to the friction between the particles, and partly to their mutual adhesion or cohesion.

Minutes of Proceedings Inst. C. E.," Vol. lxv., pp. 207 and 208.
 1bid., Vol. lxxi., p. 378.
 Civil Engineering," 11th ed., p. 324.

The friction¹ is measured by the angle of repose, and constants for it for different soils have been determined; these are coefficients of the weight of the mass. Friction is greatest for coarse and least for fine soils; on it depends the permanent stability of natural earthwork.

The adhesion, or cohesion, may be measured by the depth to which an unsupported face of earthwork will stand before that is affected by the weather: it gives additional stability to earthwork. It is an extremely varying force, depending largely upon the condition of the material. It is increased by a moderate amount of moisture, but is diminished by excessive wetness. The cohesion of clays is considerable, and is largely increased by a small amount of moisture; a slight addition of moisture also increases the coefficient of friction, but an excess of it acts as an unguent in diminishing it.

It is, therefore, evident that any given earthwork, other things being equal; will be most stable when slightly damp, and least stable when charged with water. Hence its stability depends upon the ease and thoroughness with which it can be drained of superfluous and dangerous water. Professor Rankine² sums up the matter thus: "The properties of earth with respect to adhesion and friction are so variable that the engineer should never trust to tables or to information obtained from books to guide him in designing earthworks, when he has it in his own power to obtain the necessary data, either by observation of existing earthworks in the same stratum, or by experiment."

61. The "Historical Element" of Earthwork.— There is a further cause of variation in the behaviour of soils, and that is what Professor Clerk Maxwell has called

2 Ibid., p. 317.

¹ Rankine's "Civil Engineering," 11th ed., pp. 315 and 316.

the "historical element," which term not only comprises the manner in which the mass was put together, but also includes the different causes at work which have subsequently modified its condition.

In respect to the effect of the original method of the formation of earthwork on its stability and behaviour, Mr. (since Sir) G. H. Darwin, M.A., F.R.S., has made experiments on "The Horizontal Thrust of a Mass of Sand," which show that when sand is formed in different ways into an embankment it produces different amounts of thrust, although in each case the mass presents the same external appearance. This fact is recognised in engineering practice, for, when it is desired that a mass of earthwork should settle tightly against a retaining wall, its constituent layers are made to slope downwards towards the wall; the steeper the slope, the greater will be their pressure. If, however, the wall is to be freed from earth pressure, the layers are made to slope downwards away from it. The same thing occurs in Nature. "The stability of sedimentary rocks in the side of a cutting is greater when the beds are horizontal, or dip away from the cutting, than when they dip towards it."2

62. The Effect on Earthwork of Causes acting subsequently to its Construction.—In respect to the modification of the behaviour of earthwork by the effect of causes acting on it subsequently to its construction, so much attention has not always been paid, although it is equally necessary to take this change into account. In nearly all earthworks the practice is to treat the material as homogeneous from top to base, and to adopt an uniform slope throughout. The lower portions in a large dam must, however, be in a very different condition to that

¹ "Minutes of Proceedings Inst. C. E.," Vol. lxxi.
² Rankine's "Civil Engineering," 11th ed., p. 318.

of the upper ones, as they are much more highly compressed and are moister. Probably the enormous superincumbent weight causes some stratification of the lower parts and diminishes their cohesion, while the increased smoothness, due to the pressure, lessens their frictional The amount of increase of frictional stress. resistance. according to the depth below the surface, depends upon the viscosity of the earth enabling it to transmit pressure. and this pressure must vary from point to point on the cross-section of the dam. The increase in moisture at the base will diminish both the frictional resistance and the cohesion. The variation of the materials, their disposition and the methods of construction, introduce further elements of change, so that there are numerous, entirely hidden forces at work the magnitude and resultant action of which can be determined only from the experience of the works themselves.

In Nature it is seen that hills, or even large masses of soil, have not an even slope, but one that varies from steepness at the top to flatness at the base (e.g., Fujiyama, in Japan). Although this form is partly due to the effects of denudation, it is also partly due to the natural slopes assumed by the material of the hills. Slips of earthwork show, at first, a similar, but more pronounced, outline. It is known, moreover, that the limit of height of ordinary earthen dams is comparatively low. French engineers have placed it at 60 feet, and, although there are many instances of greater heights having been successfully accomplished, a considerable amount of care is necessary to ensure the safe construction of dams of a height greater than 50 feet. Low dams can be constructed with much steeper slopes than high ones; the water-faces of dams require a flatter slope than the rear ones. From these considerations it may be deduced that, in an originally

homogeneous high earthen dam with plane slopes, the resistance to slipping decreases with the height from the top, and that the proper section for it is one having the slopes continuously flattened towards the base. An "empirical section" based on these principles is shown in dotted lines on Plate 5, Fig. 2. Taking the whole cross-section into account, it will be seen from this that a very considerable flattening of the base slopes results in a comparatively small increase of the original area.

Experiment¹ has shown that a good natural specimen of clay when dried lost 25 per cent. of its weight, and 10 per cent. of its bulk; it then became extremely compact, and, if not allowed to expand, offered great resistance to the passage of water. A dried specimen of this clay reduced to a fine powder absorbed about 75 per cent. of its weight of water, and, when not confined, allowed of free percolation. When this powdered clay was pressed into a tube, 8 feet long and 3 inches in diameter, it absorbed 35 per cent. of its weight of water, but there were no traces of filtration through the tube. The compressed particles of clay, in absorbing the water, expanded so as to become watertight; the greater the pressure of the water, the more satisfactory were the results.

On a large work it would not be economically practicable thus thoroughly to desiccate clay, nor feasible to consolidate the whole mass if dry. The experiments show, however, the advisability of using no more water in the construction of earthwork than is necessary to produce a compact substance by rolling. The further compression of the mass will result from the superincumbent weight of the dam, which should be allowed to act for as long a time as possible before the reservoir com-

¹ The Builder, Vol. li., p. 400.

mences to fill, so as to prevent filtration through green material. In a wet state clay reaches its extreme limit of expansion, and, when then exposed to the action of water, filtration must take place between the separated particles. Clay is, moreover, so retentive of water, that, if once soaked, it will be long before it parts with the excess of moisture; hence the greatest care should be taken during construction to use the minimum amount of water.

64. The Rate of Filtration through Soils—The Depth of the Puddle Trench.—The rate of filtration through a soil depends upon its porosity, which governs the frictional resistance to flow, and the slope and length of the filamentary channels along which the water may be considered to It is evident, therefore, that the direct rate of infiltration in a homogeneous soil must decrease from the top to the bottom of a puddle trench. The best section for a puddle trench is thus a wedge, such as an open excavation would give. It is true that the uppermost infiltering filaments, when stopped by the puddle, will endeavour to get under it, but a depth will eventually be reached when the frictional resistance along the natural passages will be greater than that due to the transverse passage of the puddle trench, and it is when this occurs that the latter may be stopped without danger, as the filtration to it will be less than that through it. depth requires to be determined in each case, but in fairly compact Indian soils 30 feet will be a fair limit for a reservoir 60 feet deep (vide paragraph 86). Mr. David Gravell1 cites the opinion of Sir Robert Rawlinson, that 30 feet depth of puddle trench is sufficient if a thick bed of concrete is placed at the back with a well for collecting water and a pipe leading this off to the downstream side; this was done in the case of the Yarrow Dam.

¹ The Engineer, Vol. lxiii., p. 189.

III. THE DESIGN OF DAM EMBANKMENTS.

- 65. The Section of the Dam Embankment.—The proper section to be adopted for a dam embankment depends upon:—
- 1. The angles of repose of the soil of which it is formed, when dry and when saturated with water;
 - 2. The nature of its material;
 - 3. The nature of the foundation;
 - 4. The height to which the work has to be raised.

The following table gives the general sections which may be adopted with safety and economy for all ordinary good soils properly consolidated and resting on good foundations:—

. 1	2	3	4	5	6
Height of Dam above Ground Level.	Height of Top of Dam above H.F.L.	Top Width.	Upstream Slope.	Down- stream Slope.	Width of Dam at H.F.L.
	Feet.	Feet:	Ratio of Horizontal Width to Vertical Height.		Feet.
1. 15 feet and under	45	6	2 to 1	Il to I	20-23
2. 15 feet to 25 feet	4—5 5—6	6	2 to 1	2 to 1	$28\frac{1}{2}$ — 33
3. 25 feet to 50 feet	6	8	3 to 1	2 to 1	38
4. 50 feet to 75 feet	67	10	3 to 1	2 to 1	40-45
•	j l	l	l	j	

Above 75 feet in height special precautions have to be taken: these will be described hereafter (vide paragraph 128).

In any dam it is advisable to preserve much the same section throughout so as to improve the appearance of the work as a whole, and, also, because reductions at the flanks do not affect much saving unless these are very long and moderately high. In a long dam three changes at most will suffice, different sections being adopted for:—

1. The Gorge Embankment;

- 2. The high part of the Embankment;
- 3. The low Flank Embankment.

When such changes of section are made, to facilitate the work of setting out, they should be carried out in lengths of 100 or 200 feet, instead of uniformly throughout the length of the dam.

- 66. The Height of the Dam.—The height to which a dam has to be constructed depends upon:—
 - 1. The amount of foundation clearance;
 - 2. The ground levels;
 - 3. The full-supply and high-flood levels;
- 4. The amount of "free-board," or the height of the top of the dam above high-flood level;
- 5. The importance of the particular section of the dam, considered with reference to that of other parts of the embankment;
 - 6. The allowance for settlement.
 - (1) Is dealt with in paragraphs 111, 113, 114, and 115;
- (2) depend upon the longitudinal section of the dam line;
- (3) the full-supply level is determined by the amount of storage to be impounded, and the high-flood level, by the discharging capacity of the waste-weir.
- (4) and (5) are dealt with in paragraph 67, and (6) in paragraph 72.

French engineers consider that the maximum safe height for an earthen dam is 60 feet, but embankments have been constructed in the Bombay Presidency up to a height of 80 feet. In England there are several instances of dams having been raised to 80 feet, some to 100 feet, and one to 125 feet (see also paragraph 127).

^{1 &}quot;Minutes of Proceedings Inst. C. E.," Vol. clxxxii., p. 250.

² Ibid., p. 208. ⁸ Ibid., p. 205.

67. The "Free Board" of the Dam.—The dam has to be raised a certain height above the high-flood level as a matter of safety in ordinary circumstances, and to provide for any accidental settlement which may occur. height depends not only upon the size of the reservoir, but also upon the importance of the particular portion of the dam considered with reference to other parts of the embankment. For large reservoirs, as the importance of their safety is greater, the free-board should be larger than it is for small ones; hence it is advisable to increase the free-board of the dams of the former by at least 1 foot more than that sufficient for the latter. Similarly, where the dam is of extreme height, as where it crosses the bed of the impounded stream, it should be raised at least a foot higher than at the lower flanks, so that the danger may be avoided of a breach occurring from any cause at the former place, before doing so at the latter. breach at the low flank will usually cause a smaller and less damaging flood than that which would occur were the breach to happen at the gorge embankment; moreover, the subsequent repair work at the former would be relatively much cheaper to effect and would be safer afterwards than it would be at the latter.

The free-board does not depend directly upon the full-supply level of the reservoir, as the required margin for safety has to be given above its high-flood level.

68. The Top-width of the Dam.—The top-width of the dam should vary according to the size of the reservoir and to the height of the dam, so as to be in accord with the general scale of the work, and, principally, to allow of the top-level of the dam being restored should any extra settlement occur. As an increase of top-width affects only slightly the total area of the section of the dam, it is, as a rule, best to maintain the top-width

the same throughout the embankment, and, if any reduction is contemplated, to confine it to the low ends of the flank embankment. Where such changes of top-width are decided upon they should be carried out in lengths of 100 or 200 feet, so as to facilitate setting out, and should not be continued uniformly throughout the whole length of the embankment.

69. The Side-slopes of the Dam.—These primarily depend upon the nature of the material of which the dam consists. In paragraph 80 it is stated that it is advisable to make this material of the same description in all cases, so that the same side-slopes should, everywhere, meet the conditions in force. Moreover, the side-slopes given in the table in paragraph 65 have been found in practice, in numerous examples of different kinds of earthwork, to be reliable, as they are sufficiently flat to resist slipping.


The upstream slope is made flatter than the downstream one as it usually consists of more clayey materials and is saturated by the water of the reservoir.

When the embankment is higher than 75 feet, it will be necessary either to change these slopes or to make a difference in the design of the dam.

As shown in the table in paragraph 65, the lower the dam, the steeper may be its side-slopes; it is thus permissible slightly to steepen the side-slopes near the top of a dam (vide Plate 5, Fig. 2).

69^A. The Effect of Percolation on the Dam.— The side-slopes should depend not only upon the material of the dam but also upon the way in which it was laid and consolidated, as infiltration from the reservoir will decrease the weight of the submerged part of the embankment by that of the water displaced by it, and will thus diminish the stability of the dam in proportion to its porosity. For the same reason, the heavier is the material of which the dam is constructed, other things being equal, the more stable will be the structure (vide paragraph 128).

FIG. 1^A
HORL TO VERT^L 1 TO 2

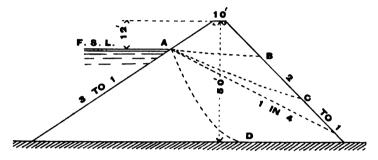

If the dam is made of extremely porous material offering hardly any resistance to infiltration, the surface of the water percolating through it will be nearly level, such as is shown by the line AB drawn in Fig. 1^A. If the material is more compact but still somewhat porous, that surface will assume a line such as AC. If, however, the dam is made of thoroughly consolidated watertight material, the internal percolation line will be somewhat as shown by AD. The slope of the percolation line measures the resistance of the material of the dam to the flow of water through it, and the decrease in weight and stability of the dam is measured by the height at any point of the percolation line above the ground line. In addition (vide paragraph 60), the saturated portion has diminished frictional and cohesive resistance to slipping.

The first case, AB, could occur only in a bank of dry

¹ "Public Water Supplies," by Turneaure and Russell, 1st ed., 1907, pp. 323—325.

rubble, etc., the particles of which are separated by wide interstices; those particles being of large size, the bank would be stable until the velocity of the water between them increased sufficiently to carry them away (vide paragraph 56). The second case, AC, might happen in a badly constructed earthen dam, and the amount of infiltration shown would probably cause a slip. The third case, AD, represents what occurs in a properly consolidated dam, more especially if its downstream portion is formed of self-draining material (vide paragraph 110), and is underlain by base drains (vide paragraph 112) so as to secure a dry and thus a thoroughly stable downstream toe.

This illustration indicates the importance of constructing the upstream part of the section with impervious material, and of increasing its resistance to infiltration by thorough consolidation. Every precaution should be taken to resist percolation on the upstream side of the centre line, and to drain off harmlessly on its downstream side the small amount of water which reaches the centre line so that there may be a substantial cover of dry material on that side above the line of saturation of the dam.

Experiments to test the surface line of percolation have been made on certain dams in Bombay: these have shown in bad examples that the line slopes about 1 in 4 from the reservoir surface, but in good ones is somewhat steeper. The experiments were made by sinking small iron pipes from 1½ to 2 inches in diameter through the embankments; they probably exaggerate the actual state of affairs, as doubtless the water imprisoned in the dams heads up in the pipes (vide Elkington's system of subsoil drainage described in paragraph 108). Anyhow, slips in the dams are there

of rare occurrence although some of the experiments would indicate they should take place as the percolation lines determined have a tendency to meet the downstream slope of the dams above their bases.

70. The Crest of the Dam—The Crest Wall.—In the earlier Bombay examples both the side-slopes above high-flood level were reduced to 1½ to 1 for reasons of economy. That practice is now condemned, as it does not allow any margin for making up any excess settlement that may occur.

There is another way of finishing off the dam, and that is by a crest wall as illustrated in Plate 5, Fig. 1. This has a section with faces battering to the centre line of the dam both on the upstream and downstream sides, so that the wall cannot separate from the embankment, and so that it has ample strength with which to resist the thrust of the earthwork. To prevent any settlement from occurring, such a wall should have a wide concrete foundation, and should not be built until the dam has obtained a practically final consolidation. With proper arrangements such consolidation can always be attained, although, of course, the delay involved by them is not a recommendation in favour of this form of construction. The toe of the wall should be protected by a strong apron, 2 feet thick, of close-fitting pitching to prevent it from being undermined.

The advantages of this crest wall over the ordinary slope are that it will:—

- 1. Protect the dam up to its extreme top from wavewash, the inroads of vermin, and the growth of thick vegetation;
- 2. Act as a wave breaker and prevent waves from being carried over the dam in severe storms;
 - 3. Lighten the top of the dam and save the construc-

tion of a large amount of earthwork which would be entailed by extending the ordinary dam slope to the top of the dam;

- 4. Permit of the raising of the dam for a moderate height when settlement occurs without a great reduction of its top-width, the crest wall being then continued with its original or reduced batters;
 - 5. Give the work a better finish;
- 6. Effect, at ordinary rates, some economy, compared with the ordinary continuous 3 to 1 slope, when the dam is over 27 feet in height.

Crest walls have, so far as is known, not been constructed in India on dams of any height, although there are many examples of old native works of small height which have been formed with an upstream wall backed by embankment. In England crest walls have been built, but possibly to a different section, and with fewer precautions having been taken. The objections there raised to them are:—

- 1. Waves 1 wash up the pitched slope, strike the wall, and, rebounding, undermine its base;
- 2. Waves ² are apt to be carried over the wall in stormy weather and thus to erode the earth backing.

These objections are against the experience of harbour practice in which vertical walls are now preferred to slopes, as they are found to lessen wave action. The replacement of the top-slope of the dam by a crest wall is, however, not a matter of great importance, and the general practice hitherto has been against it.

71. The Width of the Dam at High-flood Level and Full-supply Level.—The width of the dam at high-flood level depends upon the height of the top of the dam

² Ibid., p. 208.

^{1 &}quot;Minutes of Proceedings Inst. C. E.," Vol. cxxxii., p. 205.

above it (taking the ordinary free-board and the allowance for extra settlement into account), the side-slopes and the top-width. The figures in the table in paragraph 65 show that this width is a considerable one, and is unnecessarily large if resistance to water infiltration had alone to determine it, for, in that case, a width of 6 feet would be ample.

The width at full-supply level cannot be given in that table, as it is equal to the width at high-flood level plus the sum of the ratio of the slopes multiplied by the high-flood depth, which depends upon the discharging power of the waste-weir and will thus vary for different reservoirs. This width is also far in excess of that which is required only to resist infiltration, and, generally, the widths at each level of the cross section are, similarly, greatly in excess of those necessary for this purpose when the dam is well constructed; they are, in fact, determined by wholly different considerations, viz., the height, the side-slopes, and the top-width required for the dam as a whole.

72. Allowance for Settlement.—No matter how well a dam has been consolidated during its construction, its enormous weight, which far exceeds any that can artificially be brought to bear upon it, still further compresses the earthwork. The result of this amount of further compression is known as settlement, and provision for it must be made, both in setting out the work and in estimating its quantity. The vertical amount of settlement of a well-consolidated dam should vary from $\frac{1}{30}$ th to $\frac{1}{36}$ th of its total height, measured from its cleared foundation to its designed top.

The moist air of the monsoon and the rainfall then have great effect upon the settlement of a new dam, and it is probable that during the course of the first monsoon an embankment, although not called upon to impound water, will attain half its final amount of settlement. If, owing to the height of the section, the dam has to be completed in more than one working season, it will suffice, when setting out the work for the second and subsequent years, to consider that the finished base has already attained half its final settlement and to adjust the setting out of the upper part accordingly.

The complete settlement of the dam will practically be attained in a few months after the full depth of storage comes against it. The dam will continue to settle for a few years more, but only to a very small extent, and, five years after water is admitted against it, there should not be any sensible further settlement.

It will not, however, be right entirely to depend upon this property of the self-consolidation of a dam and wholly to neglect artificial consolidation. The latter enables the whole mass to settle uniformly and gradually, whereas, if the earthwork during construction were simply deposited in place, a much larger amount of settlement would rapidly occur as soon as the dam became wetted, and, as this could not be uniform, owing to the varying heights in the longitudinal and cross sections of the work, internal stresses would be set up. Moreover, were the embankment composed originally of loose material, the water of the reservoir would find its way into it for a considerable distance and would tend still further to produce unequal settlement and greater internal stresses, even if it did not cause the dam to leak or burst.

The more a dam is consolidated artificially, the less will be its subsequent settlement and the freer will it be from internal stresses, as its consolidation will be more uniform. To ensure uniformity of settlement it is desirable to construct a dam slowly, so as to let its power of self-consolidation come gradually into play.

73. The Sectional Area of a Dam Embankment.—
The sectional area of a dam with uniform side-slopes is given by the formula:—

$$A \,=\, \left\{T \,+\, H\, \left(\frac{S_1\,\times\,S_2}{2}\right)\right\} H$$

where A = the area in square feet;

T =the top width in feet;

H = the total height in feet; and

 S_1 and S_2 = the ratios of the horizontal widths of the two side slopes to their vertical height.

It will be seen from this that in high dams the topwidth is a comparatively small factor and that the areas of sections of different heights practically vary as the squares of their heights multiplied by half the sum of the ratios of their side-slopes.

In Appendix 20 are given tables of sectional areas for all ordinary top-widths, side-slopes, and heights varying by 0·1 of a foot; further refinement in taking out the height is unnecessary. It must, of course, be remembered that H is the sum of the natural height, the allowance for settlement (vide paragraph 72), and the allowance for foundation clearance (vide paragraph 113).

74. Sections required at Particular Sites.

(a) Gorge Embankments.—Where the gorge, or river crossing, is very high, a particular treatment is necessary: this is described in paragraph 128, which deals with dams with drystone toes. Where it is of considerable height, the dam will, as explained in paragraphs 67, 68 and 69, require a greater free-board, greater top-width, and possibly flatter slopes than when it is of small height. At a gorge particular attention should be paid to the

benching of the side-slopes of the ground, as they will otherwise tend to cause the embankment to slip off them. To prevent this the benching should be designed with base-slopes inclined downwards from the natural gorge-slopes, so that the earthwork of the dam during settlement will tend to move towards the flanks rather than towards the river crossing.

Some English engineers prefer to slope off the sides of the gorge to smooth surfaces with the object in view of making the gorge embankment wedge-shaped in longitudinal section, and thus to ensure during settlement that the earthwork will be forced tightly on to those sides. However, on account of the greatly varying heights of the embankment at, and near the sides of the gorge, the settlement of the dam will tend to make it leave the sides; it therefore seems better to counteract this tendency to separation by benching as described above. A more important consideration is that if the settlement of a high mass of earthwork is facilitated, too rapid motion may be caused and may result in a slip: to prevent this from occurring it appears better to retard the motion during settlement by benching the sides of a gorge. For low masses of earthwork, where slips cannot be induced by settlement, it is undoubtedly best to adopt the smooth wedge-shaped section (vide end of paragraph 91).

Where the slopes are precipitous, it is better to substitute a masonry dam for an embankment, so as to avoid the tendency to slipping of the earthwork at such a place. The former design will have the added advantage that under-sluices can be made in it which will aid the waste-weir by bringing early and safely into action the "flood-absorptive capacity" of the reservoir (vide paragraph 184).

- (b) Dams on Inferior Foundations.—A really bad foundation should, of course, be avoided, as no treatment, short of removing all the defective material, will enable the dam to be constructed safely on it. There are, however. other foundations which are not good, but which can be utilised by special arrangements. The principal of this class is deep black "cotton-soil," which so often exists at the sites of dams. Where this occurs, the sideslopes of the dam should be widened at the base, so as to distribute the weight over as large an area as possible, and, as far as safety permits, should be steepened at the top of the section so as to reduce the total weight. Particular care should be paid to drainage, and a short distance inside the downstream toe of the dam should be a deep and wide trench filled with pervious, sound and stable material to prevent the movement of the subsoil. The base of the downstream toe should be founded on a layer of murumey, or shaly, material, say 5 feet thick near the centre line of the dam and gradually reduced, say, to 3 feet at the downstream toe (vide also paragraph 114).
- 75. Breaching Sections.—In paragraphs 66 (5) and 67 it has been explained that the more important parts of the dam should be raised higher than the less important ones, but it is desirable that even the latter should not be injured in abnormal circumstances. To guard against such damage "breaching sections" should be introduced wherever safely and economically practicable. These sections should, as a rule, have a height about 1 foot less than that of the flank embankment, their top-width should be reduced to 6 feet, and their side-slopes steepened as much as is quite safe in ordinary conditions. They should preferably be located where there are natural saddles in the ridge line, so that any

flood resulting from their being breached may be confined by the rising ground on each side. Where such a saddle does not exist, an artificial one can be formed by excavating, downstream of the breaching section, a channel to lead the flood safely away from the main dam. The excavated spoil can generally be used for the construction of the dam without increased cost.

The best position for a breaching section is where the channel from it can be led into the waste-weir tail channel, as then the flood from it will do the minimum amount of damage. For this reason, when the waste-weir is situated at an independent saddle, its flank embankments can be made to serve as breaching sections (Plate 6, Fig. 1, and paragraph 162).


It is not absolutely necessary that the breaching section should breach automatically; it will suffice if its section is reduced in area so that it can quickly be cut away when necessary, for, owing to the slowness with which a reservoir rises, there will generally be ample time for this action to be taken so as to save the main dam from being destroyed.

76. Berms.—In some large works, instead of flattening the downstream slope to get an increased base-width, the increase has been obtained by adding a berm, having the same, or nearly the same, side-slope as that of the upper part of the dam. Assuming the theory of the angle of rest of earthwork to be correct, the whole section is not in so stable a condition as it would be if the material of the berm were distributed throughout the dam so as to flatten its slope. The frictional resistance of a dam is a measure of its weight, and is independent of the area of its base, but its cohesive resistance is a measure of its base area; the construction of a berm increases that area more than the material in it would do were

it distributed all down the slope, so that, in this respect, a berm is useful. The chief advantages of a berm are that, by its sudden increase of the section of the dam, it tends to prevent any dislocation at the top from extending to the base and it prevents any bulging of the subsoil at the toe: further, it virtually reduces the height of the ordinary section of the dam where that is suddenly increased, as at the river crossing. Finally, in the case of a badly constructed dam with a flat hydraulic gradient (vide Fig. 1^A and paragraphs 69^A)

FIG. 2

PLAN

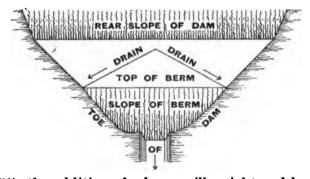

and 151), the addition of a berm will weight and buttress the toe of the embankment by affording a cover of dry material to the unduly saturated base.

A berm is also useful for carrying a road across the river gorge and for passing off from the surface of the dam the drainage due to heavy rainfall, which amounts to a considerable quantity flowing at a great velocity when the dam is a high one, and, if not diverted from the base of the embankment, might cause the formation of scour channels down the slope. Fig. 2 shows how this can be done by means of paved, water-tight drains leading

the drainage of the dam to the natural ground on its flanks. Such drains, if not water-tight, would be a source of danger, as they would tend to produce lines of super-saturation in the heart of the earthwork which might lead to the formation of slips. It may be mentioned in passing that for this reason it is not advisable to form diagonal drains down the slope of the dam to pass off its drainage; in one case where these were laid, slips were thus caused.

Berms ¹ were used in early English practice, but English engineers now appear to prefer gradually to flatten the slope of the dam than to step it out in a series of berms on which water might lodge. To prevent such lodgment of water, the top of a berm should have a slope of about 1 in 20 down stream.


It is not recommended that there should be a series of berms up the slope of the dam, but a single berm at the base of a gorge will often be found useful. Generally, its height and top width should not be less than one-quarter the height of the dam.

77. Toe Walls.—A toe wall is another device with the same object in view as a berm at the base to prevent motion at the toe. Fig. 3 shows a form which is meant to secure the foundation of the dam and not its superstructure. A trench is excavated through the unreliable foundation and is filled with drystone which is weighted by the superstructure of the wall.

Fig. 4 shows a form (really a retaining wall) which is meant to support the toe of the dam in the same way as does a berm. In all cases where earthwork has thus to be supported, it is best to make the section of the wall batter on both sides to the embankment, as shown, for it then offers an active resistance to the motion of the

^{1 &}quot;Minutes of Proceedings Inst. C. E.," Vol. cxxxii., pp. 219, 222, and 226.

earthwork, and not merely the passive one of its stable weight. Upstream of the wall a drystone drain should be laid to collect the internal drainage of the dam, and

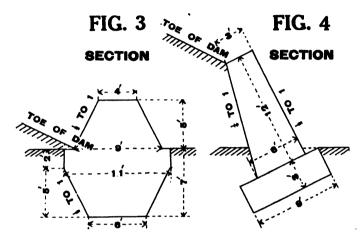

this should be passed out of the wall by one or more slab drains, or large weep holes. The drystone toe described in paragraph 128 may be considered to be the ultimate development of a toe wall.

78. The Relative Cost of the Dam and the Waste-Weir.—The height of the dam depends upon the high-flood level of the reservoir, and this again upon the discharging capacity of the waste-weir and its crest level. The longer the waste-weir is made, the less will be the depth of the high-flood over it and the lower need be the dam. Comparative estimates of the dam of different heights and the weir of different lengths should be made in order to see which is the cheapest combination, remembering (vide paragraph 166) that the longer the weir, other things being equal, the safer the work.

Again, the level of the saddle, or ground in which the weir is to be formed, may be higher, or lower, than the what full supply-storage capacity requires. It will


generally be advisable to have the weir crest at the level which will most fully utilise the total yield from the catchment. When, however, the question arises of cutting down the ground extensively at the weir site, comparative trial estimates o' the weir and the dam together should be made so as to see at what full-supply level the cheapest rate of storage can be obtained. The increase of the height of the dam does not appreciably affect the cost of the outlet, the buildings and the general preliminary charges, while the increase of its section will generally be less in proportion than the resulting increase in storage contents due to raising the full-supply level. It is usually better to have a storage capacity slightly too large than one which is too small for the catchment.

IV. MATERIALS FOR DAM CONSTRUCTION.

79. Selection of Material necessary.—The material of which a dam has to be formed requires careful selection: on the one hand, it has to be water-tight; on the other hand, while possessing adhesion, it should offer resistance to slipping. Powdery, dry material which will not bind, such as some kinds of marl (limy soil), and soils which are impregnated with salt or turn into slush by the action of water, or which when dry break into fragments with sharp angles and smooth, shining surfaces, should be rejected. Pure sand has, however, been used for some dams, as it has the property of settling into a compact mass when wetted, and the angular form of the particles gives it a considerable amount of resistance to slipping. Sand in combination with clay is, however, not good, as it admits water into the latter material but does not allow that to drain out, while its particles, being so fine, do not add much frictional stability to the clay in which they are embedded. Pure black "cottonsoil" and rich clayey earths are dangerous, as, when wetted, they become greasy and treacherous, and are thus particularly liable to slips; they are, moreover, very retentive of water. The best material is one containing enough clayey matter to enable it to bind, and thus become water-tight, and enough shaly matter to give it frictional resistance to slipping and the property of self-drainage, so that the whole mass never becomes The best natural soils are those which when dry break into tough, not brittle, fragments and have a dull and irregular fracture. When any doubt arises as to the suitability of the soil proposed to be used, small trial tanks should be made with it and should be filled with water; the behaviour of their banks should be noted when their earthwork is saturated and again after it has been allowed to dry. If the surface of the banks cracks during desiccation, it is evidence that more shalv matter should be mixed with the soil.

80. The Disposition of Material in the Section.—When the earliest dams were constructed in Bombay by British engineers there was a fear that the introduction of any material not itself water-tight would lead to infiltration of water, and thus be harmful to the stability of the work. Pure black "cotton-soil" was therefore used throughout the section (vide Fig. 5 on page 93), and it was specified that all stony particles of any size were to be removed.

The next step was to use this soil in the centre of the dam to form an impervious hearting; to weight it, and to prevent it from slipping, it was confined in place by side sections of "selected material" of heavy, shaly soil. On the upstream side this material was of an

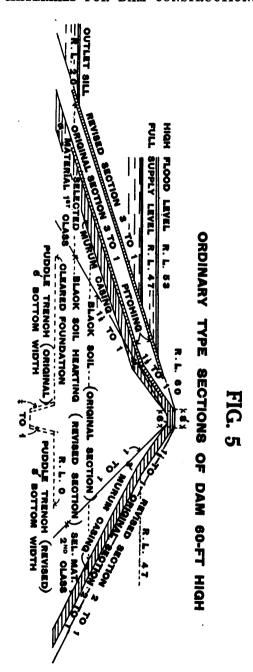

impervious nature, so as to resist the infiltration of water, and, on the downstream side, of a more shally character, so as to resist any tendency to slipping. This section is also sketched in Fig. 5. It will be seen that it is virtually of the English type, the puddle wall of which is replaced by a much thicker clayey hearting of a less retentive nature than the puddle clay that is procurable in England, but which can seldom be had in India.

The final step taken, which is the one strongly recommended for adoption, was to use a soil of the same character uniformly throughout the dam, but, instead of depending solely upon its water-tightness, to select one that was both impervious and stable under the action of water: such a soil is described in the middle of paragraph 79. There are natural soils which answer to that description, but, where they do not exist within an economical distance from the site of a work-say half a mile—an artificial mixture should be made instead. The proportions recommended are 1 of pure black "cotton-soil," or other clayey soil, to 1 of pure murum, Where these materials are not found in a or shale. pure state, the existing soils should be mixed in the proportions which will result in the production of a similar mixture.

It must be remembered that, although the upstream slope is saturated by the water of the tank, it is adjusted to meet that saturation, and is under fairly settled conditions, for the water in the reservoir will not, as a rule, rise very rapidly during the monsoon, and it will fall very gradually owing to the draw-off during the fair weather. Moreover, as far as it is submerged, that slope is supported by the water in the reservoir. The downstream slope is much steeper, but is under less

settled conditions, as it will become considerably and suddenly saturated during the monsoon downpours and less damp during the intervals between them, while in the fair weather it will be much dried. To meet this difference of conditions it is not unreasonable to form the downstream slope of material equally good and as carefully made as that of the upstream slope.

The great advantage of having the section of the dam homogeneous is that it will act uniformly as one mass during the process of settlement and self-consolidation, (which will last some years): thus will be avoided the formation of internal stresses, owing to the different rates of settlement of its constituent parts which would occur if the section were made of different materials. A difference of settlement might cause the formation of a slip, and will, anyhow, affect the disposition of the layers in which the dam was originally con-There is also a practical consideration to be taken into account in regard to the method of It is easier to arrange for a uniform construction. material throughout the section than for one varying in different parts.

81. The Casings of the Dam.—The casings of the dam may be considered to be entirely different from the main dam. Owing to their narrow width they will not affect it as a whole, and their object is a special one, namely, to protect the interior from external influences. On the upstream side it is necessary to form a firm and insoluble foundation for the pitching, and, on the downstream side, a covering which will not crack when dried by the sun nor gutter when subjected to rainfall. As the pressure of the reservoir water on the upstream side and the scouring action of rainfall on the downstream

side increase directly as the height of the dam, the casing should be wider at its base than at its top. The widths, measured normally to the slopes, recommended are:—

At the top of the dam 2 feet.

From the top of the dam to high-flood
level on both sides 2 feet.

Below high-flood level on both sides :—
increasing uniformly at the rate of
1 foot in 10 feet vertical.

The material of the casings should consist of a mixture equivalent to 1 of pure argillaceous soil to 2 of pure shale. The casings should be constructed uniformly with the hearting so as to be thoroughly bonded with and united to it, and should not be patched on subsequently.

- 82. The Utilisation of Spoil.—An economical advantage of mixing gritty material with the ordinary argillaceous earth is that all sound spoil from the excavations can thus be utilised in the formation of the dam. Where this grit exists in large quantity beyond what is required to form the prescribed mixture, the excess can be incorporated with the material forming the downstream part of the dam, and the more stony portions can be reserved for the lower part of the downstream slope. The only spoil which should be rejected for incorporation in the dam is powdery, sandy, salty or slushy material (vide paragraph 79).
- 83. American Practice.—In American practice a still greater use of gritty material obtains. Mr. Fanning 1 recommends the following proportions for dams:—

¹ "Hydraulic and Water Supply Engineering," 8th ed., p. 340.

			By volume.		Per cent.	
Coarse gravel		• •	• •	1.00	cubic yard	59
Fine gravel		• •	• •	0.35	,,	20
Sand	• •	• •		0.15	,,	9
Clay	• •	• •	• •	0.50	"	12
Total when loose				1.70	,,	100
Total when consolidated				1.25	,,	

This mixture, when properly consolidated, would be free from voids, the proportions being adjusted for this purpose, but the small amount of clay used would apparently not make the mass sufficiently impermeable. and would prevent it from possessing much cohesive stability. Mr. Clemens Herschel 1 distrusts the use of clayev material, and would not bring it on to the site of the works: he prefers a gravel that would puddle, or "binding gravel." To test the suitability of such a gravel for the construction of a dam, he would mix it with water in a pail to the consistency of moist earth as generally used in a dam. If on turning the pail upside down the gravel remained in the pail, it would be of the right character for use; but if it dropped out, it would be too gritty for employment, and should be rejected.

V. THE PUDDLE TRENCH.

84. The Object of the Puddle Trench.—Practically no subsoils are water-tight, especially under the great pressure of water due to its storage in a reservoir. Ordinary earths may be of naturally porous material, or if of comparatively water-tight material, they may exist in layers between which water will find its way.

¹ "Minutes of Proceedings Inst. C. E.," Vol. cxxxii., p. 253.

Even when compact and clayey, the upstream particles, under the great pressure of the reservoir, will become charged with water, and will thus wet the ones downstream of them, so that gradually there will be a more or less slow passage of water through them. Rocky soils are very pervious if their particles are not cemented together to form a water-tight mass. Many rocks are stratified, and the spaces between the layers are either open or are filled by dry, porous material: in fact, the only water-tight formation is one of dense, unfissured rock. The object of a puddle trench is to interpose a water-tight septum which will tend to prevent the passage through it of the water coming to it, and thus will tend to keep all the material downstream of it as dry as possible.

85. The Position of the Puddle Trench.—Taking only its water-intercepting object into account, the puddle trench should be placed as much upstream as practicable. so that the dry area downstream of it may be as large as possible. The limiting position in this respect is one where a sensible amount of infiltration through the superstructure of the dam will not pass over the trench and saturate the subsoil downstream of it. matter has, however, to be considered. The puddle filling, being of a different character to the natural strata through which the trench passes, and, usually, being originally of a more compressible nature, there will at first be unequal and generally greater settlement over it than on each side of it. For this reason the position almost invariably selected for the puddle trench is on the centre line of the dam, so that the settlement of the superstructure may be uniform on each side of that line. The greater weight of the superstructure over this line, where the height of the dam is at a

maximum, also acts beneficially in compressing the material in the puddle trench to the greatest extent.

86. The Depth of the Puddle Trench.—It is essential that the puddle trench should intercept such underground flow as would in the course of time carry away particles of the subsoil, thus enlarging the water passages and eventually causing the undermining and destruction of the dam. As it is not practicable after the completion of the embankment to make the puddle trench secure, it must be made quite safe at the time of its construction.

A less important consideration is that the puddle trench should prevent the leakage away of so much storage as would sensibly diminish the utility of the With a properly constructed trench of reservoir. ordinary dimensions, this amount of loss is, however, not likely to occur. It can be compensated for usually by a slight increase of the full storage level, seeing that the storage contents at the top contour of a reservoir are greater than those at the one immediately below it, and much greater than those at the lowest contours, while the increase of pressure, due to the small increase of level required, is practically inappreciable. In many cases also—such as where the canal or a minor channel is led off below the dam from the stream which supplies the reservoir—the water lost by leakage will be picked up by the weir forming the headworks of the distribution system.

The depth to which the puddle trench should be excavated depends principally upon the porosity of the soil through which it is carried, being made less for compact soils and greater for porous ones; it also depends greatly upon the head of water in the reservoir which it has to resist (vide paragraph 64). Assuming that good, compact soils are met with, the depth of the puddle trench need not ordinarily exceed one-half the depth of

the full-supply storage; and that the soils are fairly compact, not more than the depth of the full-supply storage. The high-flood depth need not be considered in this connection, as the duration of floods will usually be too short to increase the amount of subsoil flow to, or below, the puddle trench. The minimum depth of the trench at the flanks where sound rock is not met with should be 6 feet.

When the surface of sound, unfissured rock is near ground level, or not much below the depths above noted. the trench should be carried at least 1 foot into it, as there will nearly always be a considerable amount of leakage along the junction of the rock with the toplying soils. If the rock is much fissured, the fissured parts should be cut out: it may not be necessary to remove these for the whole width of the trench as a small trench may be excavated through the fissured layers along the upstream side or centre of the bed of the main trench, and this should be filled with puddle. or concrete in bad cases (vide Figs. 7 and 8, page 112). When, however, the rock lies at a much greater depth, the trench may be founded at the depths proposed above. provided it be carried at least 2 feet into good, compact and water-tight clayey soil, extending for some feet be'ow its bed. If such a foundation is not met with. the trench must be excavated deeper. It must be made to pass through all sandy and highly pervious layers, and, if these exist to a great depth, the idea of making a reservoir at the site may have to be abandoned.

Where the dam is situated on a narrow ridge of porous soil, or fissured rock, both the width and the depth of the trench should be increased to cut off the greater subsoil flow which may be expected there.

The nature of the subsoil is determined by sinking

trial pits through it on the centre line of the dam. If these disclose a fairly regular disposition of the subsoil, they may be spaced up to 500 feet apart. If, however, that disposition is irregular, the trial pits should be nearer together, so that the levels of the strata may be correctly determined and plotted on the longitudinal section of the dam. The trial pits should invariably be carried down to sound-rock level, so that its position and the nature of all the soils above it may be ascertained with a view to the formation of a decision as to how deep the puddle trench should be carried from point to point, and whether the foundation is reliable enough for carrying the dam.

Trial pits should always be excavated as near as possible to where the main and minor drainages cross the dam line, as there the foundation may be less reliable, the strata may vary more rapidly, and the puddle trench may have to be carried lower than is necessary at adjacent places. As bore holes, owing to their small diameter, give less reliable information than do trial pits, they should not be adopted in preference to the latter for investigating the nature of the subsoils.

- 87. The Bottom-Width of the Puddle Trench.—The bottom-width of the puddle trench depends upon:—
 - (a) The nature of the strata near its foundation level;
- (b) the nature of the filling and the amount of consolidation to be given to it at the base of the puddle trench;
- (c) the depth of the full-supply storage at the point and the importance and size of the reservoir.

Where the bottom strata are porous, the width must. be made greater than would suffice were they compact. Where the total depth of the trench is small, the width must be increased beyond what is sufficient for a deep trench. For large works the puddle trench filling should be of a more retentive quality and should be more consolidated than is necessary in the case of small works: for the former it is essential that the filling should be consolidated by rolling; for the latter, ramming will be sufficient.

Where the depth of the full-supply storage at the point is great, the amount of storage is considerable, and the reservoir is important, the width must be made greater than it need be where the conditions require less care being taken to prevent leakage.

As a general guide it may be said that the bottom-width of an important puddle trench should not be less than 10 feet, so as to give space for a roller to work, while for a small work it may be reduced to 6 feet. A smaller width than 6 feet is of little practical use in cutting off leakage. Subject to these restrictions, the base-width may be made equal to one quarter of the full-supply depth of the reservoir at the point considered; another rule for it is that it should not be less than one-eighth of the full-supply depth plus 3 feet.

- 88. The Side-Slopes of the Puddle Trench.—The sideslopes of the puddle trench have to be determined by two considerations:—
- (a) They should be flat enough to stand during excavation and until the filling of the trench has been completed;
- (b) They should be flat enough to give the puddle filling a width increasing sufficiently as it rises towards ground level to enable it to resist the greater infiltration it will have to withstand at the higher parts of its section.

In respect to (a) it may be noted that, as the time the trench will be open will generally be short, the slopes may be excavated steeper than would be necessary were the excavation to remain permanently open. They should, however, not be made steeper than $\frac{1}{2}$ to 1

in soil, nor than $\frac{1}{8}$ to 1 in rock; at the former inclination the top-width of a trench 30 feet deep and with a basewidth of 10 feet would be 25 feet.

There are certain formations where sandy pockets, or layers, occur irregularly. Where these are numerous, it is advisable to widen the trench on the upstream side, 5 feet or more, and, as the filling rises, to pick out the sand from the pockets and layers, as far as they can be undermined with safety, and at once to fill them with puddle material.

- 89. The Length of the Puddle Trench.—At the fullsupply margin of the reservoir the water pressure at the surface is, of course, practically nil, and a considerable depth of trench there is generally unnecessary. Nor need the trench be extended longitudinally for any great distance beyond full-supply level, as floods will usually be short-lived, and therefore will not have time enough to develop much additional leakage. As the slope of the country will generally be flat at this level, it will, ordinarily, suffice not to continue the trench beyond the high-flood contour. In England, in certain cases, the trench is made much longer, but that must be because the subsoil is more stratified there than it usually is in India. Of course, if a porous layer extends beyond the high-flood contour at a level below full-supply, it would lead to the out-flanking of the dam if not cut off by an extension of the puddle trench; in such a case, the trench should be continued to prevent this.
- 90. The Height of the Puddle Filling.—The puddle material is usually carried up—say, 2 feet—above the natural surface of the ground so as to prevent the formation at this level of a definite line of flow across the base of the dam. This extra height of filling should be constructed at the same time as the embankment on

each side of it, and should be rolled and consolidated with the latter, the only difference between the two parts being that of the materials of which they consist. If the completion of the puddle trench has to wait for the construction of the dam, the upper surface of the puddle should be kept a few inches below ground level for convenience of work until the embankment can be taken in hand. When the filling can be continued and completed, this temporary surface should be removed, until all cracked or loose material has been taken out, and then the remainder of the puddle work should be finished and at once covered over with embankment for its protection.

91. The Continuity of the Puddle Trench.—If the puddle filling is disturbed so that a leak is formed through it, its efficiency will be lessened, and, as its material is of a naturally soluble character, the leak may possibly increase so as to become dangerous. The puddle being of a compressible nature, any sudden change in its section may cause unequal settlement and hence a leak. It is therefore essential that such changes should be avoided, for which reason the bed should never be stepped up abruptly, but all changes of its level should be effected by gentle slopes. Similarly, there should not be any projecting shoulders left in the side-slopes, as these may prevent the filling, during settlement, from occupying all the section below them; if this happens, spaces will be left in which the infiltering water may attain hydrostatic pressure sufficient to allow it to force itself as a defined stream through the puddle.

In short, the trench, both in longitudinal and in cross section, should be bounded by slopes, and thus be wedge-shaped, so that the only result of the settlement of the puddle will be to make it more compact and fill the excavation more completely.

92. Filling the Puddle Trench.—The bed of the trench should first be roughened, so that the filling may be thoroughly bonded with it and a defined line of flow between the two may thus be prevented; for this purpose the upstream half of the trench may be excavated as a wedge, say a foot deep below the downstream half (vide Fig. 7, page 112). The surface of the bed should be cleared of all dry material, and, when clean, should be wetted to receive the filling. If the trench is carried into rock, all fissures should be cleared out, or grouted, and the surface of the bed should be washed. The bottom layer of the filling, about 1 foot thick, should be formed of carefully kneaded balls of clay thrown forcibly on to the bed and then thoroughly trodden so as perfectly to unite with it.

The subsequent filling should be carried out in layers, which, when completed, should not exceed 3 inches in These should be so formed that the whole thickness. mass will be quite free from stratification and leakage planes; this can be avoided by wetting the surface of the completed layer just before the new one is laid on it, so that the material of the latter may be forced for a small depth into that of the former and may thus be perfectly united with it. As an additional precaution, at vertical and horizontal intervals, and breaking joint with each other, small wedge-shaped trenches, say 3 feet wide and 1 foot deep, should be excavated through the completed work, and should be refilled and consolidated just before the fresh layer is added. Further, to offer as much resistance as possible to the passage of water through the material, the layers should be tilted as steeply as practicable, say 1 in 6, rising from the upstream side of the trench.

The material of the puddle trench filling should be

the most retentive clay procurable within half a mile of the site. A mixture with it of gritty stuff would make it more permeable, for, even if that material is itself water-tight, it and the clay will not be in perfect union, and water will tend to find its way between the two and will have a shorter course from one stony particle to the next than it would have through a homogeneous mass of solid clay. In the superstructure of the dam a mass of pure clay is objectionable, as it may slip, but this it cannot do in the trench, for there it will be supported by the sides of the excavation; nor can it be forced out, as it will be kept down by the weight of the embankment. In the dam itself a mixture of gritty material is useful in preventing shrinkage and the formation of cracks, in bonding the layers together, and in permitting the self-drainage of the earthwork so as to let it acquire greater stability. In the puddle trench such a mixture is not required for these purposes, as there the filling is under settled conditions and should therefore be made as impermeable as possible. filling should be constructed so quickly that no drying and cracking can take place, and the layers should be united together as above explained.

The filling material should be deposited as dry as is consistent with its being thoroughly consolidated. As explained in paragraph 63, the wetting of clay causes it to expand, and any original moistening of it, beyond what is necessary to cause it to bind, will make it less dense and more permeable, and also will diminish its power to support the dam (vide paragraph 85). The wetting that puddle (which was originally made with just a sufficiency of water) receives by percolation from the reservoir, subsequently to the completion of the dam, will cause its particles to swell and

thus render the whole mass more compact and less permeable.

The filling of important trenches should be consolidated as much as possible by rollers. Further consolidation will result from the superincumbent weight of the dam, and this should therefore be allowed to act for as long as practicable before the reservoir begins to fill, so as to prevent filtration through green material.

Before the filling of the trench is commenced all springs in it should be carefully led away in pipes, or otherwise, and, when the filling has reached a sufficient height, the pipes should be securely plugged.

In Appendix No. 19 are given tables for the calculation of the excavation and filling of puddle trenches.

93. Concrete Trenches.—The above paragraphs have dealt with earthen puddle trenches; but there is another class of an impervious septum—one made of concrete which is often adopted in England, although it is not frequently constructed in India on account of its expense. For concrete trenches the excavation is taken out in narrow timbered trenches, which in some English examples have been sunk as deep as 212 feet 1 below ground level. Such an extreme depth is justified only when the value of the impounded water is very great, e.g., as in the case of a water-supply scheme, or where the lower strata are very porous and would otherwise constitute a danger to the dam. It is doubtful if even such a great depth would entirely prevent the passage of all water, although it would be useful in affording, at a low level on the downstream side, a large extent of natural drainage area for passing off harmlessly the lessened amount of percolation water which had got through the filling of the trench.

^{1 &}quot;Minutes of Proceedings Inst. C. E.," Vol. exxxii., p. 207.

The thickness of a concrete trench depends partly upon the width necessary for its timbering, and partly upon the porosity of the soil passed through. objection to a concrete trench is that, as it is formed in lavers, it is apt to be stratified. To guard against this the surface of an old layer should be roughened and should receive a thin coating of mortar before a new layer is formed on it. The concrete should not be thrown down from a height, as then the aggregate will separate and fall to the bottom of the laver and make it porous, but it should be carefully lowered and spread on the completed layer and should then be well rammed so as to fill the trench completely. The concrete should, moreover, be rich in mortar, the aggregate should be fine, and the layers should be laid in thin courses—say 4 inches thick—in order that they may be consolidated uniformly throughout, and one course should be constructed at once on top of the other, so as to become perfectly united with it. As many courses as practicable should be made at the same time to form a single layer and thus to reduce the number of horizontal leakage planes.

In India concrete would cost nearly eight times as much as puddle, and the excavation of a timbered trench, about as many times as that of an open one. Although the puddle usually obtainable in India is not so good as that procurable in England, still the much greater thickness economically permissible with it renders it generally as safe to use as concrete.

94. Concrete Key Trenches.—While a concrete trench is not frequently constructed in India instead of a puddle trench, one may, with advantage, be made at the base of the main trench to supplement it. If a hard pervious soil exists there, a narrow trench may be excavated in

it and filled with fine concrete; the concrete should be carried up, say, 2 feet, above the bed of the main trench, so as to key into its puddle filling, care, of course, being taken properly to consolidate the projecting key (vide Fig. 8, p. 112). If there is a layer of fissured rock at the bed of the puddle trench, it should be removed and may be replaced by a layer of concrete across the whole bed, with a concrete key constructed on top of it (see also paragraph 86, p. 100).

95. The River Crossing of the Puddle Trench.—Not only is the river crossing the deepest part of the dam foundation, but also it will probably have the most fissured subsoil; extra precautions to cut off leakage should therefore be taken at it. These had best assume the form of a thick wall, with masonry facings and a hearting of fine concrete, carried up for some height into the body of the dam and continued laterally for some distance as sloping ramps into the flanks. There the wall should be keyed into the puddle trench, which should be widened out to overlap it on both the upstream and downstream sides. The foundation of the wall should be taken down into a perfectly sound, hard and water-tight stratum, and preferably into rock (vide Plate 5, Figs. 2, 5, 6 and 7).

In such cases where it is necessary to make a water-tight junction between masonry and earthwork, the face of the former should be free from projections, and may, indeed, be plastered over with mortar or luted with clay. Water is said to have an abhorrence to a right angle, for which reason small right-angled staunch pilasters should be formed at intervals along the upstream face of the wall, and, intermediately between them, should be small key recesses, so that the masonry and the earthwork may be joggled and united together.

Immediately to the downstream side of this concrete wall and parallel to it should be a continuous drain formed in the usual way and leading to the main rear drain (vide paragraph 108).

Where minor drainages are crossed, the puddle trench should be widened and deepened, and, if necessary, a concrete key trench should be constructed below it.

96. The Drainage of the Puddle Trench.—Notwithstanding all precautions, some water is sure to pass through the puddle trench. Certain English engineers dispute this, and state that the puddle trenches of their works are absolutely staunch. Possibly leakage does occur through them, but is not directly apparent, as it may be carried away unperceived through porous lower strata, and may not appear on the surface for some distance from the sites of the reservoirs. Hence, when the subsoil is pervious, the drainage of the puddle trench is not so necessary as when that is fairly impervious. In Indian reservoirs there is no doubt that underground percolation does occur: the level of the water in wells in the neighbourhood of reservoirs is raised, and clear springs issue at rocky outcrops below the works. Compared to the great length of the dams and the great pressure of the storages, the amount of loss from this source is very small, but still it takes place. In India the objection to leakage is not to its amount, which can be compensated for by a small increase to the contents of the reservoir (vide paragraph 86), but to its effect in soddening the area below the dam. In a well-constructed dam, owing to its great thickness, there should not be any percolation through it, and the actual junction of the base with the natural ground can also be made staunch owing to the great length through which the leakage has to find its way.


The case is different with the puddle trench. Compared with a dam 60 feet high, having a base-width of, say, 310 feet, a puddle trench 30 feet deep may have a top-width of only 25 feet, or only one-twelfth the width of the base of the embankment, and it is enclosed on both sides by material of a more or less porous nature. The filling of the trench is certainly not twelve times as staunch as the material of the superstructure of the dam, and it would therefore seem reasonable to attribute the leakage which is visible below a reservoir to percolation through the puddle trench.

The questions to be decided are:-

- (1) Should this leakage be allowed to sodden the area downstream of the dam? or, should an attempt be made to lead it away harmlessly? and
- (2) Can it be drained away without inducing a still greater amount of percolation, which may endanger the stability of the work?

It is believed that the answers to these questions are that:—

- (1) The soddening of the area below the dam is at least undesirable, even if it is not distinctly dangerous, and endeavours should be made to prevent it; and
- (2) The puddle trench may be drained with safety and without inducing a greater flow through it.
- 97. The Construction of the Puddle Trench Drain.—Figs. 6, 7 and 8, show three forms of puddle trench with drains adapted to meet the conditions described therein. In each case a drystone drain is shown with a vent of 6 inches height and 4 inches width, which are the minimum dimensions at the head of the drain: in a long puddle trench the vent might be increased gradually to 9 inches square at the outfall of the drain. The minimum thickness of the sides of the drain should be

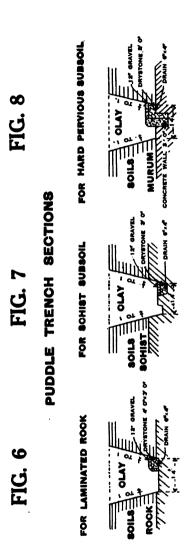

9 inches, and that of the slab covering, one varying from 6 inches for a 4-inch vent to 9 inches for a 9-inch vent. Round the drain should be a ring about 18 inches thick, of sound, clean and sharp small rubble; this should be surrounded by a ring about 9 inches thick of clean gravel, small quarry spauls, &c., and that by a ring about 6 inches thick of clean, coarse sand. The object of these rings is to enclose the drain by filtering material (through which soil cannot be carried), so that the vent may always be clear.

The bed of the drain should be solidly founded to prevent any settlement, and, if not of rock, should be formed of through slabs laid in mortar: the sides should be made of long stones laid in mortar with narrow dry joints on the upstream side at intervals, of say 5 feet, to act as weep holes; the top should be of through slabs laid in mortar, with narrow open joints at similar intervals intermediate with those of the sides. drain should slope continuously from its head to its tail, and no part should be lower than any portion of the length downstream of it. Where the puddle trench has a dip, the bed of the drain should be carried across it at its own regular inclination and should there be supported by a masonry or concrete foundation. low part of the bed of the trench itself, at such a dip, can be drained upwardly by means of an iron pipe, having its outlet end carried up so as to discharge into the drain at its roof, and built in in masonry to secure permanency to the vent (vide Elkington's system, paragraph 108, p. 127). Or, better still, the whole of the low part of the bed of the puddle trench should be excavated to a narrow section and filled to the level of the bed of the drain with concrete, and a small concrete key should be formed on top of the drain.

To prevent, during construction, the clogging by earth of the rings of dry material surrounding the drain, the clay filling of the base of the puddle trench should first be constructed for a height of about 1 foot above the top of the future sand cover of the drain, and this will enable that filling to be consolidated thoroughly. The space to be occupied by the drain and its filtering cover should then be neatly excavated, the drain built and surrounded by the filtering material, and covered by at least 1 foot of clay carefully rammed; thereafter, the filling of the whole trench should be resumed for another 2 feet, giving, temporarily, a total earth cover of 3 feet above the filtering materials.

Before the trench filling is raised any higher, it is desirable to complete the whole length of the drain and to test its freedom from obstruction by passing water down it. Similarly, it may be advisable to finish off the upstream end of the drain by building it up along the downstream slope of the puddle trench there, and then to carry the drain with a gentle upward slope out of the dam to a closed cistern, so that, if necessary, it may be tested and flushed with water at any time after the completion of the embankment.

98. Infiltration not induced by the Puddle Trench Drain.—The construction of the drain necessitates the widening of the base of the puddle trench to a minimum width of, say, 14 feet, which, of course, entails so much extra expenditure, but is otherwise an advantage, as the wider trench will be all the more water-tight. As the drain will be formed at the downstream edge of the puddle trench, there will be a considerable thickness of puddle between it and the upstream edge, and there is not any reason why it should induce an excess amount of percolation. On the contrary, it should keep the puddle filling

above it well-drained and thus render it more compact and impervious. In a well-constructed puddle trench the subsoil water will tend to descend along the upstream face of the puddle to the base. If it does not there meet with a means of escape, it will endeavour to force itself up, thus rendering the filling less compact and more The drain, by leading away this relatively pervious. small amount of percolation, provides the required means of escape, and thus tends to prevent the puddle filling from becoming deteriorated and the base of the dam from becoming sodden. In England, when springs are met with, they are generally led out of the trench by means of pipes, which is an arrangement for securing drainage at The above-described drain is designed definite points. to intercept percolation water throughout the whole length of the puddle trench and to pass it safely out of the dam.

The drain should not be continued all the way up the downstream face of the puddle trench, for such a long, thin layer might suffer distortion or disturbance from the lateral pressure of the puddle or of the earthen sides of the trench, and might become discontinuous and thus harmful by first collecting and then impounding water. In the case of a concrete trench in hard soil, this dislocation would not occur, and the concrete with advantage might be backed by a rubble lining to act as a drain (vide Fig. 8, p. 112).

99. Puddle Trenches not suitable for Famine Work.


—The excavation and filling of even ordinary puddle trenches have to be executed with comparative slowness, and to be carefully supervised; more especially will this be the case if base drains have to be formed. Such work is, therefore, not suitable for the employment of large bodies of famine relief labourers (vide end of paragraph

- 113). Where the construction of storage works has been set aside for relief purposes, it may therefore be advisable to complete the puddle trenches in advance. The filling should in such cases be carried up, say 2 feet, above ground level to protect it from being dried, and this 2 feet should be constructed of a fairly porous mixture to permit of the infiltration of rain water, which will keep the filling moist. When the dam has to be commenced, this 2 feet and any underlying part which may be dried and cracked should be removed and replaced carefully by puddle material.
- 100. Nulla Puddle Trenches.—If the dam is on a sharply-defined ridge line, there may be at the base of the ridge a nulla, parallel to the dam and close to it, which may disclose porous strata below the level of the bed of the main puddle trench, and these would, if not dealt with, allow leakage water to pass below the trench. In such a case it is advisable to form a subsidiary puddle trench along the downstream edge, or side next the dam, of the nulla (vide Plate 4, Figs. 1 and 2, and Plate 5, Fig. 3).

After the reservoir is completed, its water will pond up along this nulla bed and retard the flow of the nulla water, so that fine silt will be rapidly deposited in the deeper part of the bed, *i.e.*, that nearest the main stream, and will fill it with fairly water-tight material.

101. Proposed Concrete Trench for the Bohio Dam, Panama Canal.—Mr. J. T. Ford, M.Inst.C.E., has described a novel and ingenious arrangement for the construction of a concrete trench for an earthen dam across the large Chagres River, which is liable to bring down enormous floods. Such a trench may be 128 feet

¹ Engineering News, Vol. xlviii., pp. 377-379, Nov. 6th, 1902.

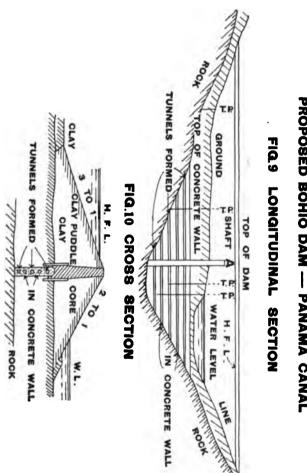

PROPOSED BOHIO DAM — PANAMA CANAL

deep below the low-water surface of this perennially flowing river. Stated shortly, he proposes (vide Figs. 9 and 10) to sink a shaft A on one bank beyond the reach of ordinary floods; to carry it down to bed rock; to build it above the reach of extraordinary floods: and to follow the bed rock on both sides from it by tunnelling, (freezing the water-bearing soil, if necessary), and by adopting the shield form of excavation, or, if the conditions permit, by means of ordinary trench timbering. The surface of the sound rock having been cleansed, the tunnel is to be filled with concrete. After the tunnel at the bottom has thus been completed, another one is to be excavated above it. and is to be filled similarly in perfectly water-tight connection with it. The trench is thus to be gradually completed by a series of similarly constructed layers in tunnels. The top section, replacing the bed of the river, might have to be carried out in open excavation by means of ordinary caisson and pneumatic work, sheet piling, cofferdams and dredging. When filling the successive tunnels, open culverts are to be left in them for the purpose of inspection at any time after the completion of the work. He also proposes to make an ordinary puddle wall on top of the trench, but a masonry core wall would seem to be the better form of superstructure for such a foundation.

The expense of such a construction would be so great as to prohibit its use in India, except, perhaps, in works of equal magnitude presenting like difficulties. It is described as an ingenious proposal for meeting the conditions which exist at the site of the contemplated work.

102. Excavation in the Reservoir Bed.—In order to prevent percolation under the dam as much as possible, excavation should not be allowed within the areas imme-

diately next its toes. The minimum width of these areas, on the upstream and downstream sides respectively, might be four times and two times the height of the dam at the point considered. Further, the entire stripping off of the water-tight cover of pervious strata on the upstream side should be prohibited within a minimum width of ten times the height of the dam, measured from its upstream toe. Although such excavations will soon silt up, they will not become water-proof for many years, and, until they thus again become staunch, they may cause excess subsoil filtration, which may act prejudicially on the newly-formed dam.

VI. THE PUDDLE WALL.

- 103. Central Puddle Walls.—In England it is the general practice to make a puddle wall along the centre line of the dam and vertically over the puddle trench, so as to form with it a water-tight septum, (extending throughout the dam from below bed-rock level to above high-flood level), so as to intercept any infiltration that may have penetrated so far. The following are the sections¹ which have been adopted for the puddle wall for certain works:—
- (a) Dale Dyke dam—top-width, 4 feet; batters, 1 in 16, giving a base-width of 16 feet where the dam is 96 feet high; this section is very light.
- (b) Vehar dam, Bombay waterworks (in this particular not a typical Indian dam)—top-width, 10 feet; batters 1 in 8.
- (c) The Bann and Harelaw dams—top-width, 8 feet. Rankine states that the thickness of the base of a puddle

The Engineer, Vol. lxiii., p. 189.
 Rankine's "Civil Engineering," 11th ed., p. 704.

wall should be about one-third of its height, and that the thickness of the top should be two-thirds, or one-half, of that of the base.

The objects of placing the puddle wall in the centre of the dam are:—

- (1) To make it in vertical continuation of the puddle trench:
 - (2) To diminish its quantity to the minimum;
- (3) To protect it from the action of the reservoir and the weather, and from damage by vermin.

The disadvantages of this position are:-

- (a) It may be distorted or broken by unequal settlement of the embankment on each side of it, and during its own settlement, which will be considerable in amount;
- (b) It is buried out of sight, and cannot be repaired for any considerable depth;
- (c) The embankment upstream of it may be saturated to an undesirable extent.

The Board of Engineers¹ who examined the design for an earthen embankment for the Croton Dam, considered that a puddle wall would effect a drop in the hydraulic gradient of the line of saturation of 17 per cent. of the pressure head in the reservoir. They found the dams observed by them to be saturated as far as the puddle wall (i.e., the hydraulic gradient was level up to this point), which would seem to indicate that this upstream portion had not been constructed sufficiently water-tight, and that the puddle wall tended to raise the line of saturation upstream of it (vide Fig. 1^A, p. 78).

104. Slope Puddle Walls.—Another position in which the puddle wall has been placed is on the upstream slope of the dam so as to form a water-proof covering to it. The

¹ Engineering News, 28th November, 1901, pp. 410-413.

advantages claimed for the puddle wall in this position are that:—

- (1) It will settle regularly with the upstream slope;
- (2) Being on the surface, it can be repaired at any time when necessary;
- (3) It renders the whole mass of the dam as dry, and thus as stable, as possible.

The objections raised to it are that:—

- (a) It has no direct connection with the puddle trench, and thus subsoil water is not intercepted at it and may enter and soak the dam;
- (b) It involves the construction of a greatly increased amount of puddle work compared with that in a central wall;
- (c) It is liable to be washed by waves in the reservoir, to become cracked when exposed to the sun, and to be penetrated by vermin;
- (d) It may not be able to stand at the ordinary slope of the dam.

In some works the puddle wall has been placed between the upstream slope and the centre line of the dam. In such a position its advantages and disadvantages are between those of the ones described above. The general opinion of English engineers is much in favour of the central position for the puddle wall, but Indian and American engineers, when they adopt a puddle wall, seem to prefer placing it on the external slope, in order to secure greater water-tightness of the dam as a whole.

105. Puddle Walls not now adopted in Indian Practice.—In modern Indian dams puddle walls have not usually been constructed on account of their disadvantages, as described above. Indian engineers prefer to

¹ Schuyler's "Reservoirs," p. 281.

form the dam as one homogeneous whole and to make it solid and compact throughout, so that water cannot penetrate it to any great extent. The cheapness of labour in India permits of this being done there without great expense, but, as the compactness is obtained by rolling alone, thus thoroughly to consolidate the dam would not seem to be an extravagant precaution to take in any country; it will also secure the earthwork from the bad effects of an excessive amount of settlement. If, however, a water-tight septum is desired, it would appear better to adopt the masonry core wall (vide paragraph 58) than the clay puddle wall, as it is less liable to failure, and because good puddling clay is not usually procurable in India.

The puddle wall is economical by limiting the amount of material to be made water-tight, but its use implies that the earthwork upstream of it is not reliable, and to have so large a mass saturated with water is most undesirable. The introduction of the puddle wall destroys the homogeneity of the dam, and this homogeneity is one of the principal objects which sound design and construction should secure.

VII. THE DRAINAGE OF THE DAM.

106. The Necessity for Drainage.—The proper drainage of the base of a dam is a matter of great importance, as, if arrangements for it are not made, it is possible that the embankment may subside, or slip, and instances of such failure have occurred. It is easy during the construction of the work to take such precautions as are necessary, but very difficult to effect perfectly reliable repairs after a dam has been completed. Drainage should be carried out before damage occurs rather than deferred until that has happened.

The maximum amount of percolation tends to take place along the junction of the dam with the ground, being derived, either from leakage from the reservoir finding its way along this course or up through the subsoil, or from moisture descending from the heart of the dam itself until it is stopped by the foundation. natural surface of the ground, being weathered and usually not having been subjected to pressure, is less compact than are the subsoils of similar constitution. The action of the sun in drving up the surface tends to produce cracks, which, in the case of "cotton-soil," are often visible for several feet in depth, and may extend still deeper. With other soils these surface cracks are not so deep, but they probably exist in all varieties to a more or less extent and facilitate percolation. proper treatment of the actual surface is described in paragraph 113.

- 107. The System of Drains Proposed.—The system of drains proposed is illustrated in Plate 4, Figs. 1 and 2, and Plate 5, Figs. 2, 4, 5 and 6, and is described below.
- (a) The "Surface Drain."—There is no harm in dressing the surface of the ground at the rear of the downstream toe to a small depth provided this excavation is drained and the formation of swamps is prevented. The general line of thrust due to the weight of the dam is inclined downwards, and the natural surface does not resist it as a buttress; it, of course, weights the subsoil and prevents it from rising, but the removal of a small amount of this weight is immaterial in this respect. It is far more important to prevent the whole of the subsoil at the rear of the embankment from getting sodden, for, if it becomes thus wet, it will tend to give under the weight of the dam. For this reason it will be best to slope off the ground just below the dam for a width of, say, 30 feet at

an inclination of about 1 in 10 and with a longitudinal fall sufficient at once to carry away any rainfall running off the slope of the dam, even should weeds grow on the dressed surface.

This "surface drain" should be constructed in sections corresponding with the changes of the slope of the ground level and not more than 300 feet long, each section being separated from the neighbouring one by an unexcavated strip, say 10 feet wide, which will pervent the formation of longitudinal scour channels.

The flow at the downstream ends of these sections should be diverted from the dam by small outfall gutters (which should be carried in water-tight channels over the "downstream drain"), and should be discharged some distance below the embankment.

(b) The "Downstream Drain."—Just downstream and clear of this "surface drain" should be a parallel "downstream drain," which may have a base-width of 5 feet, side-slopes as steep as practicable up to 1 to 1, and a depth of from 10 feet to 15 feet; it should preferably be carried down to 1 foot below the surface of unfissured, sound rock, if this exists within a moderate depth. It should have a small drystone base drain with a vent, say 4 inches wide and 6 inches deep at the head, and, if the ground levels permit, should be divided into sections, separated from each other by unexcavated soil 10 feet wide, each leading out to the natural surface by outfall drains similarly constructed. If the ground levels do not allow of this being done, the drain should be continued until it can discharge into the river bed, the size of the vent being gradually enlarged to pass off the drainage as it increases in amount.

The trench excavated for the drain, (which should, of course, have a continuous bed fall), should be filled up to

3 feet below ground level with quarry spauls and dry material from the waste-weir and other excavations. This filling should be of coarser particles at the base and of finer ones at the top, and should be lined at the sides and covered at the top by 1 foot of coarse sand and fine gravel. The whole should be finished off by 2 feet of soil, which, with advantage, might be carried a little above ground level, so as to mark the position of the trench and so as to prevent water from lodging above it.

This drain will effectually drain the ground on the downstream side of the dam and for some distance below it; it will also intercept and pass off percolation rising from the puddle trench and prevent it from soddening the base of the dam. Further, it will have a decided effect in reducing the salt efflorescence which damages agricultural land below some dams. This efflorescence is due to the upward passage of subsoil water, charged with dissolved salts, in excess of what the natural subsoil drainage can pass off. As this upward moisture is continually evaporated by the sun, the salts thus crystallise out on the surface and form an efflorescence, which is frequently fatal to plant growth.

The "foundation drains" (vide paragraph 112) below the downstream part of the dam can be led by cross drains at intervals into this "downstream drain."


Mr. Kreuter has proposed an "auxiliary drain," about half-way between the puddle trench and the downstream toe of the dam, with an auxiliary puddle trench downstream of it to prevent water from passing beyond it (vide Fig. 11).

He rightly observes that, not only is it necessary to prevent slipping from occurring within the mass of the

¹ "Minutes of Proceedings Inst. C. E.," Vol. cxxxii., p. 263.

dam, but also in the subsoils below it. It is to cut off percolation water from lubricating the subsoils, especially at their junction with the bed rock, that he has proposed this drain in addition to a puddle trench drain. The

FIG. 11

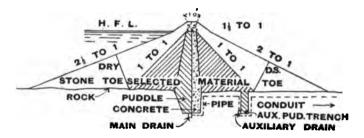

proposal is based on sound ideas, but, as the number of drains below the superstructure of the dam should be as few as possible, it is questionable if this additional interior drain is necessary. The puddle trench drain and the downstream drain should drain the subsoil between and below them, but the auxiliary puddle trench must tend to keep the enclosed area moist.

Mr. Kreuter also proposes to make the central core wall of two portions to secure perfect water-tightness—on the upstream side of plastic puddle and on the downstream side of rigid concrete. This seems to be a refinement which could not easily be carried out in practice.

108. "Rear Drains."—At all valley lines crossed by the dam, "rear drains" (Plate 4, Fig. 1, and Plate 5, Figs. 2 and 6) should be run at right angles to the centre line of the dam with as steep a bed slope as possible out to the surface of the ground. They will pass off the flow from the "downstream drain" and "puddle trench drain" to the natural drainage lines of the country.

Where they are excavated in soil, they should be of the underground type (vide paragraph 109).

The "main rear drain" in the river bed will generally be in rock, and should, anyhow, be in open excavation, so that its free discharge can be observed and maintained at all times. It should be protected from cross drainage, bringing in silt and débris, by means of good side embankments, and care should be taken that its outfall is not choked by material brought down by the erosion of the waste-weir channel. As it has to drain the highest part of the dam, the greatest care is necessary always to keep it clear.

The bed of the puddle trench at the river crossing will probably be near the surface, and, in such a case, it can be drained directly into the main rear drain. Where, however, it is at a low level and the natural fall of the rear drain is gentle, the former can still be drained into the latter by a short drain led upwards with a rapid slope from its bed and made to discharge above the full-supply level of the main rear drain, so that there may not be any back flow to the puddle trench drain from that drain. The sloping drain, by affording an easy exit to the puddle trench drainage, will prevent the base of the puddle from becoming sodden. This artifice of upwardly draining subsoil water (Elkington's system) has already been tried with success in agricultural practice in cases where a retentive soil on rising ground is underlain by an imprisoned, permeable, and water-bearing stratum. assimilates in principle to that of the artesian well.

To assist in maintaining the main rear drain clear, it is advisable to construct near its head a flushing pool, in which the drainage can be gradually stored and then passed out rapidly at intervals to scour out any silt that may have been deposited in the lower part of the drain. As the drainage water will itself be clear, this pool should not silt up, but probably it will have to be kept free of weeds.

A small gauging weir notch should be placed above this pool, so that a daily record of the drainage discharge may be obtained. Similar gauges should also be fixed on other important drains.

As long as the drains run clear, it shows that no damage to the embankment is happening. Should, however, the flow be discoloured it is an unmistakable sign that a leak is in process of formation, and the longer such a flow continues, the greater will be the danger. The source of such excess percolation should at once be found and the defective part of the embankment should be cut out and refilled, even if this involves the running of the storage to waste. Fortunately, such cases are practically unknown in Indian dams, and need never occur if the construction has been sound.

A simple and convincing test of the efficiency of the drainage arrangements will be afforded by the condition of the ground at the rear of the dam. If that is free from excess moisture, it is certain that the drains are working properly. Swampy places, on the other hand, are sure indications that the subsoil percolation has not been properly intercepted by the drains, and the defective lengths should at once receive attention.

109. Open and Underground Drains.—Shallow drains in clayey soils are of little use for draining the rear of the dam, as they do not tap the deep-seated percolation water. This finally rises between them to the surface, and, being retained by it, soddens it and produces a marsh, in which grow in profusion reeds and water plants, which add a further obstacle to drainage. Such drains are also not useful for draining porous soils, which, before becoming

charged with water, can themselves pass off most of the supersaturation, although they may become deteriorated Deep drains, extending if possible to the bed rock, are therefore required in both cases. If these drains are made as open trenches, they are liable to slips, to become choked with silt brought into them from the surface, and to be blocked by the growth of weeds, so that in a few years, if not properly maintained, they are likely to lose most of their efficiency. The system of underground drains described in paragraph 107 (b) is therefore recommended; such drains will continue to run clear, as their sides cannot fall in, surface silt cannot be brought into them, and weeds cannot grow in them. As they can generally be filled by refuse dry spoil, their cost beyond that of ordinary borrow pit excavation for the dam will not be very great, and is well worth being incurred for the advantages they secure.

110. The Self-drainage of Earthwork.—The ordinary Indian soils available for dam construction are not absolutely water-tight; in fact, it may be doubted if such earths exist anywhere. A very retentive soil will thus admit a certain amount of water into its mass, but, as the hydrostatic gradient of this infiltering water lowers the further it penetrates, if the section of the embankment is sufficiently wide, there will not be any percolation at its downstream limit, but the mass will become more and more charged with water the nearer the source of supply is approached. Retentive soils become greasy when wetted, and the worst varieties tend to become slushy when sodden. It is, therefore, most desirable to prevent the heart of an embankment from becoming saturated with water (vide paragraph 69A), and for this reason measures should be adopted to make the earthwork able to drain itself of superfluous water, which would become dangerous

should it lubricate the whole mass, or should it collect from a large area and find a defined line of escape. Such measures consist in mixing with pure argillaceous soils a certain amount of shaly material, which gives the dam this power of self-drainage at the same time that it increases its frictional resistance to slipping. If the dam is made wholly of dry, gritty material, that will, of course, allow the passage of water freely through the embankment, and such a soil should therefore not be used for its con-There is, however, a mixture affording a happy mean between excessive retentiveness and excessive porosity, and one which, without inducing percolation at the upstream part of the dam, will enable the largest extent of the downstream part of the earthwork to be self-drained and thus maintained in the most stable The mixture recommended, (vide paragraph condition. 80), is one part of pure black "cotton-soil" to one part of clean murum, or such other mixtures of existing soils as will result in the formation of a material with those proportions of clay and grit.

Theoretically, the parts of the section of a dam should become gradually more and more shaly and less and less clayey the further they are removed from the source of supply of the infiltering water. In practice, such a gradual change of material is difficult to carry out, and an uniform mixture is therefore desirable. If, however, there is an excess of gritty material available, it is best to utilise it in an increased proportion on the downstream side of the centre line of the dam. Every precaution should be taken on the upstream side of that line to make the earthwork as resistant as possible to infiltration; and on the downstream side to give it the property of self-drainage, so that the percolation water, which must penetrate the embankment, may quickly and harmlessly pass out of it.

VIII. THE FOUNDATIONS OF THE DAM.

111. Order of Suitability of Natural Foundations.— The best foundation for a dam is one of compact, unfissured rock, provided it is level, or does not slope steeply downstream, as then it would tend to cause a slip. A small downwards inclination of the surface upstream is not so great a defect, owing to the upstream slope of the dam being flatter and being supported by the water To prevent any slipping of the earthwork when the base is slightly sloping, the rock surface should be roughened by shallow trenches excavated in it parallel to the axis of the dam, and parallel core walls should be built at intervals projecting from it into the embankment (vide Plate 5, Fig. 2). If the surface of the rock is fissured it should be removed on the upstream side, and infiltration through lower fissures should be prevented by excavating cut-off trenches down to sound rock and filling them with fine concrete: small fissures may be grouted with cement.

The next best foundation is less compact rock, the unsound parts of which upstream of the puddle trench would have to be removed, but those which are downstream of it might be allowed to remain for the sake of the means of drainage which they afford. Following this is compact murum. These three classes of foundation have the great merit that they will not be sensibly compressed by the immense weight of the dam.

After these come, in the order named, mán (a hard clay soil), brown and red soils, and black "cotton-soil"; they all require special precautions for drainage, as they will yield under a heavy weight when sodden, and if they are tilted to any great extent, may slip. Some engineers prefer a foundation of clay, so that the dam

may unite perfectly with it, and consider that a rock foundation is liable to cause foundation leaks, but these can be prevented by a series of concrete trenches, whereas with clay it may not be possible to prevent deterioration of the foundations.

All soils which are light and powdery and wanting in cohesion, and all which under the action of water become slippery or slushy, are quite unsuitable either for the foundation or for the construction of a dam. Soils which contain carbonate of soda and deliquescent salts are particularly dangerous, owing to their power of dissolving, when wetted, the earth which contains them. If such soils exist for a moderate depth below the seat of the dam, they should be entirely excavated and thrown to spoil. If, however, they are deep and the expense of their complete removal is too great to be faced, the site will have to be rejected.

The essentials of a good foundation are that it should be of a compact nature, which when wetted will not yield, unevenly or extensively, nor slip under the weight of the dam. It is not necessary to have for an earthen dam the absolutely rigid base required for a masonry dam, but, the nearer the foundation of an earthen dam approaches this degree of excellence, the better. thorough drainage of the bed of an embankment is a matter of vital necessity. To ensure it, it is always well to select a site for the dam where the fall of the main drainage lines will facilitate the rapid passage off of all Fortunately, most dams are constructed subsoil water. on ridge lines, which afford the required means of natural drainage owing to their elevation above the rest of the country.

112. "Foundation Trenches and Drains"—As stated in paragraph 106, the maximum amount of percolation

might probably occur along the junction of the dam with its foundation; it is therefore necessary to take greater precautions here—firstly, to prevent infiltration as much as possible, and, secondly, to drain off harmlessly the water which has not been stopped.

Plate 5, Fig. 4, shows how this may be done. On the upstream side of the dam is a series of small puddle trenches, parallel to the main central one, of which one or more may be made of greater width and depth than the others to aid in preventing subsoil flow along a defined plane. Like the central puddle trench, they should be filled with as retentive material as can be found within half a mile of the site.

On the downstream side of the embankment is a similar series of trenches, but these are filled with porous material to form the "foundation drains," which will drain, uniformly and thoroughly, the whole of the overlying part of the dam. The porous material should be protected from silt infiltration by a sand cover, and should itself be arranged so as to have its coarser particles at the bottom and its finer ones at the top; it can be procured from suitable excavation spoil of a sound nature. It is not necessary that slab drains should be built at the bottom of these drains, as each of them will have to deal with but very little water. They should be excavated in discontinuous sections, say 300 feet long, falling uniformly to their downstream ends, where they should be connected by cross drains of similar section which should be carried at right angles out of the dam and continued well below the "surface drain" in covered slab vents leading to the "downstream drain" which will form their outfall. To prevent the formation of long continuous drains under the dam, each section should be separated from its neighbour

by an unexcavated strip, say, 5 feet wide, with its downstream end slightly sloped to the lower section. If it is considered desirable to maintain a constant watch over the flow of the cross drains, they may be made to discharge into the "surface drain," but the better arrangement for this will be to form small inspection chambers in them where they emerge from the dam.

١

It may be noted that even the nearest of these "foundation drains" will be so far removed from the reservoir that they cannot possibly induce any leakage from it.

This system of drainage is far superior to one that is sometimes adopted in which there is only a series of drains at right angles to the centre line of the dam, corresponding to the cross drains described above. Such right-angled drains, occurring, as they will do, at intervals only, will drain the whole base irregularly, and will thus tend to produce unequal settlement and, possibly, a slip by concentrating the drainage along defined lines.

113. Benched Foundations of the Dam.—The whole seat of the dam outside the puddle trench should be stripped of unreliable soil and fissured rock where that is exposed on the upstream side, and should then be excavated into a series of large furrows parallel to the centre line of the dam and having their troughs above the "foundation trenches and drains" (vide Plate 5, Fig. 4).

The object of these benches is to let the dam rest on a series of slightly inclined planes, which will tend to make its layers settle towards, and not away from, the centre line, and will thus increase the stability of the whole mass. The downstream benches have the further advantage of leading all the percolation water from the overlying part of the dam uniformly to the "foundation drains," and of preventing any subsoil water from rising into the embankment. Benches are often made level; they then do not tilt the earthwork toward the centre line but rather have the effect of causing unequal settlement at the steps thus formed; nor, what is of greater importance, do they improve the drainage of the base of the dam. As the material excavated from the benches should be of good quality, it should be suitable for the formation of the neighbouring sections of the dam.

At the steep sides of the river gorge the benches should be formed in a different way, namely, at right angles to the axis of the dam and with a continuous slope falling towards the natural flank (vide paragraph 74 (a)). the object of the benching is to make the embankment settle tightly both on to its base and on to the sides of the gorge. To prevent the formation of direct leakage planes, unexcavated strips, say 5 feet wide, should be left on the upstream side at intervals of, say, 50 feet, so as to close the furrows of the benches. On the upstream side of these strips the small puddle trenches should be excavated parallel to them so as further to aid in cutting off leakage. On the downstream side of the centre line of the dam the "foundation drains" should be excavated in the troughs of the furrows, and each should be led out of the dam independently of the others.

This preparation of the surface, being slow work, is not suitable for the employment of famine labour, but, being all in the open, can be undertaken by such labour if it is started when the numbers are few, or if certain selected gangs are drafted to the work after the numbers have become large. It could be done only at considerable expense in anticipation of famine work becoming neces-

sary, as in that case the whole of the embankment would have to be raised a few feet above the prepared surface to protect it from injury.

- 114. Deep Black "Cotton-soil" Foundations.—Where these exist, it may be desirable to fill the downstream benches, and to make the embankment over them for a few feet in height, with double the ordinary proportion of gritty material, so as to give the superstructure a firm, insoluble bed over the whole area. This and the flattening of the slopes on both the upstream and downstream sides should sufficiently distribute the pressure of the dam on the subsoil (vide paragraph 74 (b)).
- 115. Sandy River Bed Foundations.—Where the river bed is of deep, compact sand with some clayer matter in it. it may occasionally be more economical to leave this unexcavated on the downstream side of the puddle trench. and to prevent its motion by a strong masonry toe-wall. The sand will thus act as a natural drain to the base of The part of the bed upstream of the puddle the dam. trench should, of course, be entirely cleared of sand, and, as a further precaution against direct infiltration, the puddle trench itself should be widened considerably. The chief danger from not excavating the downstream part will be the possibly unequal settlement of the two portions of the base of the dam, but this can practically be obviated by raising the dam slowly, and by giving it a year in which to settle after completion before the reservoir is filled. Should the expense of these precautions approach the cost of the entire replacement of the sand by embankment, it is obvious that it will be better to effect that replacement rather than to economise a little by retaining the natural sand in the downstream part of the river bed.

IX. THE CONSTRUCTION OF THE DAM SUPERSTRUCTURE.

- 116. General Formation.—The method of constructing the dam is:—first to wet slightly the layer last completed; on the wet surface to spread and mix the material of the new layer; and then to consolidate it. On the completion of the layer, the process is to be similarly repeated for the next one, and so on. These operations are described in detail below.
- 117. Watering.—The sole use of water is to unite the constituent layers of the dam into one solid, unfissured mass; the quantity of it used should be restricted so as to be sufficient only to form a thin film of moistened material on top of the completed layer, into which the dry material of the layer under construction may be forced during the process of its consolidation. excess of water beyond this will make the layer too moist and will expand its constituent particles, thus rendering it less compact as a whole (vide paragraph 63). Should a great excess of water be used, it will form slush, which will be evidenced by the upper layer moving before the roller with a wavy motion and cracking. Such slushy parts should at once be cut out, the excavated material should be put on one side and allowed to dry before it is again used, and fresh material should be carefully consolidated in its place.

Where the soil used in construction is very dry, it is a good arrangement to wet overnight the borrow pits from which it is obtained and then it will be found on the following day suitably damp for excavation and use.

After a few feet in height of the embankment have been constructed, it is advisable, by means of a hose, to pour water over the slopes for several days until they become so consolidated by the washing in of the fine particles of the soil that the water no longer penetrates, but at once runs off them. The slopes will then be found to be extremely compact for a depth of 3 or 4 feet, and each to have so hard a surface that the one on the downstream side will not be guttered by rainfall, while that on the upstream side will form a sound bed for the pitching.

118. Spreading and Mixing.—The clayey material should first be evenly deposited on the finished layer and should then be evenly covered with the shaly material; the thicknesses of the two should be regulated by experiment so as to produce the finished mixture with the proper proportions of the two constituents. All clods should be broken up by hoes or wooden hammers. The two materials should then be thoroughly incorporated together; this can best be done by hoeing them by hand, but, as this is expensive, they may be mixed by harrows with long obliquely projecting wooden teeth, or by light inverting steel ploughs.

The greatest care must be taken to produce an uniform mixture and to avoid stratification, which not only might lead to infiltration along the porous planes, but also to slipping along the clayey planes, should such be formed by imperfect mixing. The shaly material is required to give the whole mass frictional stability, to unite the different layers completely and intimately with each other, and to permit of the whole obtaining the power of self-drainage. The clayey material is required to give the whole mass cohesive stability and to make it resistant to water infiltration. The mixture having been thoroughly made, the whole mass of the dam will settle and act uniformly under all conditions, and unequal stresses will thus be avoided.

An instance showing the danger of forming a dam with

stratified layers separated by dry porous planes is afforded by the recent failure of the Huli Ela reservoir in the Southern Province of Ceylon. That work was constructed about 40 years ago and had a full-supply depth of only thirty feet. It has lately been breached, and the cause of the breach is clearly seen to have been seepage between dry planes separating the layers, as the earthwork was otherwise well consolidated. Another lesson to be learnt from this accident is that many years may elapse before failure occurs to a dam faultily constructed (vide paragraph 148).

As noted in paragraph 81, the casings will be formed of material richer in shale; being formed and consolidated at the same time with the hearting, they will be perfectly united with it.

119. Consolidation.—In order to render the whole of the earthwork perfectly uniform, it is essential that it should be consolidated equally throughout the section. Thus, during the final consolidation due to the settlement of the earthwork the material will be perfectly regular, the original disposition of the layers will be maintained unchanged, and the formation of leakage and slipping planes will be prevented. Should such planes be produced, it will not be possible at once to remove them, as their existence will not be known until they cause signs of failure.

In order to avoid an excessive and sudden amount of settlement, which may not act uniformly throughout the mass, the embankment should not be raised more than 30 feet in height in any one season. During the subsequent monsoon, at least half of the total final settlement will have occurred, and the substructure will thus be compact enough to permit of the safe raising of the superstructure upon it.

Entire dependence must not, however, be placed upon this self-consolidation of the dam, for, if artificial consolidation is not originally effected, the settlement of the mass will be much greater and much less uniform, owing to the varying heights of the embankment in its longitudinal and cross sections, and internal stresses may be set up. Moreover, an originally loose structure will at first be subject to great infiltration from rain and from the water of the reservoir, which will keep it green for a long time, and this will tend to cause still further unequal settlement and less resistance to further infiltration (vide paragraph 69^A).

After the layer under construction has been mixed and levelled, a light roller, weighing, say, a quarter of a ton per foot run, should be passed over it to produce an even surface, on which a heavier roller, say 4 feet in diameter and length, and weighing three-quarters of a ton per foot run, can work easily. For small dams this latter roller will suffice to give enough consolidation, but for large ones it should be followed by a steam roller weighing eight to ten tons. A roller worked by animal power should consolidate in a day 20,000 square feet, and a steam roller, 50,000 square feet of surface. A steam roller consolidates the dam more thoroughly than lighter rollers worked by animal power, and thus reduces the amount of subsequent settlement and consequent tendency to produce settlement cracks; it occupies less space on the dam than an equivalent number of lighter rollers; and its use obviates the employment of so many animals which may be difficult to obtain in ordinary seasons and may not be available in famine years, and, anyhow, crowd the work. Rough tests of the sufficiency of the rolling are that the roller will not further compress it. and that loaded carts passing over the surface will leave

but faint rut marks on it. All rollers should be provided with automatic scrapers to prevent them from lifting the earth in caked masses, and for this reason cast-iron, and not stone, rollers should be used.

In America grooved rollers have been used so as to concentrate their weight on the area of their projecting rings; this will, however, render the compression uneven, and their chief advantage appears to be that they will knead the layers together and prevent stratification. For the edges of the earthwork it is advisable to have split rollers, fixed on a common axle, and projecting beyond the track of the animals drawing them. It is best to have all ordinary rollers split so as to enable them to turn more easily. At the top of the dam, where the lessened width will not allow animals to work, the consolidation should be effected by light stone rollers weighing about a quarter of a ton, and worked by men. One of these can subsequently be used for the maintenance of the top of the dam.

In confined situations, such as at the junctions of two lengths of the dam, the ordinary roller cannot work, and resort will have to be had to hand ramming. The men should work in unison and be spaced apart a distance equal to a little more than twice the width of the bottom of the rammers, in order that they may strike the embankment with them alternately on one side and then on the other, so as completely to cover the area, and so as to knead the earth together as they progress slowly forward. As ramming does not compress earthwork as much as does rolling, the places which are rammed are ones where the final settlement will be greater than that of those which are rolled, and, at the junction of the two, there will be a plane of unequal settlement. To avoid this as much as possible, long, continuous layers of

earthwork should be constructed at the same time, and the junctions should be made in steps of low height, breaking joint well with each other (vide Fig. 12, paragraph 123).

Surface cracks and subsidences of the slopes may possibly occur during the monsoon when the dam is new. The cracks should be completely filled with a mixture of grit and soil well worked in by means of chisel-pointed poles 8 or 10 feet long. The surface, at places of settlement, should be slightly excavated and then restored by adding fresh material, which should be carefully consolidated by rammers and hand beaters, so as immediately to shed the rainfall.

120. Thickness of Layers.—The thickness of the layers has to be regulated so that the maximum consolidation is attained at the base of the dam, where the water pressure will be the greatest, and so that less and less consolidation is effected as the work rises and the water pressure decreases. It would cost too much in time and money to consolidate the whole dam throughout to the maximum extent, and this amount of consolidation is not necessitated elsewhere than at the base by the conditions which have there to be met.

To obtain this gradually increasing consolidation the first 30 feet of the dam measured from the top should be constructed in layers 5 inches thick when rolled by ordinary rollers; the next 30 feet in 4-inch layers; and the remainder of the dam and the river crossing in 3-inch layers. Where steam rollers are used, these thicknesses of the layers may be increased by 50 per cent. The loose layers will roll down to about two-thirds of their original thickness. Owing to the great pressure of the dam, the shrinkage of the natural earth excavated for its construction will be about 6 per cent., i.e., about

106 cubic feet of excavation will be required for 100 cubic feet of embankment, and this should be allowed for either in the borrow pit measurements or in the excavation rate.


121. Slopes of Layers.—In order to counteract the natural tendency of earthwork under pressure to slip outwards, the layers should be formed with slopes inclined downwards to the centre line of the dam (vide Plate 5, Fig. 4). The slope from the downstream edge should be made as steep as watering and consolidation will permit, say 1 in 10. The central eighth of the layer should be made level: the upstream edge should be kept at the same level as that of the downstream edge, and the slope from it adjusted accordingly. The resultant inwardly-slipping tendency of the downstream and upstream parts, having masses of different size and being constructed with slopes of inversely proportioned inclination, will thus be approximately balanced (vide end of paragraph 147). Care must be taken during construction that the water remains uniformly distributed over the surfaces of the inclined layers and does not run down them so as to collect at their bases.

During the self-consolidation of the dam, as the interior portions are of greater vertical height than the exterior ones, and are subjected to greater pressure, even layers which were originally level must tend to slope down towards the centre, but to so small an extent that this natural settlement cannot by itself add appreciably to the frictional stability of the embankment.

122. Uniform Construction necessary.—In order to avoid the formation of slipping planes, the whole width of the section must be formed and consolidated at the same time. Moreover, as it is not possible thoroughly to consolidate the extreme edges, the width of the dam should originally be constructed 18 inches or 2 feet on

each side in excess of the final width. After the dam has been raised a few feet, this extra width should be dressed off and the material from it used for making up the higher part. For the same reason no patchings-on of the casings, &c., should be allowed, and all works roads leading up the dam should be formed outside of its designed section and should be removed when no longer required.

Every precaution must be taken to construct the dam

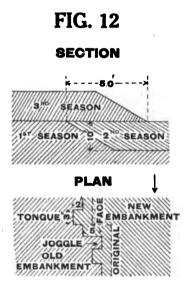

as carefully as possible so that it may settle uniformly under all conditions.

123. Junctions of Earthwork. — Where junctions of earthwork are unavoidable, they should be most carefully constructed.


(a) Cross-sectional Junctions.—These should be made as shown in Fig. 12.

All the loose surface earth of the old slope should be entirely removed, and, as shown in plan, the junction should be made with slip

tongues and joggles inclined up the face of the slope to allow the new embankment to settle tightly on to the old one. Each junction should not be made more than 10 feet in height, and, where a greater height has to be dealt with, it should be broken up into steps separated by horizontal breaks of at least 50 feet. All the junctions together should not be carried up more than 20 feet in height in one season, and the work of the different seasons should break joint as shown in the sectional elevation.

- (b) Longitudinal Junctions.—These junctions, or patchings, should be made as shown in Fig. 13, by benchings of irregular size, thus designed, so as to prevent the formation of a slipping plane; the new earthwork should, moreover, be constructed in layers sloping steeply on to the old surface. Transverse filtration will not be induced by such a junction, but, as this form of construction has somewhat of a tendency to slip, it should not be made if that can be avoided. Not more
- than 20 feet vertically should be carried out in one season.
- (c) Additions to Height.— Whenever new earthwork has to be added to the top of old earthwork, e.g., when an old dam with a large top-width has to be raised, in addition to removing the old surface, one or more key trenches, say 4 feet wide by 3 feet deep,

FIG. 13

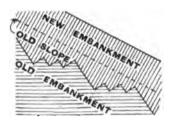

should be excavated in the old work with slightly sloping sides and parallel to its centre line. These should be filled with the most retentive material, thoroughly rammed, before the main part of the new earthwork is commenced.

124. Finishing-off the Dam.—At the end of each season's work on a section of the dam, the outer edges should be left a little higher than the centre, so that the rainfall on this wide top area may not flow down the slopes and gutter them, but, on the contrary, may soak gradually into the earthwork and help it to settle. Excess water should not be allowed to remain on any part of the top, but should be drained off by gutters designed so as not to scour the slopes at their outfall.

The top foot of the completed dam should be made I.R.

of porous material for the same reason, and the top surface should be given a slight fall, of say 1 inch, towards the reservoir, as the drainage from it will thus have only a short course to the pitching and will therefore not gutter the upstream slope. During construction and maintenance care must be taken that the drainage descends evenly down the slopes, and that it is not allowed to concentrate down any defined line, as this may result in the formation of deep rain scores. The top of the dam should be finished off with half an inch of coarse sand well rolled in.

To protect the downstream slope it should be sown with grass, or turfed, so as to enable it to resist the guttering action of the drainage of the rainfall passing down it.

A good fence or hedge should be made round the dam; on the upstream side this should extend down to full-supply level, and on the downstream side it should be carried along and downstream of the "downstream drain" (vide paragraph 107 (b)), to protect the embankment from cattle, &c. During construction a good works road should be made along the downstream toe of the dam, and should be carried across all stream beds on drained berms and thereafter should be maintained to facilitate inspection.

125. Observations during Construction.—To test the nature of the construction, at the close of each week small trial pits, say 2 feet square, should be excavated at intervals through the week's work. The earthwork, if it has been properly constructed, should be found compact, uniform in composition, free from distinct stratification, and only slightly moist. To test its impermeability, the pits may be filled with water and the time this takes to disappear may be noted. Any

defects thus brought to notice should be remedied during the subsequent work.

During the rains theodolite and level observations of stout pegs driven 4 feet deep, projecting 1 foot above the surface and spaced at regular intervals on fixed lines ranged parallel to the centre line on all high parts of the dam, should be made and continued until the close of the monsoon succeeding the completion of the work, and a continuous record of them should be maintained. Thereafter, if great settlement or distortion has not been observed, it will be sufficient to keep an annual tabulated record of the level of bench-mark stones firmly bedded 2 feet deep at the end of every chain on the top of the dam along its centre line; these stones should be engraved with the chainage for easy identification and so as to form permanent distance marks.


Gauging notches should be fixed at the outfalls of all drains and a continuous tabulated record should be kept of their discharges.

126. General Remarks.—(a) Setting out the Centre Line.—Dams should be set out in as long straight lines as possible, so that the appearance of the finished work may be in keeping with its scale. Following minutely the irregularities of the ground will not as a rule effect much saving compared with a carefully selected equalising line. These straight lines should be united by short curves, as long ones are difficult to set out, and there is no engineering necessity for the latter as exists in the case of a canal, road, or railway.

Reference setting-out pillars should be built at the extremities of all straight lines, and, if practicable, clear of the dam, so that they may be of use during the whole of its construction and also after its completion; from

them the intersection points of the different lines can always be set out (Plate 4, Fig. 1).

(b) Setting out Templates.—The toe of the dam should be set out as sketched in Fig. 14, a small mound of the casing material being first formed to take the upper vertical peg. The template should be made by a good 3-inch by ½-inch sawn teak batten about 16 feet long, as strings and bamboos are not sufficiently accurate for good work. These templates should be fixed 50 feet apart, opposite to and intermediate with, the regular chainage marks. When the embankment has been raised above the top of the template, the slope may be

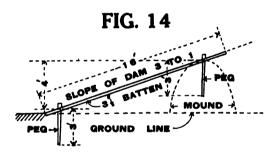

continued roughly by eye, more especially since it has afterwards to be dressed off (vide paragraph 122). After the dam has been carried up above the length of a template, a second template can be fixed and the earthwork dressed off to it.

In the case of cuttings, excavation templates, about 1 foot wide, should be neatly dug to the finished slope, at intervals of 50 feet or so, and the earth lying between them should be dressed to them.

(c) Minor Arrangements.—In Appendix 22 are given numerous notes of these arrangements. These notes were originally issued as works orders, and will, it is hoped, prove useful.

(d) Method of Executing Work.—It will generally be found best to carry out a large dam by the petty contract system under departmental management, as a large contract is not, as a rule, advisable for this class of work, where the most careful construction is necessary, as well as rapid progress. Practically all the material being close at hand and easily worked, and nearly all the labour being unskilled, there is not any necessity for the employment of a large contractor, whose principal use is that he has special appliances and skilled labourers at his command.

X. COMPOUND DAMS WITH DRYSTONE TOES.

127. Objections to High Earthen Dams.—As mentioned in paragraph 66, although French engineers consider 60 feet to be the safe maximum height for an embankment, English engineers do not agree with this opinion, as they have constructed many much higher dams.1 The latter generally hold that the proper section for high dams is one in which the slopes are made flatter towards the base than they are near the top. This corresponds with the "empirical section" (vide paragraph 62 and Plate 5, Fig. 2), but that is not recommended as a perfect form for a high earthen dam. When a greater height than 60 feet is contemplated, it must be recognised that particular care must be taken both with the design and with the construction. Earthwork being

¹ The following are the maximum heights of certain high earthen dams:—

Druid Lake Dam, Baltimore, 119 feet.
 Temescal Dam, California, 105 feet (built in 1868, largely hydraulic-fill).
 San Leandro Dam, California, 120 feet (built in 1874-5, one-third hydraulic-fill).

^{1.} Croton Dam, New York, 120 feet (proposed, ride paragraph 58).
5. Wághád Tank, Bombay, 95 feet (original design).
6. Mhasvad Tank, Bombay, 80 feet (ride Appendix 1, No. 14).
No. 1, ride Engineering News, Vol. xlvii., No. 8, p. 152, February 20th, 1902.
Nos. 2 and 3, ibid., No. 10, pp. 194 and 195, March 6th, 1902.
(See also the end of paragraph 66.)

viscous, a small disturbance at one point is likely to extend and to cause in time a larger one, and it is therefore necessary to guard against this. The higher the dam and the more that height differs at contiguous sections, the greater the chance of failure, as then there will be increased and varying settlement. Unless this greater and irregular settlement is provided against by careful and thorough consolidation, the more will it differ in amount at such sections, and internal stresses will thus be caused at them.

Now, the highest sections of dams are usually in the worst situations for stability. The most economical line for the whole dam is generally along ridges which terminate abruptly at the river, there forming a gorge through which the stream passes. At this point the steep end-slopes of the ground tend to make the embankment slip off, and, if the bed of the gorge has a longitudinal slope falling downstream, which it frequently will have at such a site, this will accentuate the tendency to slipping. The upstream portion will be supported by the water pressure of the reservoir and by its greater mass, but the downstream portion will be dependent upon itself for support against the resultant force which will be directed towards it. The tendency will therefore be for the dam to slip downstream, and the slips which have occurred in a few Bombay dams have all been in this direction, no slips of the upstream portion being there known. Of course, if the upstream slope be steepened, so that, with the reduced co-efficients of cohesion and adhesion produced by water infiltration, it is relatively weaker than the downstream one, it will be the first to give. The result of experience is that the usual 3 to 1 water-slope, although it is charged with water, is more stable than the 2 to 1 downstream one which is not subjected to the direct influence of the reservoir storage. In India, however, this latter slope as described in paragraph 80, is exposed to varying conditions which affect its stability, and, in the case of high dams, it appears necessary that there should be a less difference in its angle of slope to enable it to have as much slip-resisting power as the upstream slope. It is for this reason that the "empirical section" shown on Plate 5, Fig. 2, provides for a relatively greater increase beyond the usual section to the downstream than to the upstream slope.

128. The Drystone Toes of the "Compound Dam."— If the gorge embankment can have its sides confined by strong toes of some non-viscous material up to the base level of the flanks (beyond which the dam is of a less abruptly varying height and where the difference of settlement of neighbouring sections will relatively be very small), the enclosed earthwork will be prevented from moving in any direction. After the base of a gorge dam has been allowed to attain practically final consolidation by settlement, the upper part can be safely raised on this reliable foundation to the ordinary section of the flank embankment. This constitutes the principle of what is here termed the "compound dam" (vide Plate 5, Fig. 2). The toes, if formed of trap drystone, which has a specific gravity of 2.50 and a coefficient of friction of 0.71, compared with 1.60 and 0.50, the relative figures for moist clay, will have a frictional resistance about 2½ times that of the latter. them cohesion and to prevent on the upstream face the inflow of water, which would lessen the effective weight, the drystone should be packed solid with clayey murum,1

¹ The term "drystone" has been applied to this form of toe to distinguish it from a construction of masonry with mortar. "Packed stone" would describe it more clearly.

which will also considerably increase its frictional resistance. The stone would, of course, be the roughest of sound rubble, and probably much of it could be obtained from the waste-weir and other excavations. It should be laid with its beds normal to the slope to increase the frictional resistance.

129. The Construction of the Drystone Toe.—The toe could be constructed by unskilled labour in the following way:--On the completed layer of stone would be spread a thin layer of clayev murum, and this would be thoroughly worked in to fill all the interstices immediately below it. The stones in the next layer would be laid by hand to interlock and break joint with the underlying stones, and would be malleted firmly on to them. Large interstices would be filled with single stones driven home, and small ones with clayey murum thoroughly worked in by short bars. Finally, the layer would be completed by levelling it up with the murum so as to leave only the tops of the stones projecting in order to bond with the bases of those of the next layer. This construction should not cost more than three times the rate of the ordinary dam embankment. As all the material could be stacked beforehand close to the site. the drystone toe should be constructed at nearly the same pace as the earthwork, which is a matter of great importance when the closure of the dam is taken into consideration.

To give greater frictional resistance and to prevent the infiltration of water, rubble masonry, or concrete, toes and core walls should be built into the foundation, so as to project into and key with the superstructure. The water face of the upstream toe should be laid in masonry, or covered with concrete, to prevent water from entering and buoying it up; its downstream face could be formed as a battering concrete wall to enable the earth pressure of the dam to be evenly distributed over it, and this wall, as explained in paragraph 136, will be useful in the closure of the gorge embankment.

It might be said that the upstream toe is not so necessary as the downstream one, owing, as noted above, to the greater stability of its flatter slope, but as it will always be under water after the filling of the reservoir, and cannot easily be added to, it is advisable to construct this toe as a matter of precaution.

It might also be urged that the drystone toes might be replaced by masonry retaining walls, but the proper design for these with so great a surcharge would be somewhat doubtful, and sufficiently massive walls would probably exceed the proposed toes both in cost and in time for execution. It would certainly be hazardous to construct retaining walls of the same rough class of work, and the material saved by their use would not compensate for the loss of the extremely stable form of the proposed toe, which, while of greater weight, also receives the normal pressure of the dam and distributes it directly over a large, cohering base.

This type of dam with drystone toes is the one best adapted for embankments exceeding 75 feet in height, and with it dams may safely be constructed up to 125 feet in height.

- 130. The Advantages of the "Compound Dam."—In paragraph 53 the advantages of earthen embankments have been described. In addition to those possessed by an ordinary earthen dam, the compound dam has the following:—
- (1) It protects the base of the rear slope from being guttered by rain;

- (2) It can be constructed to a considerably greater height;
- (3) It can be raised subsequently by a largely increased amount:
- (4) It offers great facilities for the safe closure of the work.

The compound dam is more expensive than the ordinary earthen dam, but is cheaper than a masonry dam or than a composite dam, which consists of separate lengths of masonry and earthwork in continuation of each other. It has the advantage over a composite dam that its hearting is continuous and uniform throughout the whole embankment, and thus there is not any tendency to the formation of leakage planes through it.

XI. THE CLOSURE OF THE DAM.

- 131. The Importance of the Closure.—The closure of the dam gives the Indian engineer the greatest anxiety, as a passage for an immense quantity of flood water has to be provided temporarily through the embankment until the beginning of the last season, when the last gap has to be closed within seven months. No considerable amount of work can be done after the commencement of the monsoon, as the reservoir is then liable to be filled within a few days. During all the working period of the final closure a very large body of labourers must be kept constantly at work. The fear of an outbreak of cholera, which would effectually stop all progress, is, also, ever present to the engineer.
- 132. The Ordinary Method of Closure.—The ordinary system of the closure of a dam is shown in Fig. 15.

The flanks AA are first constructed, leaving the narrowest possible gap in the river bed for the passage

of the monsoon discharge. The central part B has then to be completed during the last season of work. The objections to this method are:—

- (a) The junction between A and B is too high. A, having been made at least one season before B, and having been allowed to settle in the open, at the time of junction has attained its practically final consolidation, whereas B is quite green. The two cannot properly unite, and there is always a risk of a leak forming at their junction.
- (b) B, while quite green, is at once subjected to the infiltration due to a full reservoir; the water thus

entering it prevents it from attaining the density of A for many years.

(c) B, having to be

carried up the full height in one season, cannot be allowed to FIG. 15

USUAL CLOSURE



consolidate gradually by its own weight; it is, therefore, liable to internal stresses and distortions due to unequal settlement, which will chiefly be caused by the varying effect on the cross-section of the infiltration of water from the reservoir during the first few months.

(d) B having to be completed in one season, the work is, to an undesirable extent, in the hands of the labourers, and strikes and higher rates are probable. Moreover, there is the danger of cholera interrupting its progress.

This method of closure can, however, be adopted without incurring much risk in the case of dams less than 30 feet high, but it does not seem proper to employ it in that of ones of greater height.


133. The Revised Method of Closure.—The revised system of closure is shown in Fig. 16.

It consists in forming the dam in continuous level stages, commencing with the one at its lowest point, A, and working gradually up to that forming its final crest, B. To provide for the escape of flood water during the construction, a temporary waste-weir is made at a suitable site in the longitudinal section, so that it can discharge the maximum flood with safety to the whole work. This system of closure is the only safe one to adopt for dams of greater height than 30 feet. Its advantages are:—

(a) The junction between A and B is very much less

FIG. 16

PROPOSED CLOSURE

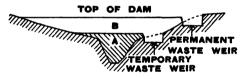

in height than in the first case. The height of A at the junction can, at small further expense, be reduced, to form a longitudinal step in the dam, by making

its top there as a crest enclosure dam with reduced section; this can be removed, partly or wholly, when completing the dam at the time of final closure. With this arrangement the top of the dam, as finished for the preliminary closure, will be stepped in profile, both in cross and in longitudinal section, the crest dam being raised above the rest of the unfinished part of the main dam inside of it.

(b) A is subject to infiltration only from a low reservoir; all the upper part of the dam, with the exception of the comparatively low part closing the temporary waste-weir, can be allowed to consolidate before water touches it.

- (c) The bulk of the dam, and, in particular, its highest sections, can be carried up slowly and evenly and allowed to self-consolidate. Only the small portion closing the temporary waste-weir will have to be done in one season.
- (d) The work can be executed without fear of strikes, as the final closure of B involves a comparatively small quantity of embankment.
- (e) The construction of A will lead to the formation of a small reservoir which will be most useful for works purposes, and will save much in water charges.
- (f) The temporary waste-weir will often provide a level site for the location of the outlet, away from the gorge embankment and below the general bed of the dam.
- 134. The Temporary Waste-Weir.—As the temporary waste-weir is an essential to the closure of a high embankment, when selecting a site for such a dam it should always be seen that the site offers facilities for the construction of this means of passing off floods safely during the progress of the work. In very high dams it may, of course, be necessary to extend the system by having one or more temporary waste-weirs at higher levels, but the principle of execution will be the same as that to be followed in the case of a single one. The expense of forming more than one temporary waste-weir may, of course, be considerable, but, if an outlet of the type of the headwall in the centre line of the dam (vide paragraph 205) is adopted and is located at the site of this weir, it will generally be possible to have only one temporary waste-weir during the entire construction of the dam. The method to be employed in this case is shown in Plates 4 and 9. During the first season the temporary waste-weir is left as an open channel. wards, the lower part of the outlet headwall is raised to

a certain height, calculated in accordance with the requirements of the construction of the dam, so as to form a clear overfall weir, and its sluice-ways are left open to increase its discharging capacity.

The site for the permanent waste-weir should be kept open until the last (i.e., the weir wall should not until then be built across it), so as to permit of the discharge of the flood waters at the lowest level.

The best natural site for a temporary waste-weir is at a depressed saddle, as then the floods from it will be confined in a natural channel, and will not tend to injure the main work. Where such a natural site does not exist, an artificial one should be made by excavating a channel so as to keep the tail flood below ground level. In either case it is advantageous that the bed of the temporary tail channel should be of rock, but, as this weir will come into action only for a year or two, it is not essential that the rock should be as sound as is desirable for the permanent weir. Where sufficiently sound rock does not exist at the proper level for the bed of the temporary tail channel, the erosion of that bed, under and near the base of the dam, can be prevented by constructing a masonry curtain wall a little below the line of the toe of the dam, and also, if necessary, by building water-cushion walls (vide paragraph 178) downstream of this.

The discharging capacity of a temporary waste-weir must be equal to the maximum flood which can be expected from the catchment area, and, indeed, it will be better, as a precautionary measure, to make a somewhat greater provision than this, since, during the time this weir will be in operation, the whole of the works will be in an unfinished state. Account may be taken of the flood-absorptive capacity of the reservoir (vide

paragraph 183), but it must be remembered that this will always be small at the low level of the sill of the temporary waste-weir unless the maximum flood depth to be allowed over that is considerable.

135. The Closure of a Large Dam.—In a purely earthen dam the closure of the river gorge should be effected by carrying the full section right across the gap up to the required height above the temporary wasteweir. If, on the one hand, a reduced section of the embankment is first constructed on the upstream side, and the downstream part is subsequently added, this latter will have a tendency to slip off during its settlement and under the immense pressure of this, the highest part of the dam. If, on the other hand, the width of the gorge is first reduced by patching on flank embankments, during settlement there will be a tendency to produce cracks and leakage planes at right angles to the section, and these will induce infiltration of water from the reservoir into the heart of the dam. By the system of forming the base of the gorge embankment by massive drystone toes (vide paragraph 128), both these methods of reducing the amount of work involved by the closure may, however, be adopted with perfect confidence, as these toes will give a large amount of support and obviate slipping, and their construction will prevent the formation of a direct leak through the dam.

As an example, the method of closure proposed for the large Máládevi dam is illustrated in Plate 4, and Plate 5, Figs. 2 and 5, and may thus be described:—

136. The Preliminary Closure.—For this the whole section of the upstream drystone toe of the gorge embankment is to be raised to R.L. 124.00. A central gap, 300 feet in crest-width, is to be left in it, and the flanks of the gap are to be sloped at an inclination of $1\frac{1}{2}$ to 1

up to R.L. 166.00. The whole of the downstream face of the toe is to be protected by the "concrete batter wall" from the action of the river floods. The earthwork of the dam hearting is to be set well back in low steps, out of reach of the direct rush of the floods, and its face is to be protected from erosion by heavy pitching, which will subsequently be removed and utilised for the permanent facing of the water-slope of the dam. The high-flood discharge is calculated to rise to about 20 feet on the sill of the gap, i.e., to R.L. 144.00.

The raising of the flanks with full section to R.L. 166.00 provides an ample margin for safety, and this height might be reduced without risk if time did not allow for so much construction being carried out.

The "central wall" of the dam is to be completed with its overfall crest at R.L. 112.00. The width of its crest is to be contracted to 250 feet so that the flood water may be heaped up higher in order to secure a greater depth of water-cushion above it. The actual top of this wall, which is designed to key into the dam earthwork and from its small section might be washed away by the floods, is left to be constructed afterwards during the first complete closure.

The flanks of the downstream toe and its concrete core walls are to be constructed so as to confine the river floods. Its concrete toe-wall is to be carried right across the river bed to form a water-cushion. The central gap in it is to be widened to 325 feet in order to reduce the flood-level, as the toe-wall will give ample water-cushion depth for the small overfall at the "central wall."

137. The First Closure.—For this the temporary waste-weir channel at the outlet site has to be made ready (Plate 9, Figs. 1 to 4). It is to be excavated

with a deep central channel, 50 feet wide, carried down to the outlet sill, R.L. 135.00, so as to tap the floods early and to bring the reservoir flood-absorptive capacity (vide paragraph 184) sooner into play, and so as to form a channel to serve for the discharge of the permanent outlet. At each side is to be a side channel, 75 feet wide and with its bed 10 feet higher, which is to provide for the balance discharging power required.

Appendix 12 gives a calculation of the flood which can be disposed of by the combined effect of the channel discharge and the absorption in the reservoir during the rise of the water surface. Starting with a discharge of 5.300 cusecs (which is equal to a run-off of 1.28 inches a day from the catchment, and is a fair small flood), it will be seen that in nine hours they dispose of a total flood equivalent to a run-off of 4.75 inches. Of this. 2.99 inches are passed off by the channel, and the balance, 1.76 inches, is absorbed by the reservoir. When highflood level is reached, the discharge of the channel will be at the rate of 0.546 inch an hour run-off, and assuming that the reservoir remains at this level, the total run-off during the day will be 12.94 inches. These runs-off are far in excess of what may be expected from the catchment, and the maximum high-flood level possible may therefore be safely taken as R.L. 160.00.

For this closure the upstream drystone toe of the gorge embankment has to be completed across the gap left for the preliminary closure, and the "minimum section for closure" (Plate 5, Fig. 2) of the earthwork of the dam has to be raised behind it. This reduced section is designed so that the quantity of work to be done may be practicable within the time available. Should progress be more rapid, as is desirable, then the downstream drystone toe and the rest of the earthwork between it

and the "minimum section for closure" should be raised simultaneously. Anyhow, it will be advisable to complete the whole section of the base of the dam to R.L. 166.00 and allow it to settle for at least a whole monsoon before the upper part is raised upon it.

138. The Second Closure.—For this the outlet headwall is to be raised to R.L. 147.00 (as shown in Plate 9, Fig. 1, by plain dotted lines), and the under-sluice vents are to be left fully open in order to increase the discharging power. The upper plain dotted line indicates the high-flood level R.L. 169.00 as calculated in Appendix 13. As the temporary crest will be constructed in steps, for the sake of raising the superstructure safely upon it, it will give a larger high-flood discharge, and will tap the reservoir earlier than will the level crest at R.L. 155.00 which has been taken into account in the calculations.

The object of increasing the reservoir level above that of the first closure is to effect the raising of the dam gradually, so as to avoid leaving too much masonry and embankment work at the outlet for construction at the final closure. The increase of level will also ensure the more gradual wetting of the whole embankment and enable the part thus submerged to attain practically final settlement before the upper part of the dam is completed on it.

Appendix 13 gives a calculation of the flood which can be disposed of by the combined outlet headwall discharge and the reservoir absorption. Starting with a discharge of 5,706 cusecs (which is equal to a run-off of 1.39 inches per day from the catchment, and is a fair small flood), it will be seen that in eight hours they dispose of a total flood equivalent to a run-off of 3.98 inches. Of this, 2.18 inches are passed off by the headwall, and the balance, 1.80 inches, is absorbed by

the reservoir. When high-flood level is reached, the discharge of the headwall will be at the rate of 0.42 inch per hour run-off, and assuming that the reservoir remains at this level, the total run-off during the day will be 10.69 inches. The maximum high-flood level may therefore be safely taken as R.L. 169.00.

For this closure the whole of the dam would be raised with full section at least to R.L. 175.00.

139. The Final Closure.—For this the under-sluice section of the waste-weir, 250 feet long (Plate 7, Fig. 3), would be left open, the masonry foundations and superstructure constructed to sill level R.L. 177:00, and the permanent tail channel excavated so as to form a temporary waste-weir channel. Detailed calculations of the flood of which it can dispose, aided by the discharge of the outlet sluices and by the absorption of the reservoir, are not given, but, judging from Appendices 12 and 13, the high-flood level will not exceed R.L. 184.00, at which level the discharge from the permanent waste-weir and the outlet will be 20,624 cusecs, which is equal to a runoff of 0.21 inch per hour from the catchment. For the sake of safety the high-flood level may be taken as R.L. 187:00, when the total discharge will be 32,733 cusecs, or at the rate of 0.33 inch per hour run-off from the catchment. These discharges are exclusive of the large amount of flood-absorption by the reservoir.

If the rate of progress permits, the whole of the outlet headwall and the gap in the embankment at it (Plate 4, Fig. 2) should be completed in one season. If, however, the completion of these works cannot then be effected, these parts need not be raised at first beyond R.L. 190.00: at this level the temporary waste-weir will be thrown out of action which it is desirable should be done as early as possible.

After all the works are completed, the reservoir should be kept at as low a maximum level for as long a time as possible, to permit of the practically final settlement and self-consolidation of the top of the embankment in the dry.

140. Quantities of Work to be done in each Closure.

—The following table gives the estimated quantities of each class of work involved in each closure:—

I	2	.3	4	5	6	7	
Consecu-	Name of Closure.	Crest Reduced Level:	Earthwork.	Drystone.	Masonry and Concrete: Cft:	Total Work. Cft:	
1 2 3 4 5	Preliminary Closure, Gorge embankment gap First Closure, ditto, minimum section First Closure, ditto, complete section Second Closure Final Closure, full height	124'00 166'00 166'00 175'00 207'00	2,673 000 2,494,900 2,818,000 4,001,000 565,000	1,772,000 740,000 1,727,000 49,000 9,000	491,000 130,000 104,000 59,000 290,000	4,936,000 3,364,000 4,649,000 4,109,000 864,000	
6	Total Closure	207 00	12,551,000	4,297,000	1,074,000	17,922,000	

In these figures flank embankment work is not included, as that can be completed previously to the actual closures concerned.

Owing to the limited extent of the working area and to the necessity for careful and slow construction, it is not safe to reckon upon a greater annual progress than 5,000,000 cubic feet for each of the closures. For the closure in one operation of another design for an entirely earthen dam of about the same size for the Máládevi tank, it was estimated that 13,642,000 cubic feet of earthwork would have to be completed in one season, and, after reducing the gap beforehand by side embankments, that 11,036,000 cubic feet would thus have to be completed. It is very doubtful if even the smaller of these two quantities would have been feasible in the

comparatively short working season of about 180 days, and the raising during that time of so high a mass of earthwork would not have been conducive to its final stability.

Each of the above described closures will involve the construction of temporary work and its future replacement by permanent work, but the cost of this will not be great.

It is essential for all closures to make out a careful programme of the work to be done each month, and to keep the actual construction as much as possible in advance of it so as to provide for the delays which may occur later on.

XII. EARTHWORK SLIPS AND THEIR REPAIR.

141. The Necessity for the Sound Construction of the Dam.—If an ordinary high earthen dam is not properly constructed, it may be liable to sudden and unforeseen slips, which may lead to its failure, and thus may cause consequent damage to life and property, and may entail loss of revenue and income and expensive measures of repair. It is far better to obviate all chance of failure at some extra capital outlay during the construction of the work than to run any chance of risk for the sake of a comparatively small original economy. Precautionary measures to be adopted in the design and during construction have been described above, and, where these have been taken, the chance of failure will practically disappear.

A slip is the only form of damage which will be considered here. The overtopping of a dam is due to insufficient waste-weir provision, and the failure of an outlet is due to mistakes which are pointed out in

paragraph 201. A slip may be caused in the following ways, by—faulty foundations; unequal settlement, producing internal stress and subsequent motion; defects in the construction and design of the dam; changes in the chemical and physical constitution of the material of the dam or of the subsoil; and by infiltration of water.

142. Faulty Foundations.—Foundations may be faulty from two causes: they may be unduly compressible or they may be badly seated. In regard to the first of these it may be stated that most dry soils can withstand the weight of a dam. Argillaceous, or partially impervious ones, are, however, likely to give when saturated. A deep clay seat is therefore undesirable for a dam; where it exists, it must be rendered as compact and dry as possible on the downstream side, by a series of deep, dry rubble drains parallel to the centre line and with cross outfalls as frequently as can be arranged. On both sides the slopes of the dam should be flattened so as to secure a wider base, and, if necessary, the natural soil below it should be replaced by more reliable material. Berms, also, may be added at the bases of the slopes to prevent the rise of the subsoil (vide paragraphs 74(b), 76 and 114).

If the dam is constructed on a stratum which is tilted and rests on a lower one with which it is not firmly united, the extra weight thus put upon the upper stratum may cause it to slide and carry the embankment with it. Careful geological investigation is necessary to avoid this source of danger.

143. Unequal Settlement.—Wherever the longitudinal section of the dam varies greatly in height, and wherever the construction has not been uniform and slow, or junctions have been formed, there is a risk of the occurrence

of unequal settlement, which will cause internal stresses and subsequent motion. The effect of these causes will be intensified by the action of the water, which may thereby percolate from the reservoir, thus saturating the earthwork and forming a slipping plane. The place where this process will most frequently occur, is of course, that where the dam was closed, should this have been done in the usual way at the river crossing (vide paragraph 182). Slips have occurred in some Bombay dams at this place, and years after their construction, showing that some slow disintegrating action, such as that described has been at work, (see also paragraph 118).

- 144. Defects in Construction and Design.—The use of too permeable materials will cause a breach rather than a slip; but with proper care in construction, ordinary permeable materials become too compact to allow of excessive and dangerous percolation. Friable materials too loose to bind and totally wanting in cohesion, may form a slipping plane and lead to failure. Pure clays are dangerous in that their cohesive and frictional resistances become very largely reduced when they are charged with water, and a too liberal use of water during construction is, therefore, to be strongly deprecated. Through a defective design the earthwork may be unable to support its own weight, and will slip so as to assume more suitable The profile which is only just sufficient for a dry embankment will prove too slight when it is subjected to water infiltration.
- 145. Changes in Chemical Constitution. 1—Some clayey materials are liable to changes in chemical constitution, leading either to deterioration or to disintegration. Occasionally, clay is found to be hard and tenacious

¹ "Minutes of Proceedings of the Inst. C. E.," Vol. cxxxii., p. 211. Engineering News, Vol. xlix., No. 2, dated Jan. 8th, 1903, p. 38.

originally and to maintain this character as long as it is under water, but, after having been allowed to dry and having been again placed under water, to turn into an impalpable mud, showing that some change has taken place in it; this is probably owing to some salt, such as carbonate of soda, contained in it. Soils which show an efflorescence on their surface should therefore not be used in the construction of a dam.

146. Infiltration of Water.—This is the principal cause of slips, as it operates in aiding all the others to produce failure.

Undisturbed and compact soils allow water to permeate only slowly and regularly through them, but they may become fissured by desiccation, or, when artificially formed, by subsidence; the fissures thus produced will be dangerous in that they will allow percolation water to gain powerful hydrostatic pressure in them. When that occurs, such water will endeavour to find an outlet, and if successful in this, may be able to detach from the main part of the embankment the portion of the earthwork thus separated and cause it to slip. Failing to find a defined outlet, the water will tend to saturate the base of the dam and render it too soft to support the mass above it, and again a slip may take place.¹

It is therefore of the utmost importance thoroughly to consolidate an embankment (vide paragraph 119), for water will easily find its way between the unconsolidated particles of earthwork and may thus produce a defined line of internal flow. It is equally important to prevent the formation of a plane of separation such as might result from diagonal drains down the slope of the dam (vide paragraph 76), from a system of uneven drainage of

^{1 &}quot;Minutes of Proceedings of the Inst. C. E.," Vol. lv., pp. 338-341.

its base (vide end of paragraph 112), or from a dry layer (vide paragraph 118.) The rate of settlement of the earth, work should be retarded as much as possible to obviate the formation of slipping planes (vide paragraphs 74(a) and 123), and the dam on its downstream side should be made of self-draining material to avoid the accumulation of percolation water in its interior (vide paragraphs 69A The surface of the slopes of the embankment should be made as compact as practicable to lessen percolation into the heart of the earthwork, and that of the downstream slope should during construction be rendered as impervious as possible (vide end of paragraph 117), should be properly maintained to shed the rainfall evenly. and should be turfed to protect the earthwork from disintegration by the action of the weather (vide paragraph 124).

Whenever infiltration from the reservoir is excessive and consequent repairs have to be effected, the water level of the reservoir should immediately be lowered to the extent found necessary, in order to prevent a slip or a breach, no matter what loss to irrigation may thus be occasioned.

147. Profile of Slips.—Although Indian dams are carefully constructed, still slips sometimes occur in them. Frequently the initial cause is obscured by the fact that several causes are at work together. These slips, when extensive, are of the same general form—S-shaped in vertical section, with the concave portion at the top and the convex at the bottom (when looked at from downstream) and, in plan, convex to the original toe of the dam (vide Fig. 17). This profile is not likely to have resulted from mere disintegration of the earthwork, as


^{1 &}quot;Minutes of Proceedings of the Inst. C. E.," Vol. lv., p. 339.

such disintegration would probably occur at the surface of the slope of the dam rather than in the interior of the work. It would be fully accounted for by hydrostatic pressure acting in fissures as described in the last paragraph. The layers at the base of a slip are generally tilted at an angle of about 20° to the horizon, so that their inward thrust preserves equilibrium with the outward one of the dam (vide paragraph 121).


The slip of the Waghad Dam was due to unusual causes.

FIG.17 WAGHAD DAM SLIP

CROSS SECTION AT CENTRE OF SLIP

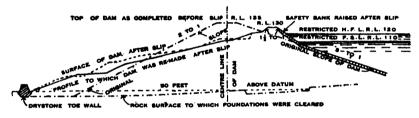

CROSS SECTION AT LEFT FLANK OF GORGE (WHERE THE MAXIMUM MOTION OCCURRED)

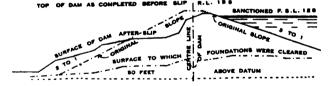

In 1883, the year previous to its occurrence, the outlet tunnel on the left bank was built very late and the dam, (which was of pure black "cotton-soil" with only thin murum casings), had to be raised very hurriedly over it. Early in the monsoon of that year the gorge embankment, which had not been raised to the designed height (maximum, 95 feet), was topped by the reservoir and a large portion of its right flank was carried away. In 1884 the dam was restored across the gap and up to 8 feet

below the designed top, but the high junction of the old with the rapidly raised new earthwork was a plane of great weakness, and the earthwork on both sides of the junction was in unstable equilibrium. On the morning of April 28th, 1884, a hair crack was seen travelling up the slope of the dam above the outlet culvert; by the evening it had returned from the top to the base so as to form a loop, and during the night occurred the slip of 200 feet—practically the whole length—of the downstream slope of the gorge embankment. (Compare the Necaxa slip, vide paragraph 57).

- 148. Slips in Pure Black "Cotton-Soil."—Where a slip occurs in pure black "cotton-soil," its surface presents a smooth, unctuous appearance, striated by the small particles of contained grit, and parallel planes of similar surface are formed for some feet on both sides of it. is doubtful if these will ever disappear of themselves; the result is that the fallen mass rests on a series of steeply-tilted, smooth, lubricated planes, and a small additional weight, produced either by adding more material to it, or by the soakage of rain-water, will tend to cause The whole of the slipped earth has also further motion. lost all the consolidation artificially given to it during construction. It is traversed by minor slipping planes and by fissures, which will admit rain-water and cause it to have a greatly reduced frictional and cohesive resistance to motion. No dependence can therefore be placed upon it, and the only sound system of repair consists in entirely removing it and in replacing it by trustworthy material.
- 149. Slips in Gritty Soil.—Where a slip occurs in earthwork having proper proportions of clay and grit, the latter will enable the whole to reunite gradually, but the junction will, of course, always be a plane of weakness. This property of reunion of gritty soils is a valuable one.

The slipped portion will also be fissured like one of pure clay, but the gritty particles will admit of slow, self-drainage, so that, after a couple of years, the earthwork will attain a fair amount of self-consolidation. The fallen mass when properly drained may, therefore, be utilised in reconstruction, but care should be taken to weight it very gradually, so as to let each season's work attain a practically final consolidation before that of the next one is raised upon it, and to maintain instrumental observations to detect the smallest motion. When this occurs, further additional weight should not be put on until the toe is properly buttressed.

150. Repair of Slips—Preliminary Operations.—The first operation in all repairs of dams formed of gritty soil is to drain the slipped earthwork by drains at right angles to the axis of the dam. Of these one should be at the centre of the disturbance, if this is extensive, and two should be along the junctions of the slip with the solid embankment; others should be inserted at convenient, intermediate distances. They should be taken out in timbered trenches, extending from the toe of the slip to a little beyond its innermost slipping plane, and should extend vertically throughout the mass. As soon as the excavation of each is completed, a longitudinal base drain with a vent 4 inches broad and 6 inches deep should be laid, and the trench should be filled with drystone, having gravel casings at the sides and a 2-foot cover of fine stuff and earth at the top; otherwise it will rapidly choke. Not only do these drains serve their initial purpose of passing out soakage water harmlessly, thus allowing the fallen mass to consolidate itself, but they also divide it into independent sections. It is unlikely that all these sections will tend to slip at once, and thus each at the time of the initial tendency to motion will be supported by

the resistance of a length of the toe works considerably longer than itself. Where practicable, and when the fallen mass has been drained, the whole line of the slip should be followed up and cut out so as to get rid of the slip planes. This may be done in a difficult case by means of a timbered trench. The re-filling should consist of gritty self-draining clay, with a good base drain communicating with the cross drains above mentioned.

151. Repair of Slips—Final Operations.—The next step is to construct a strong, well-drained drystone wall parallel to the axis of the dam, and with good batters against the slip (vide Fig. 4, paragraph 77), so as to give the new earthwork the needful increased stability, for it will not have, bulk for bulk, the resistance of the original construction. If the fallen earthwork is to be entirely removed, this wall may be placed at about the centre of the width of the slip; if that is to be allowed to stay, it To add to the stability of the repair, should be at its toe. a strong and well-drained earthen berm should be placed just beyond the original toe of the dam, and its own toe should be secured by a second drystone wall. All these drains and walls should, if possible, be founded on rock, but, where this is not to be found at a reasonable depth, they should be carried well into the natural subsoil and beyond the limit of disturbance caused by the slip. Earthwork usually fails at one point, and, as soon as it commences to move, drags the adjacent parts with it. The drystone walls, instead of transmitting the pressure directly behind them, distribute it over a certain increased area, and this tends to prevent the initial motion. thus act like the timbering of a trench, which, although incapable of resisting the full lateral pressure of earthwork, provides sufficient support to prevent the first tendency to slipping.

All excavation should be carefully taken out in sections, with sufficient widths of undisturbed material between them to act as buttresses, and should be filled as quickly as possible. This, of course, results in the filling not being so well compacted as if the whole length were dealt with at once, but in time this defect will be remedied. It also leads to the formation of numerous junctions, but, as the sections will be constructed within a short time of each other, the earthwork on each side of them will eventually unite in a practically solid way. The slopes of the finished surface should be arranged so that the rain falling on them will be shed uniformly and will not be concentrated irregularly so as to gutter the dam.

It will thus be seen that in dealing with a slip every means should be taken thoroughly to drain the earthwork and to cut out slipping planes and replace them by fresh material having the maximum amount of resistance to slipping.

XIII. PITCHING.

152. The Necessity for Pitching.—In a large reservoir the action of the wind on the water surface will cause the formation of waves, which, if allowed to break on the unprotected surface of the dam, will very soon wash away the earthwork. To protect that surface it has to be covered with pitching of a perfectly durable character. This is laid on a 6-inch layer of hard, sound murum, or quarry spauls, so as to stop the entry of vermin and the growth of plants, and so that any water, which finds its way through the interstices of the pitching, may be prevented from washing out the clayey material of the dam, as this would cause the pitching to subside and no longer to present an unbroken surface. As subsidence of the dam will have a similar disturbing effect on the

continuity of the pitching, it is desirable, whenever possible, not to lay the stones until the earthwork has practically attained its final consolidation, for which reason the pitching should be constructed as late as possible.

In Appendix 21 are given tables for the estimation of the pitching of a dam embankment.

153. The Laying of Pitching.—The most economical form of efficient pitching consists in stones laid with their broadest ends on the dam, and roughly hammer-dressed to meet for a depth of 3 or 4 inches all round their bases so as to form a complete covering. The stones should break joint in every direction, and long, continuous joints should be avoided, as these may tend to cause the pitching to slip in sections. Owing to the irregularity of the stones the work should be carefully carried out and inspected. In some of the earlier Bombay dams the stones were laid with their broadest ends upwards, and their tops were made to fit each other so as to form an unbroken surface. This form presents a more regular appearance than does the more recent one, but, as in it each stone rests on a small base and may not be properly bedded, such pitching is liable to be displaced by the impact of waves.

Where roughly-squared stones are cheaply procurable, they can be laid in regular courses breaking joint with each other, and this forms the best kind of drystone pitching.

After a section of the pitching has been laid, it should be tested by a heavy hammer to see that each stone is solidly bedded and firmly bonded with the rest. Each interstice which is left should then be filled by the largestsized chip practicable, each chip being driven well home by a hammer, and, thereafter, the pitching should again be tested. The following are the defects to be avoided in pitching:—unsound material; larger base of stone laid uppermost; long, unbroken joints; stones set with the longest dimensions of their bases not roughly parallel to the centre-line of the dam; sharp abutting edges involving large interstices; stones projecting irregularly; loosely-placed stones; partial bedding of base of stones; bad fitting of bases of stones; loose packing and incomplete filling of interstices.

154. The Extent and Thickness of Pitching.—The pitching should extend from 2 feet below outlet sill level to 2 feet above the level of the anticipated maximum wavewash at high-flood level. Its thickness at different levels should vary with the height of the waves it has to withstand; this height depends upon the "fetch" of the wind, which is the maximum length of water surface over which the wind may pass. If the thickness in feet is taken as equal to one-third of the height of the waves, it would be:—

$$\frac{1}{3} \{1.5 \sqrt{F} + (2.5 - \sqrt[2]{F})\},$$

where F = the "fetch" in miles.

Practically it would vary in the case of moderate-sized reservoirs from 6 inches at the bottom to 18 inches at the top, and, in the case of the largest-sized reservoirs, from 9 inches to 2 feet. In all cases the thickness must be formed by single stones of the full depth of the pitching, for, if it were made up of two layers, the upper layer, when under the impact of the waves, would tend to be washed off from the lower one owing to the friction between the two being diminished by the lubrication of the water.

If the reservoir is to the leeward side of the dam in respect of the prevailing wind, the thickness of the pitching may be somewhat reduced, provided there is no chance of strong winds coming from the reservoir side.


155. Foundation and Top Courses of Pitching.—
The foundation course of the pitching should consist of large stones sunk at least 12 inches into the dam or into the natural ground. Where the toe of the dam is above outlet level and the soil consists of soft material, that should be protected from being undermined by wave-wash by an apron of rubble débris, &c., from the various excavations connected with the main work (Fig. 19).

The top course should be formed of hammer-dressed headers with comparatively thin joints so as to prevent the upper part of the dam from guttering through them under the action of rain. This course should be laid in a con-

FIG. 18

FIG. 19

SECTIONS

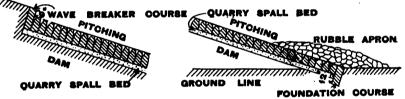

tinuous line parallel to the top of the dam so as to give a finish to the pitching, and should project at least 9 inches above the general surface so as to act as a wave-breaker course (Fig. 18).

156. Concrete Packing of Pitching.—The form of drystone pitching described above is the cheapest one which is reliable, but it has not a very sightly appearance. It is liable to have interstices, in which the percussive action of the waves may exert great force which will tend to blow out the stones, and through them the water will readily gain access to the surface of the dam and may erode it. These interstices may permit of the growth of plants near and above full-supply level, which may disturb the

pitching, and they may allow of the entry into the dam of rats and crabs, which may thus be able to burrow and do a great deal of harm not noticeable from the surface. The projecting tops of the stones permit the waves to exercise a considerable amount of leverage in disturbing the pitching. The proper inspection of such pitching is at all times difficult.

These defects would be remedied were the pitching packed to a fairly uniform surface with fine concrete, or very coarse mortar, worked into all the interstices so as to unite the whole into a solid covering. To allow for settlement, this packing should be completed in detached sections, say 10 feet long and 5 feet wide, breaking joint with each other. The packing should be carried out a year or two after the reservoir has first filled, (by which time the earthwork of the dam will have practically attained its final settlement), and while the water level is falling, so as to permit, at small cost, of the mortar being kept wet in order to set properly. This form of pitching would, of course, be dearer than ordinary dry pitching, but it would be more durable and sightly, and would be more easily inspected and maintained in good order.

157. Concrete and Brick Pitching.—On some works¹ in England pitching formed of concrete blocks has been tried, but in India this would probably be a much dearer form than stone, as the latter will usually be available at a cheap rate at dam sites. Moreover, concrete blocks will not be so durable as stone, and will be peculiarly liable to wear at the joints. It would seem better if concrete has to be adopted, to form it in situ in large slabs, say 10 feet long and 5 feet wide, and separated from each other by free joints in order that it may accommodate itself to the

^{1 &}quot;Minutes of Proceedings Inst. C.E.," Vol. cxxxii., p. 226.

settlement of the dam without at the same time exposing numerous joints to the action of the waves.

Brick pitching has been used on some river embankments in Sind and might be tried on small reservoirs where stone is not available, being laid stretcher-wise for small and header-wise for moderate sized reservoirs. Bricks are scarcely hard enough to resist the impact of large waves, and cannot be made of sufficient depth to withstand it.

158. Grass or Reed Revetments.—In some Madras' tanks a grass, or reed, revetment is used. The reed employed is one that grows in marshy land, and has numerous joints, at each of which is an eye, from which a shoot will spring if it is buried in the ground. A layer of reed is first placed horizontally on the embankment with the root ends inwards; along the centre of this a fascine made of the reed is placed parallel to the axis of the embankment, thus forming a step, and the rest of the layer is folded over it and is then covered with soil, and subsequently other steps are similarly formed. The whole is then watered until the eyes at the joints of the reeds begin to shoot. Eventually a forest of reeds, 10 or 12 feet high, springs up and forms an effective barrier to the action of waves.

This is, of course, the cheapest form of protection possible, but it is open to the great objection that the surface of the embankment is entirely hid from inspection, and thus rats and crabs may burrow in it unperceived and unsuspected. It is an essential for a covering of an embankment of any height that it should be fully open to view, so that any damage to it, or to the underlying earthwork, may at once be detected and repaired.

¹ Buckley's "Irrigation Works in India and Egypt," p. 83.

In Sind, river embankments are sometimes protected by allowing tamarisk to grow a little distance in front of them, and, in the case of high embankments, up the base of the slope, care being taken to trim off all bottom branches so that the earthen surface may fully be exposed to view.

Neither of these forms of protection by natural growth is, however, suitable to high reservoir embankments.

CHAPTER III.

THE WASTE-WEIR.

I. THE WEIR PROPER.

- 159. Different Forms of Waste-Weir.—Waste-weirs are usually of three forms:—
 - (a) Drowned channels;
 - (b) Drowned weirs;
 - (c) Clear overfall weirs.

These three classes of weirs are simple and perfectly automatic in their action, and the selection of one of them depends upon the nature of the ground and upon its levels. For all classes the bed of the upstream approach channel, if excavated, is level, and practically at the same level (vide paragraph 164) as the actual crest of the weir, while the downstream tail channel is made with a slope falling from the weir crest, so as to provide for the passage of the flood with a small tail depth; the inclination of this slope is usually made 1 in 100 when the ground is sufficiently hard to withstand the velocity thereby produced (vide paragraph 179).

The following table shows the discharging power per foot run of weir of classes (a) and (c):—

DISCHARGE OF WASTE-WEIRS PER LINEAL FOOT IN CUBIC FEET PER SECOND.

Total depth of Flood in Feet.	1	2	3	4	5	6	7	8	9	10
Drowned Channel with fall of I in 100 (approximate) Clear Overfall Weir	2°38	7'29 9'39	13'70	22 22 27 16	32,22 38.32	43°92 50°52	57°04 63'87	71·87	87'92 93'55	106'05

The drowned channel discharges are taken from Appendix 10, and the clear overfall discharges from Appendix 11.

160. Drowned Channels and Weirs.—A drowned channel weir (vide Fig. 25, p. 202) is one having the crest of the weir at its bed level. Where the natural surface is of rock, or hard material, at, or above, full-supply level, the channel can be left as a simple excavation. Where, however, there is any likelihood of erosion, the actual crest of the weir should be constructed as a wall founded on a reliable stratum so as to preserve the full-supply level of the reservoir, and so as to distribute the flood discharge evenly over the whole width of the tail channel. Without such a crest wall, one or more deep scour channels would be rapidly formed by the concentration of the tail discharge down them. The channel form with a gentle longitudinal tail slope is best suited to soft soils, so that the severe action of an overfall on them may be avoided.

A drowned weir (vide Fig. 26, p. 206) is one of small height, having its crest below the surface of the tail channel discharge when the reservoir is at high-flood level.

161. Clear Overfall Weirs.—A clear overfall weir (vide Fig. 27, p. 208) is one having its crest above the surface of the tail channel discharge when the reservoir is at high-flood level. As the action of the overfall on the foundations is very severe, the weir wall must be founded quite securely. The best foundation is one of solid, unfissured, compact rock, into which the waste-weir wall should be founded for at least 2 feet in depth. Where this material does not exist, the wall must have its foundations carried considerably deeper and at least to 5 feet in depth; soft, erodible soils must be protected by a water-cushion (vide Fig. 24, p. 185), which will also lessen the initial horizontal velocity of the water as much as possible.

Where the natural levels and formation of the ground permit, it is advisable to convert channel weirs into clear overfall ones, so as to gain increased discharging power. It is, of course, not necessary for this purpose to lower the tail channel more than the depth of the high-flood discharge down it; in fact, where the ground is of a soft nature, a less amount of excavation will suffice, as the floods will themselves scour out the channel. The allowance for this scouring action can safely be made by deepening, to the full extent and full bed-slope, only the head of the tail channel for a length sufficient to prevent the surface of its discharge from topping the weir, the bed of the rest of the channel being continued therefrom with a less inclination (see also paragraph 177).


In the case of a few old native tanks where the foundations are bad and the ground is considerably below the full-supply level, the waste-weir has been formed as a rapid; but this has not been done in the case of modern works of any size, as rapids may entail much expenditure on maintenance. A natural rapid of hard material does not, however, involve as much expenditure on maintenance as does an artificial one, as excessive erosion of it can be prevented by cross curtain walls (vide paragraph 178).


- 162. Positions of Weirs—Flank and Saddle Weirs.—In respect to their positions waste-weirs may be classed as:—
- (a) Flank weirs, at the immediate flank and in continuation of the dam embankment;
- (b) Saddle weirs, separated from the dam by high ground.

Flank weirs are naturally the less safe form of the two, as the discharge from them is liable to out-flank and injure the dam. To prevent this a wing wall is required on the

upstream side and a lining wall on the downstream side. The lining wall is necessary to divert the floods from the dam; it should be continued until the tail channel has a

FIG. 20 SECTION

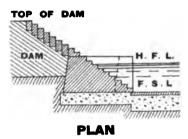

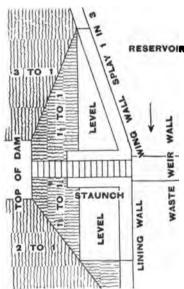


clear course away from the embankment, and should be raised at least 2 feet above the surface of the tail channel high-flood dis-The junction of charge. the waste-weir wall and the dam is best effected, as shown in Fig. 20, by a stepped passage, which permits of easy access to the works and at the same time acts as a staunching fork, preventing leakage from occurring at the junction.

Saddle weirs do such protective require works, as they discharge clear away from the dam, but, to prevent them from being out-flanked. should have masonry flanks on each side, raised at least 2 feet above high-flood level, and flood embankments in continuation. raised at least 5 feet above

that level. As explained in paragraph 75, these flank embankments can be utilised as "breaching sections" to prevent the over-topping of the main dam embankment during abnormal floods. Similar flank works are required for flank weirs at the side remote from the dam, when the ground there is below high-flood level, so as to direct the tail flood down a defined channel.

Saddle weirs are decidedly the better form, and should be adopted wherever practicable in preference to flank weirs, as the waste-weir tail channel should discharge as far away as possible from the dam.

163. Sections of Weirs.—There is no advantage, so far as discharging capacity is concerned, in raising the crest

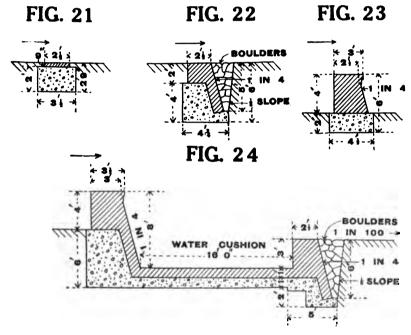

of the waste-weir wall above the high-flood level of the tail channel, and such additional raising has the great disadvantage of increasing the action of floods on the foundations of the weir. Waste-weir walls will, therefore, generally be low, and will be high only when the ground where they are constructed is much below the designed full-supply level of the reservoir.

Fig. 21 shows a form which may be adopted for the crest wall of a channel weir with good foundations; Fig. 22, one for a channel weir with bad foundations; Fig. 23, one for a clear overfall weir with good foundations; and Fig. 24, one for a clear overfall weir with bad foundations.

'Where there are not to be any weir-crest shutters, the top-width for low weirs should not be less than 2 feet 6 inches; where such shutters are used, the top-width will have to be increased to permit of their being worked. The upstream face of the wall should be vertical, and its downstream one should batter 1 in 4. Preferably the downstream face of a weir with deep foundations should have the batter continued as a masonry facing to protect the concrete base. The crest should always be level in cross section, as it is not necessary to ramp it down to the reservoir side to help the passage of silt over it, as is desirable in the case of a river weir (but see Appendix 11, note 5). The downstream edge of the crest should be corbelled out so that the floods passing over it may be made to discharge clear of the downstream batter of the weir. The mean width of weirs (built of heavy trapstone masonry) of a less total height than 10 feet may be taken in ordinary cases as equal to two-thirds their height: for such weirs of greater height, and for those discharging a great depth of flood, their sections should be determined by means of stability diagrams.

164. The Approach Channel.—This is usually excavated level with the crest of the weir, but, where the channel is very long and the water in passing over it would thus lose head by the friction of the bed, it is preferable to excavate it from 6 inches to 12 inches lower than crest level.

The approach channel must have a perfectly clear and unobstructed course of the full width to the waste-weir, as any contraction of it would cause the water to head-up upstream, and would thus diminish the discharging capacity of the waste-weir crest. In determining that discharging capacity the effective length of the wasteweir crest to be taken into account is that which is measured normally to the line of flow. It is of no use curving the weir crest, or making it oblique in plan in order to increase its length beyond this amount, as that will not lower the reservoir below the level necessary at the narrowest part of the approach channel to pass the required discharge. Such an increase of length will diminish slightly the actual flood depth over the crest itself, but will thus induce a greater velocity of approach to it, and the head thus consumed will practically be equal to the diminution of the flood depth over the actual weir crest. Were this artifice of increasing the length of the weir effective, it could be developed greatly by making the weir crest deeply serrated in plan, and this at once shows that it is not really of any use.

To flow with full effect over an oblique weir, the water would have to change its direction so as to cross the weir at right angles, and therefore, to make that work properly effective, the approach and tail channels would have to be curved, and thus widened correspondingly; consequently, the oblique weir would practically become one at right angles to the altered channels.

The amount of excavation of the approach channel of a flank weir may, however, be considerably decreased, where necessary, by curving it, as shown in Fig. 28, paragraph 177, as this will save the removal of the soil between the outer curve and the line at right angles to

^{1 &}quot;Minutes of Proceedings Inst. C.E.," Vol. lx., p. 114.

the end of the weir there (where the surface of the ground will usually be of the maximum height) without diminishing the normal width of the channel. Care must be taken, however, not to make the curve too abrupt, or else the high-flood water will have an irregular flow over the weir crest, which will thus be less effective in discharging it. For this reason the approach channel curves should be set out from a centre on the centre line of the dam some distance away from the waste-weir.

165. Safety Flood Cuts.—Where the ground at the proper level is sufficiently hard, auxiliary flood cuts can be excavated so as to help the discharge of the main weir in times of abnormal flood. The level to which these should be excavated is one which will let them come into play only during high floods, so that they will not be exposed to the long-continued action of moderate floods; they will thus not require protective works to prevent their erosion. Generally speaking, that level may be 2 feet below the calculated high-flood Such flood cuts will not have a great discharging power per foot run, and, therefore, to make them of substantial assistance to the main weir they must be of considerable length. They should, of course, be situated where their discharge will not do any injury.

That discharge cannot be utilised for irrigation, partly because it will take place at rare and uncertain intervals, and partly because, when it does occur, it will be the result of excessive rainfall, rendering irrigation unnecessary at the time. In the case of the main wasteweir, however, an irrigation channel might be led off by a pipe, or cut, somewhat below full-supply level and beyond the reach of the waste-weir discharge, so that it can thus utilise for the irrigation of high lands water which would otherwise run to waste.

166. The Depth of the Maximum Flood on the Waste-Weir.—The depth of the maximum flood permissible on a waste-weir depends upon the nature of its foundations; the sounder they are, the greater may be the depth of flow. A deep discharge, of course, lessens the length of the waste-weir required, and, if adopted, may somewhat diminish the cost of the work. However, a long weir is safer than a short one, as any abnormal increase of the depth of the flood over it will result in greater discharging power than the same increase of depth will do over a short weir.

As stated in paragraph 78, the less the flood depth over the waste-weir, the lower will be the height required for the dam, and, consequently, the cheaper will be the embankment. Comparative estimates of the combined costs of waste-weirs of different lengths and dams of different corresponding heights should, therefore, be made, and, other things being equal, the cheapest combination of the two should be selected.

The depths of the maximum floods generally allowed vary from 4 feet to 6 feet, and the weirs are, therefore, This margin of safety between fullof great length. supply level and high-flood level involves what may be considered either as a very expensive, but essential, addition to the cost of the dam, or as a surrendering of a large amount of storage. In a few cases the temporary raising of the reservoir level by a small amount at the end of the monsoon has been attempted, either by means of low earthen banks, or by removable teak shutters fitted into removable rolled joist uprights. The length of the weirs makes this expensive, and, what is worse, slow in management, but the usual design of the works renders it difficult to arrange for automatic, or quickacting, devices for discharging floods (vide paragraphs 184,

188 and 189), and without them such temporary raising of the reservoir surface is attended by an undesirable amount of risk.

167. The Factors producing the Maximum Rate of Run-off.—In paragraph 7, the principal factors influencing the amount of the yield from a catchment have been described. These factors have a similar influence in determining the amount of the maximum rate of run-off which may be expected. Each catchment has a maximum rate of run-off depending upon its local conditions, but it may be stated as a general rule, that the smaller the catchment the greater will be the intensity of its run-off, other conditions being the same. small catchment may be subject to intense rainfall falling at the same time over its entire area, and the maximum rate of run-off from all parts of this will reach the waste-weir at practically the same time. As a catchment increases in size, the less likely is it to have such intense rainfall occurring simultaneously over its whole extent, while the maximum rate of run-off from the more distant portions will probably reach the wasteweir later than that from the ones nearer to it. the average rate of run-off from a large catchment will generally be less than that from a small one (vide paragraph 171A).

Heavy falls of rain, however, are known to occur over very large areas at the same time; these generally last for long periods, so that the flood discharges of the upper tributaries of the reservoir have sufficient time to arrive at the site of the dam simultaneously with those of the lower streams. These widespread and long-continued falls of rain are, however, usually of less hourly intensity than that of sudden local storms, but their effect is to make the rate of the maximum run-off from large catch-

ments vary less in proportion to their size than that from small catchments.

- 168. Formulæ for the Rate of Maximum Run-off.— There are several formulæ for the rate of maximum run-off; the best known and most frequently used of these are given below.
 - (a) Dickens' Formula.—This formula is:—

$$D = C M^{\dagger}$$
.

where D is the flood discharge in cubic feet per second; M, the catchment area in square miles; and

C, a coefficient varying from 150 to 1,000 or more, and generally taken as 825.

This formula does not take directly into account the intensity of the rainfall. It allows for the greater rate of discharge from small than from large catchments, and agrees fairly well in this respect with the table of waste-weir runs-off in Appendix 8, as will be seen by the following comparison:—

1	2	3	4	5	6
M = No. of square miles in catchment.	M₹	Relative Run-off per square mile.	Comparative Run-off per square mile.	Allowance for Run-off in Appendix 8.	Remarks.
1 5 10 20 50 100	1.00 3.35 5.62 9.45 18.79 31.62	1.00 0.67 0.56 0.47 0.38 0.32	In inches per hour. 3.00 2.01 1.68 1.41 1.14 0.96	In inches per hour. 3.00 2.36 1.95 1.51 1.10 0.89	Col. 3 = Col. 2 Col. 4 = Col. 3 × 3, in order to make its initial run - off allowance the same as that of Col. 5.

⁽b) Ryves' Formula.—This formula, which is much used in Madras, is:—

$$D=C M^{\frac{3}{2}},$$

where D is the flood discharge in cubic feet per second:

M, the catchment area in square miles; and
C, a coefficient which is taken thus:

within 15 miles of the coast ... = 450
from 15 to 100 miles from the coast .. = 563

for limited areas near the hills .. = 675

This formula also does not take directly into account the intensity of the rainfall. It also allows for the greater rate of discharge from small than from large catchments, but does not agree so well in this respect as does Dickens' with the table of waste-weir runs-off in Appendix 8, as will be seen by the following comparison:

I	2	3	4	5	6
M = No. of square miles in catchment.	M [§]	Relative Run-off per square mile.	Comparative Run-off per square mile,	Allowance for Run-off in Appendix 8	Remarks.
1 5 10 20 50	1.00 2.92 4.64 7.37 13.55 21.53	1.00 0.58 0.46 0.37 0.27	In inches per hour. 3.00 1.74 1.38 1.11 0.81 0.66	In inches per hour. 3.00 2.36 1.95 1.51 1.10 0.89	Col. $3 = \frac{\text{Col. 2}}{\text{Col. 1}}$ Col. $4 = \text{Col. 3} \times 3$, in order to make its initial run-off allow-
	33			2 09	ance the same as that of Col. 5.

(c) Craig's Formula.\(^1\)—This formula takes into account the varying width of the catchments, their slopes, and the amount of the rainfall (but not its hourly intensity, which is a very important factor), and is therefore theoretically much more exact than the other two. It is:—

$$D = 440 B (C v i) hyp. log. $\frac{8 L^2}{B}$,$$

^{1 &}quot;Minutes of Proceedings Inst. C.E.," Vol. lxxx., p. 201.

- where D is the flood discharge in cubic feet per second;
 - B, the mean width of the area in miles;
 - C, the coefficient of discharge, varying with the nature of the basin;
 - v, the velocity of the drainage in feet per second;
 - i, the rainfall in inches;
 - L, the length of the catchment in miles measured from the point of discharge to the centre of the watershed base.

For irregular catchments, the perimeter has to be made regular by straight lines, and the whole area has to be divided into triangles with their apices at the point of discharge. The total discharge is the sum of the discharges of the component triangles.

169. The Limited Utility of Run-off Formulæ—Flood Observations—Cyclones.—It will be seen that each of these formulæ requires the application of a coefficient C. and this has to be determined in each case by experiment, so that the utility of the formulæ is much lessened. If there is a neighbouring catchment to that for which a project is contemplated, the flood discharges of which have been observed for a long series of years and the factors of run-off are precisely the same in the two cases, the results of the former may be applied to the latter by means of the selected formula. If, however, those factors differ, so also must the coefficients, and the results of the first catchment cannot be applied directly to determine the probable run-off from the second catchment until the proper coefficient for it has been ascertained.

The waste-weir has to discharge safely the maximum flood which may occur, although such a flood may not happen except at intervals of many years. It is therefore necessary to determine, as accurately as possible, the

discharge of the maximum flood known. If there are good records extending for at least twenty-five years (which will rarely be the case in India), they should be taken into account, but, where they do not exist, recourse must be had to local information. The height to which an abnormal flood rose will generally be impressed upon the minds of the villagers, and usually they will be able to point out high-flood marks along the course of the stream: From these sufficiently accurate flood sections can be obtained, and the high-flood discharge can thus be calculated.

If the record is a short one, in order to provide for contingencies, it will be advisable to allow 25 per cent. over the observed maximum flood when estimating the discharge for which provision should be made. It is far safer to rely upon the results of observation than upon a mathematical formula, for the intensity and amount of the rain are not fixed quantities, nor are the original state of wetness of the ground (vide paragraphs 17 and 18) and the rate of travel of a storm always the same, but it is upon these variable factors that the variation in the rate of the flood discharge of any particular catchment entirely depends. In the case of a reservoir, however, it is not necessary, as in that of a drainage work. to provide for the absolutely maximum rate of flood which may occur, for the storage capacity of the tank will act as a moderator of the intensity of the discharge, as is explained in paragraphs 182-184.

Where drainage areas are liable to be visited by cyclones, it is not practicable to determine exactly what will be the discharge resulting from such storms, as their intensity is so abnormal. In such cases it is best to provide liberally for the ordinary maximum floods, and, in addition, to allow for these abnormal ones by designing

breaching sections (vide paragraph 75) and safety flood cuts (vide paragraph 165).

In paragraph 28 it has been stated that in twenty Bombay tanks the average cost of the waste-weir is only 9.45 per cent. of that of the whole reservoir. As a proper provision for this essential to safety is comparatively so cheap, and as the results of the bursting of a dam may be so disastrous, it is always more prudent to err on the side of safety and to make ample allowance for floods than to run any risk of failure by having insufficient waste-weir discharging capacity.

170. Tanks in Series.—In this connection it may be noted that it is most undesirable to construct a chain of tanks one below the other on the same stream. for the failure of an upper one may cause all the lower ones to breach successively by what, in effect, will be an artificial cyclone. It may be said that modern reservoirs are constructed so as not to breach. which is, of course, true: but accidents to them have occurred, and it certainly does not appear to be sound engineering to run any needless risks in this way. The proper treatment of such a stream is to form on it one reservoir capable of impounding a storage equivalent to that of all the proposed minor tanks. Where, however, from physical conditions a chain of tanks is absolutely unavoidable, care should be taken that the capacities of the works increase in the order in which they stand with relation to each other, i.e., the downstream ones should always have larger storages than the ones upstream of them, so that the former may better be able to absorb the sudden and large inflow due to the failure of the latter. Full provision for dealing with abnormal floods should be made, in such cases, by means of breaching sections and safety flood cuts.

In Madras, Ryves' formula (vide paragraph 168 (b)) has been adapted for the calculation of the maximum rate of flood discharge from connected catchments, thus:—

$$D = CM^{\frac{1}{2}} - cm^{\frac{3}{2}}$$

where c is taken as &C; and

m is the area in square miles of the portion of M draining into the upper tanks.

This formula, however, excludes one important factor -the relative sizes of the upper tanks compared with those of their individual catchments; where this is small, these tanks may have little, if any, moderating effect; where it is very large, they may absorb most of the run-off into them. When a tank is filling above its full-supply level a part of the incoming flood is absorbed in raising its level, and the proportionate amount of this depends upon the area of the tank's water-spread, or basin, compared to its catchment area (vide paragraph To estimate the effect of the reduction of the rate of discharge from an upper catchment by a tank situated in it, the more correct method would appear to be to take into account the area of the upper basin, and not that of the catchment draining into it, and to allow a properly reduced rate of run-off from that basin as the rate of discharge from the waste-weir of the tank. In other words, it would seem better to estimate separately the probable high-flood depth of each minor tank, after allowing for its flood-absorptive capacity, and to calculate the resulting discharge of its waste-weir when determining the amount of waste-weir provision required for the main reservoir.

171. Empirical Allowances for Waste-Weir Runs-off.

—Although it is better to depend upon observations for the determination of the maximum discharge for which

waste-weir provision has to be made, still in India sufficient experience has been obtained of the behaviour of reservoirs to enable allowances to be prescribed which err sufficiently on the side of safety, and can therefore be adopted without incurring risk.

A table of such allowances for average catchments is given in Appendix 8. The hourly rates of run-off from gradual increments of catchment area (vide col. 2) have been adjusted, so that, when plotted in diagram form (vide Plate 2), they are on a regular curve; the discharges due to these runs-off for each increment in catchment area are entered in col. 3: the discharges from the total catchment areas are given in col. 4, and from them the average hourly rates of run-off from the total catchments are deduced and noted in col. 5 and plotted on Plate 2. The object of thus determining these average runs-off is to prevent a total discharge from a larger catchment being calculated from the table as less than that from a smaller one, and to obviate the neglect of the effect of the intensity of the rainfall on the smaller constituent areas near the dam. Thus, if col. 2 alone were considered. the amount of run-off from 10 square miles would be calculated as $(10 \times 1.40 =)$ 14.00 inches from 1 square mile, and from 11 square miles only to $(11 \times 1.16 =)$ 12.76 inches from 1 square mile. Taking col. 5 properly into account, the results are, respectively, equal to:-

 $(10 \times 1.95 =) 19.50$ and (19.50 + 1.16 =) 20.66 inches from 1 square mile.

Special conditions of the catchment area, of course, have to be taken into account; a purely ghát catchment would be given a greater, and a purely plain one a smaller allowance. Allowance for the general intensity of heavy rainfall in the locality and also for the amount of actual floods would have to be made.

171^a. High-Flood Run-off from Different Catchments.—On page 199 is a table comparing the rate of the high-flood run-off from, and discharge of, different classes of catchment areas, and the corresponding curves are drawn on Plate 2^a. Three values are there given for Bombay (Deccán) catchments, and one each for Ceylon and Transvaal catchments.

The first curve for Bombay catchments is plotted from Appendix 8: it shows throughout larger results than those of the other two similar curves: for the smaller areas its increase of discharge is not very great. but for those over 100 square miles in extent is con-The additional allowance is made for the siderable sake of providing safety, the necessity for which naturally increases with the size of the catchments and the consequent importance of the works to be constructed on them, as the larger are the reservoirs, the greater is likely to be the damage to life and property which will be caused by their failure. As pointed out in paragraph 167, very heavy falls of rain have been known to occur in the Deccán over extensive areas, and it is therefore necessary to provide sufficient waste-weir accommodation accordingly. At Mahilla, near Dhulia the Khándesh district, the Pánihrá River September 15th, 1872, had a flood discharge of 276,000 cusecs, which is equal to a run-off of 0.54 inch per hour, from its catchment of 788 square miles. An extension of this curve would allow for such a discharge, whereas that of the other two Bombay curves would not. Other excessively high runs-off occurred in 1882.1 and abnormal floods must be arranged for although they may not take place except at intervals of many years. The designed

^{1 &}quot;Minutes of Proceedings Inst. C.E.," Vol. cxxxii., Appendix II.

TABLE	TABLE COMPARING THE HIGH-FLOOD KUN-OFF FROM AND Run-off in Inches per Hour.	un-off in In	Run-off in Inches per Hour	our.	PROM AND	DESCRARG	Discharge in Cubic Feet per Second.	Discharge in Cubic Feet per Second	c Feet per	Second.
Square	Bombay (Bombay (Deccán) Catchments	tchments.	Ceylon	Transvaal	Bombay (Bombay (Deccán) Catchments	atchments.	Ceylon	Transvaal
Miles.	Appendix 8.	Beale.	Whiting.	ments.	ments.	Appendix 8.	Beale.	Whiting.	ments.	ments.
1	3.00	2:50	2.75	1.24	1.50	1,936	1,600	1.775	800	968
6 0	29 82 28	2:18	2:36 6	1.16	1.86	3,640	2,750	8,080	1,500	1,742
w	2.65	1.89	2.17	80.1	1.23	5,130	3,650	4,200	2,100	2,387
•	2.49	1.76	2·03	1:01	1.14	6,421	4,550	8,250	2,600	2,935
տ	2:36	1.66	1.95	0.94	1.05	7,615	5,356	6,292	3,030	3,387
©	2.25	1.68	1.89	0·88	0.97	8,726	6,100	7,300	3,400	8,774
7	2.16	1.51	1.83	0.82	16.0	9,770	6,850	8,250	3,700	4,097
œ	2.08	1.46	1.77	0.78	0.86	10,751	7,550	9,150	4,000	4,387
9	2.01	1.42	1.72	0.74	0.80	11,687	8,250	10,000	4,300	4,645
10	1.98	1.89	1.67	0.71	0.76	12,590	8,970	10,777	4 ,600	4,871
15	1.69	1.26	1.51	0.64	0.59	16,333	12,197	14,617	6,200	5,677
20	1.81	1.17	1.88	9	0.49	19,560	15,100	17,811	7,600	6,322
25	1.40	01.1	1.30	0.56	0.42	22,528	17,747	20,973	9,000	6,838
8	1·10	9 9 9	0.98 8	9	0.27	35,435	29,040	31,621	13,000	8,774
75	0.97	18.0	0.85 0.80	0.32	0.22	47,000	39,204	41,140	15,500	10,387
20	0.89	0.74	0.78	0·28	0.19	87,500	47,764	48,400	18,000	11,838
• 150	0.80	19.0	1	0.23	0.12	77,000	KO.048	l	22,000	14,096
•	2.70	>					ノファーエー			

allowances (vide Appendix 1, cols. 14 and 15) for Ashti (No. 12), Mhaswad (No. 14) and Máini (No. 17) tanks may also be referred to in support of this curve. The discharge estimated for Ekruk (No. 11) is considerably less than that given in the table, but that tank is situated much to the east where there is not great likelihood of heavy rain falling all over a large area at the same time, and its catchment is comparatively flat. For good sites the cost of ample waste-weir provision should comparatively not be great (vide paragraph 28), and that cost can be safely reduced by the adoption of the "stepped waste-weir" (vide paragraphs 188 to 195) when such a design is practicable. (Also, see Note 5 to Appendix 11.)

The second curve for Bombay catchments is due to Mr. H. F. Beale, M.Inst.C.E. For areas less than 100 square miles it is below the third curve, but afterwards rises above it. It, however, then becomes so flat that it probably would not give large enough values for greatly increased catchments even if it sufficed for smaller ones.

The third curve for Bombay catchments was devised by Mr. J. E. Whiting, M.A., M.Inst.C.E. For areas of 25 square miles and under it does not differ greatly from the first curve, but for those above 100 square miles becomes extremely flat.

The Deccán catchments are subject to very heavy rainfall, and the run-off from them is very great owing to their steep slopes and large extent of impervious and barren land.

The curves for Ceylon (low country) and Transvaal (middle and high veld) compare with each other, but are very much below those for Bombay owing to the flatter slopes covered with vegetation of their catchments, and


to the smaller amount of rainfall on them. The Transvaal is liable to storms of great intensity but of short duration and comparatively small extent; it has fairly steep catchments but they are generally grass-clad. Cevlon has less violent storms but they extend over a large The drainage areas of reservoir sites there are generally not steep, and are usually covered by forests, which greatly diminish the intensity of the floods from small catchments, but, compared with the Transvaal, increase it for large catchments as they prolong the period of run-off. For neither of these colonies have records been maintained for a sufficient time to enable perfectly reliable curves to be drawn for their high-flood discharges. On December 20th, 1911, the high-flood discharge of the Kanakaravan Aru, at the site of the dam of the Iranaimadu reservoir (Karachchi project), where the river has a catchment area of 227 square miles, was gauged as 50,000 cusecs, which is nearly double the amount which would be deduced from the table. rainfall was, however, much above the normal; 20 inches in one day were gauged at one place in the neighbourhood, and over 10 inches in one day at each of five other near stations.

It will be noticed that all five curves illustrate the general law that the discharge from small catchments is relatively much greater than it is from large ones. They all flatten considerably at their limit of 200 square miles, and this is one indication that, were they extended to include much larger areas, they would then become practically horizontal. In other words, after a certain limit had been reached, an increase of catchment area would not lead to an increase of flood discharge, as the run-off from the upper parts of the catchment would arrive at the point of discharge after the run-off from

its neighbourhood had diminished or stopped. This condition applies to catchments having a sensibly uniform width and therefore affluents of much the same size; where, however, a main river is joined by a considerable tributary, the condition would not hold directly but would be influenced by the effect of each of the catchments concerned.

172. Formulæ for the Discharge of Waste - Weir Channels.—For calculating the discharge of these (vide

FIG. 25

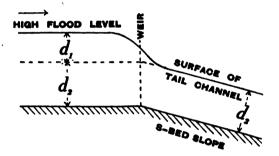

paragraph 160) the following formulæ are used (vide Fig. 25):—

(i.)
$$D = a\sqrt{r}$$
 . $c_2\sqrt{s}$. . . (Chézy);

(ii.) D =
$$c_1 b \sqrt{2g} d_1 \left(d_2 + \frac{2}{3} d_1 \right)$$
. (Eytelwein); or $\frac{\mathrm{D}}{c_1 b \sqrt{2g}} = \sqrt{d_1} \left(d_2 + \frac{2}{3} d_1 \right)$,

where D is the discharge in cubic feet per second;

- a, the cross-sectional area of the tail flood in square feet;
- r, its "hydraulic mean radius" =

 c_1 , the afflux coefficient (vide Appendix 10);

c₂, Bazin's coefficient for the tail channel (vide Appendix 9);

s, the slope of the tail channel $=\frac{\text{fall}}{\text{length}}$;

b, the breadth, or length, of the weir in feet;

 d_1 , the height of the flood afflux in feet;

d₂, the depth of the tail channel discharge in feet; and

g, the force of gravity.

D and s being given, then $a = b \times d_2$ in the first formula is found by trial. From the second formula d_1 is ascertained, generally by trial to avoid a cubic equation. The height to which the flood will rise in the reservoir is $d_1 + d_2$, and this must be provided for, care being taken not to neglect d_1 , as is sometimes erroneously done.

173. Calculation of the Discharge of a Waste-Weir Channel.—An example of the calculation of the discharge of a waste-weir channel is given below. The channel is assumed to be 200 feet wide, and to have vertical sides and a longitudinal slope from the crest line of 1 in 100, and the total flood depth to be 8 feet. In the first place it is necessary to assume both the tail depth and the afflux height, and then to make trial calculations until the correct results are obtained.

A. Tail Depth.

Assume
$$d_2 = 4.48$$
 feet
$$D = a \sqrt{r} \cdot c_2 \sqrt{s}$$

$$= 896 \times 2.07 \times 77.5 \times 0.1$$

$$= 14,874 \text{ cusees}$$

$$a = bd_2 = 200 \times 4.48 = 896$$

$$r = \frac{a}{wp} = \frac{896}{209} = 4.29$$

$$\sqrt{r} \cdot \dots = 2.07$$

$$c_2 \cdot \dots = 77.5$$

$$s = 0.01; \sqrt{s} = 0.1$$

B. Afflux Height.

Assume $d_1 = 3.52$ feet.

$$\frac{D}{c_1 b \sqrt{2g}} = \frac{14,874}{0.7 \times 200 \times 8.02} = \frac{14,874}{1,123} = 12.80$$

$$\sqrt{d_1} \left(d_2 + \frac{2}{3} d_1 \right) = \sqrt{3.52} \left(4.48 + \frac{2}{3} (3.52) \right)$$

$$= 1.88 \times 6.83 = 12.84$$

Therefore the two sides of equation (ii.) of paragraph 172 are approximately the same with the assumed values, and the assumptions are sufficiently correct. The total flood depth is:—

$$d_1 + d_2 = 3.52 + 4.48 = 8.00$$
 feet.

In calculating \sqrt{r} and $\sqrt{d_1}$ a table of square roots will be found most useful. Appendix 10 gives the values of c_1 , and Appendix 9 those of c_2 .

It may be noted, as an aid to adjusting d_1 and d_2 , that for any given change of d_1 the value of the side of the equation $\sqrt{d_1} (d_2 + \frac{2}{9}d_1)$ will change less than will the side of the equation $\frac{D}{c_1b\sqrt{2g}}$ for the corresponding variation of d_2 required to make the sum of $d_1 + d_2$ the same. This is illustrated by the following examples:—

I	2	3	4	5	6	7
Factors.		Case 1.			Case 2.	
$d_1 \\ d_2 \\ d_1 + d_2$	4.60 6.40 11.00	4.80 6.30 11.00	11.00 6.00 2.00	6·30 8·70 15·00	6·50 8·50 15·00	6·70 8·30 15·00
$\sqrt{d_1}\left(d_2+\frac{2}{3}d_1\right)$	20.27	20.20	20.00	32.38	32.84	33'07
$\frac{\mathrm{D}}{c_1 b \sqrt{2g}}$	21.45	20.43	19.33	33.78	32.24	31.50

Columns 3 and 6 show the nearest correct approximations possible, taking only the first place of decimals into account for d_1 and d_2 , and greater accuracy is not necessary in such calculations. (Compare Appendix 10, where the second place of decimals has been taken.)

Channel.—A table of the discharges of a 200-foot waste-weir channel with a tail slope of 1 in 100, and with total flood depths varying, foot by foot, from 1 foot to 20 feet, is given in Appendix 10. As the discharges vary with the extent of the flood's wetted perimeter, the discharges of weir channels with the same depth are not in exact proportion to their different widths. However, as the wetted perimeters of such floods very nearly vary with their widths, for all practical purposes the discharges of the floods may be taken as proportionate to their widths, and especially is this the case for the small depths which usually have to be considered. Examples bearing this out are given below:—

Width of channel Feet Total depth of flood ,, By direct calculation Cusecs Deduced from Appendix 10 ,,	1,000	1,000	50	50
	2	10	2	10
	7,322	106,555	362	5,180
	7,285	106,050	364	5,302
11	7, 3	, ,		3,3

Appendix 10 will be found very useful in determining the width of the weir channel and the total flood depth to be adopted in any particular case.

Plate 2^{B} , which is due to Mr. J. A. Balfour, Assoc. M. Inst.C.E., is based on Appendix 10, and by it either the afflux height d_1 , or the tail depth d_2 , for all ordinary total flood depths can be ascertained by inspection after the other has been calculated in accordance with what has been written above. It will be found most useful as it provides for variations in the slope of the bed and consequent differences in the velocity and depth of the tail channel and of the height of the afflux. To use this diagram that velocity will first have to be decided on with reference to what the ground forming the bed of the tail channel can stand without excessive erosion.

The total discharge which has to be provided for being known, trial calculations will have to be made with assumed tail channel bed-widths, depths and slopes until the correct ones are ascertained, and thus the proper value of d_2 will be determined. The discharge of a 200-foot width of the tail channel will then have to be assumed to be in proportion to that of the total width calculated. By looking along the curves of the diagram the corresponding afflux height d_1 can at once be seen and the total flood depth $d_1 + d_2$ can then be found.

The diagram can be used in the reverse way by first assuming and then calculating the afflux height d_1 , and from it ascertaining by means of the curves the tail depth d_2 : the former method, will, however, generally be the simpler of the two. The results of Appendix 10 have been plotted on the diagram and are practically on a straight line.

175. Formula for the Discharge of Drowned Waste-Weirs.—For calculating the discharge of these (vide paragraph 160) the formula used is (vide Fig. 26):—

(iii.) D =
$$c_1 b \sqrt{2gd} \left(d_2 - \frac{d}{3}\right)$$
,

where D is the discharge in cubic feet per second;


- c_1 , a coefficient, which may be taken as in Appendix 10.
- b, the breadth, or length, of the weir in feet;
- d, the height in feet of the surface of the afflux above that of the tail channel;
- d_2 , the height in feet of the afflux above the weir crest; and
- g, the force of gravity.

¹ Higham's "Hydraulic Tables" published by E. & F. N. Spon will facilitate the making of these trial calculations.

² Prof. Unwin's Article on Hydromechanics in the "Encyclopædia Britannica," Vol. 12, p. 473, 9th Edition.

The calculation of the discharge is not a straightforward one, and an example of it is not worked out.

FIG. 26

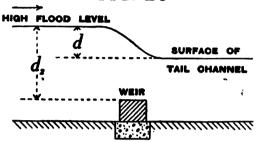

A table cannot be prepared for such weirs as their discharging capacity depends upon the depth of their crests $(d_2 - d)$ below the surface of the tail channels. The depth of the tail channel has to be determined by means of formula (i.) of paragraph 172. The afflux height has to be calculated by assumption, and has therefore to be ascertained by trial calculations unless a cubic equation is worked out.

176. Formula for the Discharge of Clear Overfall Waste-Weirs.—For calculating the discharge of these (vide paragraph 161) Francis' formula 1 (vide Fig. 27) is used. namely:--

(iv.) $D = \frac{2}{9}cbd \sqrt{2gd}$,

where D is the discharge in cubic feet per second;


- c, the coefficient (vide Appendix 11, note 3);
- b, the breadth or length of the weir in feet;
- d, the height in feet of the afflux above the weir crest: and
- q, the force of gravity.

The calculation of the discharge in this case is a straightforward one, and an example of it is therefore

¹ Prof. Unwin's Article on Hydromechanics in the "Encyclopædia Britannica," Vol. 12, p. 472, 9th Edition,

not worked out. A table of the discharges of clear overfall waste-weirs varying in depth by one-tenth of a

FIG. 27

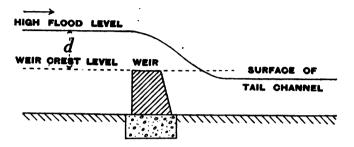

foot from zero to 10 feet has been calculated by this formula and is given in Appendix 11.

In all these formulæ the surface of the afflux is that of the still-water level of the reservoir, or, in other words, the afflux surface is its high-flood level.

II. THE TAIL CHANNEL.


177. The Section of the Channel.—Not only must the flood discharge have a clear approach to the wasteweir, but also it must have a perfectly unobstructed exit from the weir, for some distance from the weir crest, as obstructions in that length will cause the flood to head up, and make it mask and lessen the discharging power of the weir. If, however, the contraction of the tail channel will not cause the flood to head-up as far as the weir crest itself, it will, of course, not interfere with the discharging capacity of the weir. The amount of excavation of a long tail channel can therefore be considerably reduced by gradually contracting its width, as shown in Fig. 28. As in the case of the approach channel (vide paragraph 164), the curves of the tail channel should be ones of large radius.

Another advantage of thus contracting the channel is that the floods, instead of being distributed over a very wide bed, will be confined to a comparatively narrow cut, and will thus tend to keep to a defined course and not to spread over a large area, when they might perhaps excavate for themselves irregular scour channels, which might cause injury to culturable lands.

The channel should start from the waste-weir with

the calculated bed fall. If this involves a large amount of excavation. the slope may be reduced as soon as such reduction can be effected without causing heading-up at the weir crest. Where. however. the fall the natural of country exceeds that of the calculated bed fall. the channel may be given as steep a slope as the former, provided that thereby excessive erosion is not caused up

FIG. 28.

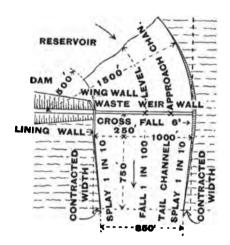

to the waste-weir itself. The tail channel should be led as soon as possible into a natural drainage line, so as to diminish the amount of excavation and so as to secure a regular course for the floods without the necessity for protective embankments. The flood water should be confined to the tail channel by means of lining walls, pitched slopes, or flood embankments, until it can no longer cause injury to the reservoir works or to cultivated lands, buildings, &c.


For flank weirs, in order to direct the flood away from the dam, it is desirable to give the tail channel a small cross-sectional fall—say of 6 inches—to the side remote from the dam. As a general rule in flank weirs the inclination of the surface of the ground will be towards the dam, and the effect of this on the flood discharge should be counteracted by an artificial cross-sectional fall in the opposite direction given to the tail channel.

The above remarks apply to channel and to drowned weirs. For clear overfall weirs little or no excavation of the tail channel will usually be necessary, as the flood waters will find their own wav down the natural depression which will generally exist below the centre of the weir. Also, in the case of saddle weirs, when they are remote from the dam, the floods from them cannot injure the works, and it is usually cheaper to pay compensation for the damage they may cause to the fields through which they pass than to construct embankments or to excavate channels to protect them. It may, however, be useful, even for them, to excavate a shallow channel so as to direct the first overflows; the floods will thus be led at but little expenditure to scour out a deep cut down to hard material, and thus may effectually confine themselves to a defined course.

178. "Retrogression of Levels."—A tail channel does not usually widen itself, although severe floods passing down it before it has cut a regular course may cause the formation of scour channels branching from the main one. The effect of floods is generally to deepen the tail channel, and the deepening as a rule results from the cutting back of the bed where the soil is soft; the exposed face, even when of hard material, may thus be eroded away with rapidity: this action has been termed the "retrogression of levels." As long as the erosion does

not extend to the weir, it does no harm, but if it threatens to reach that work, it must be prevented by the construction of curtain walls built right across the tail channel and founded securely, and, if possible, in rock. Where hard material does not exist in the channel bed, these walls must be protected by pitched rapids, or, better still, by water-cushions, which can be formed by raising the crests of the lower walls.

FIG. 29
BECTION OF WATER CUSHIONS IN SERIES

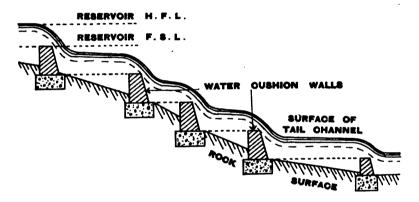

This retrogression of levels is most likely to occur at a site where the waste-weir is situated on a ridge with a steep fall downstream, as all but the soundest unfissured rock is liable to be detached in large blocks by the rapid descent of floods over it. The best treatment of such a site is to form a series of water-cushions down to the general level of the country, as each of them will destroy much of the horizontal velocity of the water, and the flood will pass with a comparatively gentle flow over the lowest one (Fig. 29). It will facilitate design and construction if all the water-cushion walls are made of the

same height and section; their distances apart will thus vary with the slope of the ground.

The great advantage of curtain and water-cushion walls is that they distribute the floods evenly over the bed of the tail channel downstream of them and thus prevent the formation of scour channels, which might rapidly deepen with each flood, since the discharge will be concentrated down them.

179. The Effect of the Bed Slope on the Yelocity of the Tail Channel Discharge.—The velocity of the flood down a tail channel is calculated by the formula (vide (i.) of paragraph 172 above):—

$$V = c_2 \sqrt{r s}$$

where V is the velocity in feet per second;

c₂, Bazin's coefficient (Appendix 9);

r, the hydraulic mean radius =

area (in square feet)
wetted perimeter (in feet); and

s, the slope of the channel $=\frac{\text{fall}}{\text{length}}$.

The effect on \sqrt{s} of increasing the slope is at once apparent from the figures given below:—

	,						
Bed Slope, r in r = \sqrt{s} =	5,280 0:000189 0:014	2,640 0:000379 0:019	1,320 0:000758 0:028	1,000 0'001 0'032	0.003	200 0.002 0.040	0.100 0.01 100

In other words, \sqrt{s} is seven times as great when the slope is 1 in 100 as when that is 1 foot in a mile. An increase of s will, however, diminish r and c_2 , but on the whole will increase V in the formula.

The slope to be selected depends chiefly upon the nature of the bed of the tail channel, as the velocity produced by it should not exceed that which the soil can

stand without excessive erosion. For total flood depths exceeding 6 feet, where the channel is in rocky ground a slope of 1 in 100 can be given as a maximum; where it is in hard ground, the slope should not exceed 1 in 500; and where it is in ordinary soil, it should not be steeper than 1 in 1.000.

The effect of reducing the inclination of the slope while maintaining the weir of the same length is, of course, by lessening the velocity, to increase the depth of the tail flood, and, thus in the case of channel and drowned weirs, to raise the afflux height and to add to the cost of the dam which has to be constructed correspondingly higher. Where the tail slope has to be made flat, it will generally be found cheaper to lengthen the waste-weir rather than to raise the dam, but the decision as to what has to be done in each case should be arrived at after making alternative estimates of the two works combined. will usually be cheaper by flattening the slope to reduce the velocity of the tail channel discharge than to construct protective works to control it. Too high a velocity may be dangerous, and too low a one may entail unnecessary expense.

Where a weir has its outfall into a stream parallel to itself and with a bed considerably below its crest level, the weir should, when the ground is soft, be placed as far away from the stream as is necessary in order to reduce the inclination of its tail channel; or, if this is not practicable, a good water-cushion should be formed below the weir. If, however, the tail channel is rocky and can withstand the overfall, the weir may be advanced towards the stream.

180. The Outfall of the Tail Channel.—The most desirable outfall for a waste-weir is one into the stream on which the reservoir is constructed, and as near to the

dam as is practicable without injuring the works or interfering with their drainage. This latter is a most important consideration, as the floods, when cutting out a new channel for themselves, will bring down a large amount of detritus, which will tend to choke the bed of the main stream and to block channels excavated in it for drainage.

Where the outfall is to another stream, unless the channel of that stream is ample to pass off the added drainage, (which will seldom be the case in India, where heavy floods usually overflow the banks), damage may be caused to the neighbouring lands. The bed, too, of the original stream being deprived of scour, may silt up, thus interfering with the drainage of the dam; may become marshy and covered with rank vegetation, and may thus lead to malaria. The subsoil water level of the riparian lands may be raised, and perhaps a saline efflorescence on them may be formed, thus rendering such fields unculturable.


181. Design with the Tail Channel Parallel to the Waste-Weir.—In the previous paragraphs tail channels at right angles to the waste-weir have been discussed. Such channels are in general use, but another form is practicable in which the channel at starting is nearly parallel to the waste-weir; this is illustrated in Plate 4, Fig. 1, and Plate 6, Fig. 2. In the case of the Mâlâdevi tank project the parallel channel was adopted to lessen excavation and to get a tail discharge in a defined channel suitable to the general design of the weir with its under-sluices and automatic gates.

This form is chiefly adaptable for sites where the waste-weir accommodation is naturally restricted in extent by high ground, as is shown in Fig. 30, where a hill is seen coming close to the dam. The waste-weir is

therefore designed nearly parallel to the high-flood contour of the ground, and at a distance from it sufficient for the space required by the tail channel. It will generally be best in such a case to build the weir as a clear overfall one, but, where necessary, it may be of the channel form, the tail channel being then excavated as a trench parallel to the crest of the weir.

In calculating the sections of such a parallel tail channel, its water surface slope must first be determined, as its

discharge depends upon this, and not upon its bed slope; steeper this surface slope, the smaller will be the sections of the tail channel. The area required to enable the channel at anv point to carry the discharge due to the length of the weir upstream of it can be calculated

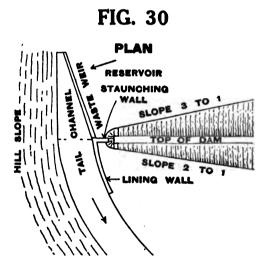

in the usual way. The channel will thus have to be increased in width gradually from the upstream to the downstream end of the weir, and should be continued therefrom with its maximum width until this can safely be reduced, as explained in paragraph 177. In making the calculations, account must be taken of the losses of velocity due to the tail water having at once to change in direction through a right angle and to the effects of eddying motion. It is believed no such form of tail channel has yet been constructed for a large Indian flood,

and it is therefore advisable to make full provision for these losses when this design is adopted.¹

III. THE FLOOD-ABSORPTIVE CAPACITY OF RESERVOIRS.

182. The Regulating Power of Lakes.—During high floods the surface of a reservoir rises because the wasteweir at the lower levels is not able to discharge the water at the same rate as that at which it is entering the tank. When the incoming flood decreases so that the discharging capacity of the waste-weir at the level attained by the reservoir becomes greater than the rate of inflow, the storage surface is gradually lowered. The action of a reservoir is, therefore, to moderate the intensity of a natural flood by absorbing part of it as it arrives, and to discharge this part after that flood has diminished.

The property of flood-absorption and discharge-regulation possessed by large lakes is well known, but it is believed that, at present, advantage of it has not been taken in the design of reservoirs constructed in India. The best known natural instances of it are the great lakes of North America and Central Africa and the Lake of Geneva. It is probable that the size of these lakes compared with that of their inflowing rivers is relatively larger than is the case with Indian reservoirs, and also that the maximum falls of rain filling them are of less intensity than those which occur in India, so that the rise of the storage during heavy storms is less there than it is in Indian tanks.

183. The Necessity for Large Absorptive Capacity.— To utilise this property of regulation sufficiently and safely it is essential that the storage capacity of the reservoir between its "restricted" (vide paragraph 184)

¹ This design has recently been proposed for the very large Daddi Tank, Gokák Canal Extension Project, Bombay.

or full-supply level and its high-flood level should be large in comparison with the vield from the drainage Otherwise, a prolonged storm of great intensity may fill the tank to the last-named level, and, if it continues thereafter, there will not be any flood-regulation possible, and the waste-weir at high-flood level must. therefore, have a discharging capacity equal to the maximum rate of inflow. It is for this reason that in existing reservoirs advantage has not been taken of this property. It is seldom in them that the calculated high-flood depth over the weir exceeds 6 feet, that depth being fixed as a limit so as not to have a discharge of great volume per foot run over the weir and down the tail channel. There have been instances in Bombay of actual floods exceeding the calculated high-flood level when that was less than 6 feet, although, when the wasteweir discharge was calculated, the flood-absorption of the reservoir was not taken into account. It would therefore appear advisable not to make an allowance for the influence of the reservoir in regulating the flood discharge when the calculated high-flood depth over an ordinary weir is less than 6 feet.

It may, of course, be said that these instances of excessive flood prove that the rate of maximum run-off was under-estimated, as, during the rise of the reservoirs up to calculated high-flood level, the rate of inflow must greatly have exceeded the calculated maximum discharging power of the waste-weirs. The flood-absorption during this period may, however, be considered to provide safety over and above the discharging capacity of the weir.

184. Method of safely utilising the Property of Flood-Absorption.—As it is not prudent to increase the depth of the maximum flood over a waste-weir, another plan must be adopted for utilising the flood-absorptive

property of the reservoir if advantage of it is to be taken. This plan consists in tapping the reservoir at a low level, so as to "restrict" it to such level before the maximum flood discharge arrives, and so that that flood may have to raise the reservoir surface to a considerable extent; while the surface is thus being raised the tank will absorb a large part of the run-off. During this period the rate of outflow from the reservoir will be less than the actual high-flood discharge of the river, and the natural intense flood of short duration will thus be converted into a prolonged one of less volume. The action on the wasteweir tail channel of the prolonged, gentle discharge will be less than that of the short, intense flood.

It must be remembered that the rise of the reservoir surface during a flood is very much more gradual than that of the inflowing stream, and that the maximum discharge of that stream is produced long after the rain has commenced to fall. There is thus ample time from the beginning of a heavy storm to lower the tank to a considerable extent if sufficient provision has been made in the design of the waste-weir to permit of the escape of a large discharge at a low level. A design which will thus safely utilise the flood-absorptive capacity of the reservoir is described in paragraphs 188 and 191.

Not only must a waste-weir be able to deal with an individual flood, but it must also be capable of disposing of a second flood following the previous one at a short interval. The calculations of discharge made in Appendices 12 to 14, taken in the reverse order to that in which they are therein entered, show that a waste-weir designed on the lines recommended, will soon lower the surface of the reservoir after a flood, and will thus enable the work quickly to regain flood-

absorptive capacity so as to dispose safely of a subsequent flood.

185. The Allowance for Flood-Absorption in the Reservoir.—In order that the provision for flood-absorption in the reservoir may be sufficient to prevent its calculated high-flood level from being exceeded, full allowance must be made for the total yield from the maximum flood which may be expected from the catchment. Sir Thomas Higham has discussed this subject in a note, dated 24th March, 1902, on tank projects and the method of dealing with waste-weirs in the Central Provinces. He lays down the following rules in the two cases considered:—

(a) When the Waste-Weir alone is taken into account.

"Unless the absorptive capacity of the tank above crest level is greater than half the total influx during the continuance of the flood (which is not ordinarily the case), the waste-weir must be designed to pass the whole run-off per second, and the flood-absorbing capacity of the tank above crest level must be neglected."

(b) When the combined effects of the Waste-Weir and Outlet are taken into account.

"The absorbing capacity of the tank must be neglected unless this will be greater than half the total inflow during the continuance of the flood less half the amount that would pass through the outlets during the same time, assuming the rate of outflow to be that obtaining at commencement of flood, or when the water surface in the tank is at crest level."

These rules have been based on mathematical considerations, but, as the intensity and duration of a

maximum storm cannot be predicted, the following rules based on practical considerations are suggested:—

- (c) Rules for the provision of the proper extent of Reservoir Flood-Absorptive Capacity.
- (i.) During the rise of the water surface in the reservoir, the flood disposed of hourly (by absorption in the tank and by the discharge from the waste-weir and the outlet) should at least be equal to half the calculated maximum rate of run-off from the catchment.
- (ii.) During the total rise of the water surface in the reservoir to calculated high-flood level, the total flood disposed of should at least be equal to the yield of the calculated maximum flood from the catchment.
- (iii.) The combined discharging capacity of the wasteweir and of the outlet at high-flood level should at least be equal to half the calculated maximum rate of run-off from the catchment.

It will be noticed that these rules (c) provide for the effect of the capacity of the reservoir relative to the size of the catchment and also take into account the anticipated rate of run-off and the yield from it during heavy rainfall. They also provide a considerable margin of safety for abnormal floods by implying that the difference between the "restricted" level of the tank at the commencement of the flood and the calculated high-flood level shall be a large one.

185. Mathematical Calculation of the Effect of Flood-Absorption.—The question how far it is desirable to reduce the length of the waste-weir on account of the flood-absorptive capacity of the reservoir has been exhaustively discussed from a mathematical point of view by Captain A. ff. Garrett, R.E., in his pamphlet, "The General Theory of the Storage Capacity

and Flood Regulation of Reservoirs," which was published at Calcutta in 1912, by the Superintendent, Government Printing, India. He has taken into account the flood results of numerous tanks, chiefly in the Central Provinces. where, however, the record extends only to five years (which is too short), and has devised formulæ, and based tables thereon, for calculating the length of waste-weir required when the flood-absorptive capacity of the reservoir is allowed for. He states that these formulæ give results closely in accord with observations made and provide a margin of safety; also that by their use the lengths of waste-weirs have been reduced considerably -in certain cases by more than 50 per cent.-when compared with the lengths usually allowed. (As pointed out in paragraph 183 above, the fact, however, remains that abnormal floods (the ones to be provided for) have been known to exceed the designed high-flood levels (when their heights above full-supply level were comparatively small), although the flood-absorptive capacity of the reservoirs was not considered when the lengths of the waste-weirs were calculated.)

The author admits in his preface that where the difference between the full-supply and high-flood levels is great the problem is difficult to deal with mathematically, and, as far as he can see, can be solved only by trial and error. (In paragraph 183 above it is stated it is only in such cases that advantage should be taken of the flood-absorptive capacities of reservoirs.) He further allows, in his paragraph 29, that the efficiency of his formulæ, "as in the case of all results based on mathematical analysis, depends entirely on the soundness of the assumptions made—in the present instance on the value adopted for the maximum flood influx i, and its period of duration, T." In the same paragraph he adds,

"local conditions are so variable that it must always remain impossible to fix runs-off and durations of floods with any great degree of accuracy, and the figures which will prove most suitable must therefore be very largely a matter of judgment and experience, based on knowledge of the peculiarities of the catchment and local rainfall." (These conclusions appear eminently sound, and greatly to minimise the value of the mathematical treatment of the subject.)

186. Examples of Reservoir Flood-Absorption Calculations.—The flood calculations of the Málâdevi tank project are selected as examples of calculations on the basis of rules (c). That tank has a catchment of 153 square miles, for which, according to Appendix 8, the average rate of run-off should be 0.80 inch per hour. As the drainage area is a good one for producing discharge, the rate of run-off might, however, be taken as 1.00 inch per hour.

Appendix 12 gives a calculation for the temporary waste-weir, first closure. During the rise of the tank, the run-off is disposed of at a rate varying from 0.44 to 0.68 inch per hour, and the total run-off dealt with in this period is 4.75 inches. The high-flood discharging capacity of the weir is at the rate of 0.546 inch per hour.

Appendix 13 gives a calculation for the temporary waste-weir, second closure. During the rise of the tank, the run-off is disposed of at a rate varying from 0.44 to 0.62 inch per hour, and the total run-off dealt with in this period is 3.98 inches. The high-flood discharging capacity of the weir is at the rate of 0.42 inch per hour, which is somewhat small, but the work as it would be constructed (vide the note to the Appendix) would have a greater discharge.

Appendix 14 gives a calculation for the permanent

waste-weir. During the rise of the tank, the run-off is disposed of at a rate varying from 0.44 to 0.75 inch per hour, and the total run-off dealt with in this period is 6.96 inches. The high-flood discharging capacity of the weir is at the rate of 0.418 inch per hour, and to this has to be added the discharge of the outlet, at the rate of 0.07 inch per hour (vide paragraph 200), giving a total high-flood discharging capacity of 0.488 inch per hour.

IV. THE "STEPPED WASTE-WEIR."

187. Objections to the Usual Form of Level Waste-Weir.—The usual form of a solid weir wall with a permanent crest raised throughout to full-supply level is best suited for reservoirs the replenishment of which is not certain, as for them the storage level has to be kept as high as possible during the whole of the monsoon, so that full storage may be obtained at the end of the rains.


The further great advantage of such a form of weir is that it is perfectly automatic in its action. So much has the value of this property impressed many engineers that they consider any form of non-automatic weir unsound in principle, although the working of most engineering schemes requires human agency for their management.

The great objections to a solid and level weir are that it tends to keep the reservoir full during that part of the year when it is most difficult to effect repairs; it prevents the reservoir from being lowered rapidly when necessary in the case of an accident to the dam; it impounds the earliest monsoon floods, which are always the most heavily charged with silt (vide paragraph 36); and, by maintaining the largest reservoir capacities, it gives all floods passing through the tank the maximum time in

which to deposit their silt. Further, with it the floodabsorptive capacity of the reservoir cannot be brought fully into play, and hence the length of the weir may have to be doubled beyond what is necessary when that capacity can properly be utilised. Finally, the storage capacity between full-supply and high-flood levels cannot, as a rule, be made safely available with this form of weir.

188. General Description of the "Stepped Waste-Weir."—To meet the objections to a solid weir with a permanent crest, the "stepped waste-weir" design is put forward. A form adapted to a saddle site is illustrated

FIG. 31 LONGITUDINAL SECTION

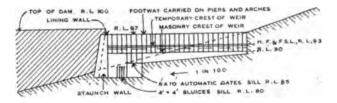

in Plate 6, and one suitable for a flank site is sketched in Fig. 31. For the latter it will be best to place the undersluices and automatic gates some distance away from the end of the dam, so as to avoid the formation of a deep channel at this side, although the position thus selected may entail an increase of excavation in the tail channel.


Such a weir may consist of five sections:—

- (a) A drowned channel or weir;
- (b) A clear overfall weir;
- (c) An under-sluice section;
- (d) An automatic gate section; and
- (e) A temporary weir crest.

The levels at which the discharge will be passed through, or over, the work will thus vary considerably, and hence the name "stepped" given to this form of weir. By this variation of level, conformity with the natural profile of the ground can best be attained, for it will be but seldom that, for the long length required for a weir, the ground will be level throughout; hence, with this kind of weir there may be a considerably lessened amount of excavation in the tail channel.

The stepped weir is best adapted to tanks with assured replenishments, for with them it is not necessary to

FIG. 32 LONGITUDINAL SECTION

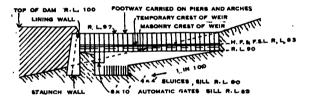

arrange for securing the complete storage until near the close of the monsoon. It can, however, be used for tanks having uncertain replenishments, but for these it will be advisable to have a greater number of undersluices placed with their sills at the lowest level practicable and having a maximum discharging power equal to that of the weir crest proper (vide Fig. 32).

By this arrangement, before the arrival of a large flood, a very considerable lowering of the reservoir surface can be effected. In this case that surface may have to be maintained at a higher level in the early part of the monsoon than will be necessary for a tank with a certain replenishment.

- 189. Advantages of the "Stepped Waste-Weir."— This form of weir meets the objections enumerated against the level weir with a solid crest (vide paragraph 187), and has the following advantages over that type:—
- (a) It enables the level of the reservoir to be "restricted," or kept low, during the early part of the monsoon, when the rainfall is most continuous and repairs can be effected only with difficulty;
- (b) It allows the reservoir surface to be lowered rapidly when this becomes necessary in the event of an accident to the dam (a most useful advantage);
- (c) It permits the earliest monsoon floods, which are those most heavily charged with silt (vide paragraph 36), to be passed out of the tank in the shortest possible time and with the minimum deposit of silt;
- (d) By keeping the storage of the reservoir as small as possible during the earlier part of the rains, it enables all floods during this period to pass out of the tank quickly and before they deposit all their suspended silt;
- (e) It permits larger catchments to be utilised without fear of excessive silting;
- (f) It brings the flood-absorptive capacity of the reservoir fully into play, and allows the capacity between full-supply and high-flood level to be stored for irrigation at the close of the monsoon;
- (g) It enables the length of the weir to be reduced greatly, (a matter of the greatest importance with a site of restricted length);
- (h) It allows a great variety of sites to be adopted for the waste-weir, as it is better suited to the usual natural profile of the ground;
- (j) It converts a short flood of maximum intensity into a prolonged one of smaller amount, which will less injuriously affect the tail channel;

- (k) It enables the tail flood to be directed along a defined and comparatively narrow channel, and thus may avoid the cost of lengthy protective works;
- (1) The deepest part of the weir may be utilised as an outlet for a reservoir with a comparatively small depth of utilisable storage.

It may be added that the stepped waste-weir is adapted only to countries where the rainfall is confined to certain periods of the year and where storms of great intensity have to be dealt with: these conditions are, however, the usual ones in the tropics.

- 190. Objections to the "Stepped Waste-Weir."—The objections which may be raised to the stepped waste-weir are two:—
 - (a) It is not automatic;
- (b) It may not be possible to utilise it owing to the uncertainty of securing full storage at the end of the monsoon.

In respect to (a) it may be said that throughout the early part of the monsoon, when the under-sluices and temporary weir crest would be fully open and the automatic gates arranged to open at once, the weir would be automatic, i.e., it would pass the maximum flood possible without the need of any regulation by human agency. It is only at the close of the rains, when the final amount of storage is being, or has been, obtained by the closure of the under-sluices and by the erection of the temporary crest, that the weir will not be automatic. The reservoir surface will, anyhow, fall from high-flood level to fullsupply level early in the cold weather (during which season storms of any intensity are hardly known in India), and only for a few weeks at the end of the monsoon will it thus be essential to ensure that the weir is intelligently worked. It must be remembered that the rise of

a reservoir, even during a heavy flood, is so slow that it will never be necessary to act with extreme promptitude. If a railway, where a matter of less than a minute may mean all the difference between safety and an accident, can be successfully worked throughout the year by human agency, much more easy will it be to regulate the levels of a reservoir by means of a stepped wasteweir during the few weeks when only it will not be automatic.

The objection (b) to this form of weir is more reasonable. There will certainly be some difficulty with a catchment having an uncertain yield to determine for how long the reservoir surface should be kept at, or below, the level of the sills of the lowest sluices without endangering the final loss of storage. The maintenance of the tank at this level is, however, chiefly required in the interest of diminishing its rate of silting, and for such storages that may be more or less sacrificed. The principal utility of the stepped waste-weir for such catchments lies in its power of enabling the full-supply level of the reservoir to be raised to high-flood level at the end of the monsoon. This increase of storage can safely be effected by increasing the discharging power of the weir at its lowest levels (vide end of paragraph 188 and Fig. 32).

With reservoirs having unfailing replenishments this objection has, however, but little force. Their catchments will almost invariably produce a sufficient amount of run-off at the close of the rains to complete the filling of the tanks. The best catchments will be those which furnish a fair weather discharge after the end of the rains of an amount sufficient to complete the high-flood level storage, as thus a large proportion of the contents of the reservoir will consist of water having originally the

minimum of silt suspended in it. An example of such a treatment is furnished by the Assuán dam across the Nile.

191. Detailed Description of a "Stepped Waste-Weir."—The stepped waste-weir proposed in the Mâlâdevi tank project is illustrated in Plates 4, 6, 7, and 8, and may be taken as an example of the general form of this type of weir.

At the flanks the weir is designed with a clear overfall crest 1,004 feet long (with a net length of ventage between the piers on the crest of 800 feet), and having a maximum flood depth over it of 4 feet. At the centre are twenty 6 feet by 4 feet under-sluices worked by lifting screws and capstans, and protected against injury from floating logs, &c., by gratings formed of iron rails. Next to these sluices are eight 8 feet by 10 feet automatic gates. Above all, and extending for the whole length— 1,133 feet—of the weir crest, is an arcade carrying a foot-path and a tramway on which travelling winches can run: these will work the 10 feet by 4 feet teak shutters, which are used to raise the weir crest temporarily and thus to increase the reservoir full-supply level by 4 feet to high-flood level. It may be noted that 4 feet is probably the proper limit of height for such a temporary crest, and that it would generally be better not to make it more than 3 feet in height: in the present instance, owing to the short length available for the waste-weir, this could not be done except by a considerable increase of the under-sluices. At the extreme flanks are small embankments connecting the weir with the hill slopes: these have their tops lower than that of the main dam and are of smaller section than its crest, so that they

^{1 &}quot;Minutes of Proceedings Inst. C.E.," Vol. clii., Paper No. 3361.

may act as breaching sections (vide paragraph 75) should any abnormal flood occur.

On the upstream side the high ground at the approach channel is excavated to the level of the masonry crest of the weir. On the downstream side are excavated cross channels, parallel and next to the weir (vide paragraph 181), so that the surface of their high-flood discharge may be at an inclination of 1 in 100, and of gradually increasing width to enable them to pass off that To reduce the depth of the foundations of discharge. the weir and to protect them, curtain walls are placed at intervals across these channels. The lowest two of these walls (one at each side of the under-sluice section) form with it and the "water-cushion wall" a watercushion, enclosed on all four sides by masonry, in which the whole discharge from the weir is collected and passed down regularly to the tail channel. The sides of the cross channels opposite to the weir are protected from erosion by masonry lining walls, and small pitched flood embankments are carried parallel to the cross channels and to the tail channel, as far as this protection is necessary, to prevent the weir floods from flowing over the ground beyond them. The tail channel has at first a bed fall of 1 in 100, and afterwards one of 1 in 50, until it meets a natural deep watercourse into which the floods are turned. The width of the tail channel is gradually reduced so as to save excavation, care being taken that no heading-up and consequent retardation of discharge is thereby produced at the weir itself. By these arrangements the floods are tapped at a low level, and are passed down a defined channel to the river.

192. The Under-sluices and Temporary Weir Crest.—

(a) Under-sluices.—The under-sluices (vide Plate 11, and Appendix 18^A, Specification 27) are of the

ordinary cast-iron pattern, with planed gun-metal faces; these slide on cast-iron frames, similarly faced, and between cast-iron guides. They are raised by lifting rods which pass through the arcade piers so as not to be injured by floods flowing over the weir crest.

(b) The Temporary Weir Crest.—Probably the best arrangement for this will be that shown on Plates 7 and 8, and described in paragraph 191. It entails the construction of an arcade on top of the weir, but it is advisable anyhow to go to this expense so as at any time to secure the means of dealing with any part of the weir and to gain access to the whole work.


On the large weirs of Northern India there are several ingenious forms of crest shutters, but, owing to the great length of the works, they are of a somewhat cheap description, and it is difficult and takes time to close them, so that these designs do not appear suitable for the crest of waste-weirs which have a comparatively short length and a small crest width. However, such devices up to 6 feet in height are worked, and, if economy is absolutely necessary, they might be used on waste-weir crests, but their height had better be limited to 3 feet. For this, or a smaller, height some form of drum weir should be useful, as it might be designed in sections, say, 200 feet long, so as to be worked by water pressure from the ends of the weir.

192. The Automatic Gates.—The automatic gates proposed are similar to those erected at the Bhátgarh reservoir, in the Poona district, which are of the design patented by Mr. E. K. Reinold. These have been tested by actual experience for some years, and have proved quite satisfactory. The principal objection to them is that the gates travel downwards to open, so that they

are not adaptable to all situations. Their action may thus be described (vide Fig. 33 1):—

The gate, which may be 10 feet long by 8 feet high, travels downwards by means of rollers running on rails from its closed to its open position. To secure freedom of motion, the sluice frame is set at a very small angle

FIG. 33 CROSS SECTION THROUGH CENTRE OF OPENING

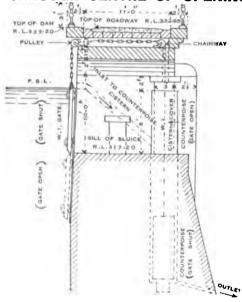

to the gate, so that the two are in watertight connection only when the gate is fully raised and thus closed. Therefore, only the axle friction of the rollers and not the sliding friction on the frame has to be overcome. Suspended from the gate by two chains, one on each side, is counterpoise weight. which works in a watertight chamber, and has a motion reverse from that of the

gate. At the calculated high-flood level there is a large inlet pipe leading from the reservoir to this chamber, and at the bottom of the chamber is a small outlet pipe discharging into the air. When the reservoir is at high-flood level the gate is at its maximum height, and then

¹ Buckley's "Irrigation Works in India and Egypt," p. 180; The Engineer, Nov. 3rd, 1893, pp. 430, 431.

entirely closes the opening between the piers of the sluiceway. Should the reservoir surface rise to a higher level, water will find its way down the large inlet pipe and fill the counterpoise chamber, thus making the counterpoise lose weight, so that it is no longer able to keep the gate in its closed position. The gate then falls, and water is discharged through its sluiceway until the reservoir surface falls below the mouth of the inlet pipe. When this happens the outlet pipe drains the chamber, the counterpoise regains its full weight, and, descending, raises the gate to its closed position. This action of the counterpoise can be called into play at any designed level by fixing the mouth of the inlet pipe accordingly, or by means of a valve worked by hand which will admit water through a pipe to the chamber when desired.

Several other forms of automatic gates have been recently patented, but as yet not much practical experience of their working has been gained. Some have failed as they get clogged with débris, which, for this reason, should be prevented from entering the gate arrangement. To ensure that the action will be automatic, the design must be simple and without anything which may jam or become obstructed; to obviate the latter defect the vents should be comparatively large.

By a small modification of Mr. Reinold's design the counterpoise could be made to descend and the gate to rise when the reservoir surface exceeded high-flood level. This might be done by making the counterpoise hollow and larger, and by leading into it a pipe at high-flood level to fill and load it, and by having a smaller pipe at the bottom of the counterpoise to drain it: the counterpoise chamber would, of course, have to be kept free of water. If on account of the levels of the ground and water being high the counterpoise has to be fixed at a

high level, it might be filled from an upper cistern, supplied by a hydraulic ram, and the pipe connecting the two could be opened or shut by means of a float which could be made to come into action at the desired limit of height of the reservoir surface. The arrangement of the gate to lift will permit it to be used on a river weir, the bed of which is likely to silt up, or on a low weir of a reservoir, and will also obviate the initial overfall action of the flood on the crest of the weir and lessen that on its foundation.

On the waste-weir of Lake Fife, near Poona, have been erected automatic gates, somewhat similar to Mr. Reinold's, which have been patented by Mr. Visvesvarya, C.I.E., M.Inst.C.E. These gates work in pairs. and are hung together by chains: the gates of each pair are of different weights, so that the counterpoise to which they are attached in common has to deal only with the difference of their weights and can thus be made small. The counterpoise is weighted so that when its cistern is empty its own weight is sufficient to pull up, or shut. the heavier gate, and then the lighter gate falls by its own weight and also closes its sluice vent. When the cistern is filled with water, the counterpoise loses weight, the heavier gate then falls and draws up the lighter one, and the vents of both are thus opened. The action of the counterpoise can be controlled by a valve as in the case of the Reinold pattern.

Mr. Visvesvarya has also patented another form in which all the gates are of equal weight and rise to bring the waste-weir into action. Each gate is connected by a chain to an upper balance weight working in a chamber constructed in a sluice pier, which weight is not quite sufficient to overcome the combined resistance of the

¹ Buckley's "Irrigation Works of India," 2nd Edition, p. 200.

gate, and its counterpoise in the dry to be lifted so as to open the sluice-way. The gate is also attached to a counterpoise working in a cistern as before; the weight of this in the dry, plus that of the gate itself, is sufficient to cause the gate to fall and close its sluice opening. When water is admitted into the counterpoise cistern the counterpoise loses weight, and the balance weight draws up the gate and opens the sluice.

The Reinold gate transmits the whole of the waterpressure on to the axles of only four rollers, which may thus tend to become distorted, or the rollers may get stiff by rust or cut by grit. The well-known Stoney sluice 1 avoids these defects by transmitting that pressure to numerous free rollers suspended in a frame: these rollers bear directly on to the fixed frame of the sluice and thus enable the gate, even when of large size, to work easily even under great heads. The planed face of the gate is on its upstream side, so that the tendency of the water pressure is to separate the gate from its frame during its upward or downward travel, and the two come into water-tight connection only when the gate is fully closed. This form of sluice has, it is believed, not been used in connection with an earthen dam, but could with advantage be adopted for the under-sluices of the stepped waste-weir so as greatly to increase their discharging power and rate of manipulation, and consequently their efficiency.

As the automatic gates have to be placed near the crest level of the weir they have not the same rate of discharging power as the under-sluices, which can be fixed at any required lower level. Were a careful watch kept over the reservoir surface when it is at, or near, highflood level (and it should always be easy to arrange for this at a work of any importance), automatic gates would

^{1 &}quot;Minutes of Proceedings Inst. C.E.," Vol. lx., p. 88.

not be a necessity, and might be replaced by an additional number of under-sluices. In any circumstances, it will be better to provide for a larger discharging capacity by under-sluices than by automatic gates.

193. Flood Calculation of the "Stepped Waste-Weir." -Appendix 14 gives a calculation showing how the stepped waste-weir of the Mâlâdevi project can dispose of an extreme flood by discharging part of it and by allowing the balance to be absorbed by the reservoir. Starting with a discharge of 7,600 cubic feet per second (which is equal to a run-off of 1.85 inches a day from the catchment, and is a fair small flood), it will be seen that in 13 hours a total flood equivalent to a run-off of 6.96 inches is disposed of. Of this 1.75 inches are passed off by the weir, and the balance, 5.21 inches, is absorbed by the reservoir. When high-flood level is reached, the discharge of the weir crest and of all the sluices and gates will be at the rate of 0.418 inch an hour run-off, and assuming the reservoir remains at this level, the total run-off during the day will be 11.56 inches. These runs-off are far in excess of what may be expected from the catchment, and the waste-weir provision is thus shown to be ample.

The calculated high-flood discharge of the sections of the weir is:—

Cubic feet ner

(a) Clear overfall weir crest, 800 feet in net	second.
length and 4 feet deep	22,827 ¹
(b) Twenty under-sluices, each 6 feet by	
4 feet	12,000
(c) Eight automatic gates, each 8 feet by	
10 feet	6,457
m . 1	44.004
Total	$41,\!284$

¹ This was calculated from the table in Molesworth's pocket book; as calculated from Appendix 11, the discharge is 21,728 cubic feet per second. End contractions have not been allowed for as the piers on the weir crest will have pointed ends.

This is equal to a run-off of 0.418 inch an hour from the catchment, and the flood calculation shows that this provision is ample, although a run-off of 1.00 inch per hour would probably have been required had a level waste-weir been adopted.

In addition to the above high-flood discharge, that of the outlet under-sluices (vide paragraph 200) is 7,027 cubic feet per second, or at the rate of 0.07 inch an hour run-off from the catchment.

194. Working of the "Stepped Waste-Weir."—The arrangements proposed in the Mâlâdevi tank project may be described as an example of how a stepped waste-weir may be worked in the case of a reservoir with an unfailing catchment.

During the early part of the monsoon the outlet sluices would be kept fully open, and, owing to the floodabsorptive property of the reservoir, it would only be rarely that the waste-weir would then come into action. By the beginning of September it would probably be necessary to commence to effect storage above the sill of the under-sluices-R.L. 177.00-at which level the reservoir contents are 2,202.486 million cubic feet, or 0.43 of the high-flood level storage. By the beginning of October the reservoir would be allowed to fill to the masonry crest of the weir—R.L. 196.00—at which level its contents are 4,498.935 million cubic feet, or 0.88 of the high-flood level storage. During October the balance -613.418 million cubic feet, or 0.12 of the high-flood level storage at R.L. 200.00—would have to be stored. The increments of storage represent, respectively, runsoff from the catchment of 6.20, 6.46 and 1.72 inches.

It will be seen from this that up till September the outlet sluices and the waste-weir sluices and crest would be kept quite open and unobstructed, and the reservoir would thus be far safer than one with an ordinary level waste-weir. During September and October the rise in reservoir surface level would have to be carefully regulated. In November the reservoir surface would be maintained at high-flood level, as far as draw-off and replenishment would permit. By the end of that month it would probably have fallen below that level, and the reservoir would thus gain flood-absorptive capacity, which would rapidly increase as the season advanced, until, by the end of December, the masonry weir crest would probably be above water-level, and then the temporary crest could be removed.

The weir would thus require careful supervision by a superior staff only during September and October, as thereafter in this locality there is no fear of storms. Such a staff would be wanted for the working of the whole irrigation project, and could easily devote its especial attention to the reservoir during this period.

195. Saving Effected by the Adoption of the "Stepped Waste-Weir.—It has been explained in paragraph 166 that the margin of safety between full-supply level and high-flood level involves what may be considered either as a very expensive, but essential, addition to the cost of the dam, or as a surrendering of a large amount of storage. This margin is absolutely necessary in the case of a level weir with a solid crest, as it is generally not advisable to attempt to impound much further storage above the top of such a weir. Should a sudden and intense flood come down after the temporary crest has been formed on the permanent one of the level weir. there will not usually be time to remove the upper crest. The flood-absorptive capacity of the reservoir will then be considerably diminished by the increased storage effected by that crest, the reservoir surface may rise

much above the calculated high-flood level, and thus there will be a great risk of the failure of the whole work.

The case is different with a stepped waste-weir which has been properly designed with sufficient discharging power below its permanent crest level by means of undersluices and automatic gates; moreover, the weir arcade will permit of the speedy removal of its temporary crest. With it the storage of the reservoir can safely be allowed to rise at the end of the monsoon to high-flood level, and thereby the maximum capacity of the tank can be secured without any additional increase to the height of the dam. In the event of a sudden and intense flood coming subsequently, it can be dealt with by opening the under-sluices and automatic gates as soon as it is seen that it is likely to occur, and, thereafter, by removing the temporary crest if this becomes necessary. As the flood subsides, the temporary crest can be refixed and the gates and sluices closed so that the tail of the discharge may be impounded in order to restore the full storage capacity.

As an example of the saving effected by the use of the stepped waste-weir, the estimates in connection with the Máládevi tank project may be given. The original level waste-weir design was estimated at Rs. 51,430, but, on account of the deeper foundations subsequently found necessary, it would probably have cost at least Rs. 70,000. The stepped waste-weir design was estimated at Rs. 156,007, or, say, Rs. 86,000 more. The full-supply storages effected by the two forms are:—

Storage in million cubic feet.

Level waste-weir crest, R.L. 188.00 .. 3,385.602 Stepped waste-weir crest, R.L. 200.00 .. 5,112.353

The latter, therefore, stores 1,726.751 million cubic

feet more than does the former, and the capital value of this (at Rs. 238 per million cubic feet, the rate of the total storage of the project with the stepped waste-weir) is Rs. 4,10,967, thus giving a net saving over the level weir of, say, Rs. 3,25,000. The two projects compare exactly in respect of the dam, as for each the high-flood level was taken as R.L. 200.00.

Another way of comparing the two forms of weir would be to take them with the same full-supply storage at R.L. 188.00. In regard to the stepped waste-weir design there would, in consequence of its reduced height, be some saving in the cost of the masonry and some excess in that of the excavation of the tail channel, but, on the whole, there would not be much difference in the cost of the weir itself. The saving in the cost of the dam by the reduction of its top level from R.L. 207.00 to R.L. 195.00 (7 feet above the combined high-flood and full-supply level) would, in this case, amount to about Rs. 2,74,000.

A later design for a level waste-weir 1,575 feet long was estimated to cost Rs. 1,83,020, or Rs. 27,000 more than the stepped waste-weir. Its full-supply level was lower by 2 feet, and its full-supply storage capacity less by 311.557 million cubic feet, than that of the stepped waste-weir design. This diminished amount of storage, capitalised at Rs. 238 per million cubic feet, is equivalent to a loss of Rs. 74,000. Moreover, as the dam had to be raised 7 feet higher to R.L. 214.00 with this design, its cost was increased by Rs. 1,95,000. Thus, this level waste-weir virtually costs Rs. 2,96,000 more than does the stepped waste-weir.

In the above comparisons has been taken into account only the storage rate due to the stepped waste-weir design; had the larger storage rates of the other designs thus been taken instead, the saving due to the stepped waste-weir would have been increased considerably.

Owing to the largely increased capacity of storage reservoirs at the higher contours above that at the lower ones, and to the rapid increase of the quantity of earth work entailed by the raising of the dam, it will certainly be found in every instance that the adoption of the design of the stepped waste-weir will lead either to greatly increased storage or to a greatly diminished cost of the reservoir.

CHAPTER IV.

THE OUTLET.

I. GENERAL REMARKS.

- 196. The Object of the Outlet.—The outlet is the work by means of which the water contained in the reservoir is passed safely through, or round, the dam, so that it may be utilised for the purposes for which the storage has been effected. In the smallest native tanks the outlet is simply a cut through the bank, which is opened when water is required for irrigation, and is closed by embankment when supply is no longer needed. objections to such cuts are that the discharge cannot be controlled completely during ordinary occasions, and that in the event of high floods or of neglect, breaches are apt to be formed by which the embankment is damaged and storage is lost. In a large work such a simple contrivance is quite out of the question, on account of the depth and of the pressure of the water, while, even for the smallest work, it is desirable to provide proper means of regulation and control.
- 197. The Location of the Outlet.—The outlet ought from one point of view to be placed at the head of the most suitable alignment for the distribution works. As, however, the cost of the first section of this alignment is relatively small compared with that of the dam, economy in connection with it is of much less importance than the attainment of the safety of the embankment, and the first consideration should therefore be paid to

the proper location of the outlet with respect to the dam itself.

The best position for an outlet through a dam is at the centre of a saddle, or depression in the natural ground across the centre line of the dam, as then the embankment will settle symmetrically on both sides of it. There will thus not be any tendency to the formation of a crack or slip over it, and any leakage which may occur will naturally find its way at once to the centre of the depression, and will not lubricate the base of the dam beyond it.

The worst position for an outlet is on steep, side-long ground, and particularly on the side of the river gorge. As the outlet will there be placed unsymmetrically with respect to the longitudinal section of the dam, the earthwork on the lower side will have a tendency to move away from it, and any leakage at, or through, the outlet tunnel will lubricate the lower part of the base of the embankment and will increase the tendency to its movement.

When practicable an excellent position for an outlet is near one flank of the dam, or near a cross ridge from its centre line, as then it may be possible to construct the approach bank to the headwall (vide paragraph 214) on natural ground, and not over the centre line of the outlet tunnel (Plate 13, Fig. 4). If placed over that centre line any failure of the dam through settlement may affect the approach bank.

In order to secure the best foundations, to cross the line of the puddle trench safely, and to prevent any settlement of the dam from affecting the outlet, it is best to have the top of an outlet culvert some depth below ground surface.

These remarks apply to outlets the culverts, or channels

of which cross the dam, and not to tunnels or channels which lie wholly outside the dam (vide paragraphs 208 and 209).

Wherever practicable, the outlet should be on the bank opposite to that on which the waste-weir is placed, so that the floods from the latter will not cross the channel from the former. This point should be taken into account when fixing the site for the waste-weir, as the location of the channel will generally be settled by the position of the land to be irrigated. Where, however, both works are on the same bank, the waste-weir floods will have to be passed over the channel in a superpassage, or under it in an aqueduct, which will entail additional expense and may lead to difficulty.

198. The Number of Outlets. — Outlets may be sources of weakness in a dam, and it is therefore desirable to reduce their number as much as possible. In most schemes it will not be necessary to have more than one irrigation channel from the reservoir, but, where two or more have to be excavated, either on one or both banks of the impounded stream, the outlets should be as few as practicable. Where there are two channels on the same bank, the outlet for the upper one will usually be at such a high level that its construction will not be objectionable. Where the channels are on opposite banks, it should be seen if one outlet cannot be made to serve both by bifurcating the main channel from it at some distance from the dam and by leading one branch across the stream to the other side of the valley, either by means of an embankment (with a small drainage work under it), or by an aqueduct. In such a case it may be found desirable to lower the sill of the outlet and to place the work nearer to the stream than would otherwise be considered necessary.

- 199. The Level of the Outlet Sill.—The proper level at which to place the outlet sill will sometimes have to be regulated with respect to that of the land to be irrigated, but, as a general rule, this consideration is not one of the first importance, as the full extent of area to be brought under command can usually be secured by an extension of the irrigation channel. The more important points to remember are that:—
- (a) Space should be provided below the outlet sill for the accumulation of silt in the reservoir (vide paragraph 42);
- (b) The capacity of the lower contours of a reservoir being relatively small compared with that of the upper ones, it is generally not worth much extra expense to provide the means of tapping and utilising the lowest part of the storage;
- (c) The lower the sill, the greater will be the expense and the insecurity of the outlet;
- (d) The higher the sill, the quicker generally will the irrigation channel from it gain command, and the shorter and cheaper will be its course.
- 200. Subsidiary Uses of the Outlet.—The discharging capacity of an outlet is usually regulated, so that with a small head, of, say, 1 or 2 feet, it may give the full supply required for the canal. It is, however, desirable that this discharging capacity should be increased considerably in order to secure the following advantages:—
- (a) The rapid lowering of the water surface of the reservoir when this is required, either in the event of accident to the dam, or for the examination of the outlet sluices:
- (b) The steadying of the rise of the water surface during the monsoon and the saving of the temporary or permanent waste-weirs by bringing into action, early and

safely, the flood-absorptive property of the reservoir (vide paragraph 184);

- (c) The diminishing of the silting-up of the bed of the reservoir (vide paragraph 189 (c) and (d));
- (d) Assistance in the closure of the dam (vide paragraph 139).

Taking as an example the Máládevi tank project, the outlet would have to discharge:—

	Cubic feet per second.
(1) To lower the reservoir 1 foot in a day	y
below R.L. 177.00, the sill level of th	e
under - sluices of the stepped wei	r
(Plate 4, Fig. 2)	. 1,192
(2) To run-off 100th inch per hour from th	
catchment	. 987
(8) To pass 15 inches run-off from the catch	-
ment in four months of the monsoon.	. 514

For a catchment of moderate size, the increased discharge required to serve these purposes can be given by any of the ordinary forms of outlet, but for an extensive catchment the only form practicable, on account of the large volumes to be dealt with, is the headwall in the centre line of the dam (vide paragraph 205 and Fig. 42, p. 269). An outlet of this type for the Máládevi tank project is illustrated in Plates 9 and 10; this has at high-flood level a discharging capacity of 7,027 cubic feet per second, which is equal to a run-off at the rate of 0.07 inch an hour from the catchment.

For a water-supply reservoir it will generally be necessary to have independent valves for these purposes, so that the increased discharge required may not interfere with the supply to the town (vide paragraph 228 and Plates 13 and 14, Fig. 5).

II. DIFFERENT FORMS OF OUTLET.


201. Culvert under the Dam.—This form is illustrated in Plate 13 and Fig. 34. It is usually the cheapest type, and, when properly constructed, can be made perfectly safe.

The following are objections which have been raised to it and the replies which may be made to them:—

- (a) It forms a weak point in the dam. (This may be admitted in theory, but in practice this objection can fully be met by proper precautions in design and by good workmanship.)
- (b) It cannot be inspected properly or repaired when necessary, as it is under a large mass of made earth. (The whole of the construction of the work being executed in the open, there should not be any difficulty in securing first-rate workmanship, and provided a durable material, such as stone, is used, there should not be any need of repairs to the portion next the dam, which is kept at an equable temperature and is not exposed to outside influences. A cast-iron culvert does not appear very desirable owing to the tendency of the material to rust, but, when one is constructed, it should be protected by an external ring of concrete and should be built up of rings in segments, each of which may be removed when decayed and replaced by a sound piece.)
- (c) It is apt to be disturbed by the spreading out of the dam during settlement. (This is rather the fault of the embankment than of the culvert. No such spreading out should occur if the earthwork has been carefully executed, and none has happened in any of the large modern Indian dams. To prevent any possible failure of this kind, it is desirable to build the culvert in a trench and some depth below the surface of the ground, as the friction of the

FIG. 34

OUTLET, HEADWALL AND APPROACH BANK

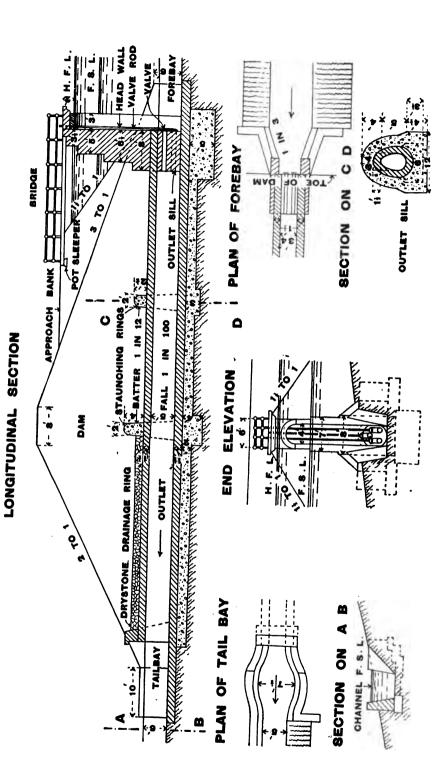


filling against the sides of the excavation will make the culvert practically independent of the dam. In such a trench the length of the culvert will also be reduced to a minimum. Its ends, being well buttressed by the tailand fore-bays, should tend to prevent any motion outwards.)

- (d) It is liable to be fractured where it crosses the puddle (This is the most serious objection to this form of outlet. The puddle trench should never go under the culvert: the latter should have its foundations carried below the bed of the former, but, where this cannot be done, a concrete trench should there be substituted for, and on both sides should be well keyed into, the puddle The culvert should have throughout its length trench. a solid, unyielding, homogeneous foundation, and one not liable to be affected by the percolation of water. This foundation, when practicable, should be of sound rock, but, where this is not available, the culvert should be carried on a wide and deep concrete foundation. reasonable expense should be spared to secure a thoroughly reliable work, and, if the natural conditions will not permit of this, the site should be rejected.)
- (e) A crack is likely to occur, owing to the unequal settlement of the different heights of the masonry, at the junction of the culvert with the headwall or tower. (Such a crack has not been formed at any modern Bombay reservoir, but, should it occur, it would involve only the leakage of water, which would pass harmlessly through the culvert, and would not constitute a danger to the stability of the dam. Fig. 35 shows how the formation of such a crack may be avoided: the upstream end of the outlet culvert is overlapped 12 inches by the concentric arch carrying the superstructure of the tower or headwall. At their junction, A B, the two arch rings are bevelled as

shown, and, being disconnected from each other, can settle independently. When the masonry of the tower or headwall has settled finally, which will be before the reservoir fills, the annular wedge space can be made water-tight by running in cement grout.)

(f) Leakage is likely to occur between the culvert ring and the dam. (Particular care is necessary to avoid this. On the upstream side of the centre line of the dam the junction can be made sound by placing a thick covering of good clay over the culvert ring, and by build-

FIG. 35 section

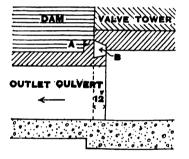

ing this ring with minor projections and with staunching rings, as shown in Fig. 34, These staunching p. 248. rings should completely surround the culvert and its foundation: they should batter in longitudinal and cross section, and should have rounded tops, so that the earthwork may settle tightly on to them. The ring at the centre line of the dam should

have a greater projection than the others, so that it may intercept any flow that has passed over them. The ring which is nearest the reservoir should be situated where it is not likely to be passed by any large amount of infiltration through the dam. Downstream of the centre line of the dam staunching rings are harmful as interfering with drainage; the culvert ring should there be cased with dry material, which will act as a drain and will lead away safely any leakage which has penetrated so far, and will not induce greater percolation from the reservoir. Also, the culvert should be built with

cement or gauged mortar and cement pointed internally so as to make it quite water-tight.)

(g) The valve tower, if placed in the reservoir and connected with the dam by a bridge, is in an exposed position, and is liable to injury by ice or to become difficult of access in stormy weather. (In India there is no likelihood of ice affecting the works, and the stress of weather there is not sufficient to prevent attention being paid to the valves; these, moreover, can be protected from injury by being surrounded by cages or gratings.)

202. General Remarks on Outlet Culverts.

- (a) Sound Design and Construction necessary.—This form of outlet is the one generally built; in Bombay failures have never occurred in connection with it, as the importance of securing absolutely good design and workmanship has always been realised there. Where the design is inferior or the construction bad, the following opinion doubtless holds good:—"Earthen¹ dams rarely fail from any fault in the artificial earthwork, and seldom from any defect in the natural soil; the latter may leak, but not so as to endanger the dam; in nine-tenths of the cases the dam is breached along the line of the water-outlet passages."
- (b) Water-tight Connection with the Trench.—The trench excavated for the culvert should be considerably wider than the masonry, and should be taken out with slightly sloping sides to give space for a good thickness of puddle, so as to ensure that no leaks are formed along the culvert during the settlement of the earthwork. In some cases a concrete casing has been interposed between the ashlar arching and the puddle, or has been allowed entirely to supersede the latter. Every junction of dissimilar

¹ The Engineer, Vol. lxiii., p. 189.

materials is, however, liable to produce a leakage plane; this may happen with concrete and any natural soil, and is still more likely to occur with the smooth surface of the concrete casing and the puddle round it. Puddle will fit much tighter between the rough back of the arching (the projections of which will tend to prevent the formation of leaks) and the sides of the excavation, and, as a greater thickness of it can be used at the same cost as a thinner casing of concrete, it is better to employ it alone for surrounding the culvert.

(c) Form of the Culvert Arch Ring.—Rankine¹ states that the proper form for the line of pressure is the elliptic linear arch, in which the ratio of the half-span to the rise shall not be less than the square root of the ratio of the horizontal to the vertical pressure of the earth. He adds that the entire ellipse may be used as the figure of the arch, or, if necessary, the bottom may consist of a circular segmental inverted arch having a depression of about one-eighth of the span.

Another form which is generally adopted is the ovoid (vide Fig. 34, p. 248, and Appendix 25 (V.)), such as is used for sewers, but for outlets the section is inverted, so as to secure the widest base possible, and this, at the same time, gives the culvert the largest discharging power. For easiness of construction the invert may be replaced by a flat paved concrete foundation of a depth greater than would contain the true section; in this form the bed of the outlet should be constructed with a central drain to pass off leakage (Plate 13, Fig. 5, and Plate 14, Fig. 5).

(d) The Construction of the Pavement of the Outlet.— Where a flat bed is adopted, it should be finished off with a masonry pavement which should be carefully con-

^{1 &}quot;Civil Engineering," 11th ed., Art. 297 A, p. 434.

structed of large stones breaking joint, the side stones should be well keyed under the arch ring, and all should be set in cement mortar, so as to prevent any displacement by a large rush of water. For the same reason the stones should be laid with their longer axes parallel to the flow. The culvert in all cases should have a small longitudinal fall, of say 1 in 100, to facilitate drainage and the flow of the discharge.

- (e) The Size of the Vent of the Culvert.—The size of the culvert will primarily be regulated by the requirements of its discharging capacity, but a very small area of aperture will not permit of inspection, and too large a one will tend to make the work fail under the enormous weight of the dam. For these reasons the limiting internal dimensions of an ovoid section may be taken as 40 inches by 60 inches and 72 inches by 108 inches (vide Appendix 25 (V.)). It is not desirable to have two or more culverts side by side under the dam, as this will weaken it. If more discharging power is required than the single culvert can give, recourse should be had to the type of outlet—the headwall in the centre line of the dam—described in paragraph 205.
- (f) The Thickness of the Culvert Ring.—This will depend upon the size of the culvert and the height of the dam over it. The material of the ring should be the soundest stone procurable, and for such stone the thickness of the voussoirs (vide Appendix 25 (V.)) may vary from 15 inches to 2 feet for dams under 50 feet high, and from 18 inches to 2 feet 3 inches for dams over 50 feet high. To strengthen the ring the concrete of the foundation should be carried up outside the masonry to the horizontal axis of the culvert.
- (g) Staunching Rings.—These have been described in paragraph 201 (f).

203. Pipe Outlet.—Formerly there were examples of pipe outlets in English dams of large size, but these led to failure, and this form of outlet is now never adopted for large works owing to the dangers attending its use. After the dam has been constructed, the outlet pipes cannot be inspected, they are liable either to break or draw under the weight of the dam, and water may leak along the pipes or through their joints.


There are, however, numerous small native irrigation tanks where this form is the only one economically practicable. In such cases the pipes should invariably be laid on a hard, unyielding bed, should have staunching collars, and should be covered with the most water-tight clay procurable. For the smallest tanks earthenware pipes can be used; in some tanks in Madras and Ceylon concrete pipes have been employed; for the larger tanks, with a maximum depth of from 10 feet to 15 feet, cast iron pipes will be required. These should be laid in a trench and should be packed all round with concrete, which will itself form the water passage if the iron pipe rusts away.

204. Siphon over the Dam.—This form of outlet (vide Fig. 36, p. 255) has been built in England and America, but not in Bombay. It is best adapted to small discharges and is therefore not suited to the large ones required for irrigation, and still less to the maximum ones necessary to secure flood regulation. Moreover, it can be used only where the depth to be drawn off is small—probably 15 feet from the inlet end to the crest of the siphon is the practical limit, but to this can be added the depth below the reservoir surface at which that crest can be laid.

The culvert in which the pipes are led under the embankment should have a wide concrete foundation.

in order to secure uniform and small settlement, and should be laid in sound natural ground—i.e., not in the heart of the dam. The necessity for having air-tight iron pipes in addition to the culvert adds to the expense of construction, and will, in most cases, exceed the saving, consequent on their use, of a shorter culvert and lower valve-tower. The design involves a loss of head to produce siphonage, and in many projects this would be a disadvantage.

205. Headwall in the Centre Line of the Dam.—This form outlet is illustrated in Plate 9, and in Fig. 42, p. 269. It may be described as the insertion in an embankment of a short length of a masonry dam (the two being united by long staunching walls, one at each side); the passage for the discharge of the water through the work is kept open by means of four long wing walls. The headwall is pierced by outlet sluiceways controlled at their upstream face by valves worked by lifting rods and capstans;

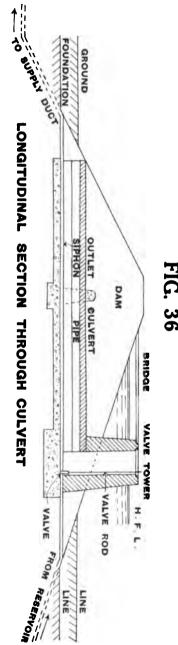

these openings can be made as numerous and of as large a size as if the whole dam were of masonry.

Great care is necessary to prevent the creep of water along the upstream wings and staunching walls, and the latter should therefore be made long and with projecting cross staunching walls as shown in the drawings. As the staunching walls are only of light section, they are comparatively not costly; they should be battered on all faces and rounded off at top and should have their tops ramped down away from the headwall, so that their length at different heights is in proportion to the pressure of water due to its depth which they have to withstand. They may be said to act as masonry core walls (vide paragraph 58) uniting the headwall to the earthen embankment.

In Fig. 42 the wing walls are shown as purely masonry ones, and, when these are adopted, projections and recesses should be formed at the rear faces of the upstream ones to unite them with the embankment and thus to prevent the creep of water along them. On the downstream side of each of the staunching forks should be a drain leading percolation water out of the dam (Plate 9, Fig. 3). In Plate 9 the wings are partly of masonry and partly of drystone for the sake of economy. The drystone should be constructed as described in paragraph 129, and will thus be fairly water-tight and will unite with the earthen embankment.

The foundations of all the walls should be on rock, and should be as good as those required for a masonry dam. If the headwall exceeds 50 feet in length between the wings, its section should be that of a masonry dam of the same height, but, if the wings are closer to each other, they will act as counterforts, and the headwall may be made somewhat lighter.

This form of outlet should preferably be located in

excavation in a saddle, as thereby the length of the wings can be reduced; this position will also be the best one for the location of the temporary waste-weir. If that work is excavated there, it will generally be better to build at it a central headwall than any other form of outlet.

- 206. The Advantages and Disadvantages of the Headwall in the Centre Line of the Dam.—The advantages of this form, permitting as it does of the use of large sluices, are:—
- (a) The work, being wholly in the open, can easily be constructed, inspected and repaired.
- (b) The reservoir can be kept low during the early part of the monsoon, when the floods are most silt-laden, and excessive silt deposit can thus be prevented.
- (c) The reservoir can be lowered rapidly should an accident occur, or should the sluices require examination.
- (d) As the full storage of irrigation reservoirs is not required for some years after their construction (i.e., until irrigation extends), this form of outlet will make it feasible to keep the reservoir surface low at first and will thus allow the dam to consolidate under the minimum amount of infiltration. When extra storage is required (as during a season of scarcity), it can easily be secured by closing the sluices towards the end of the monsoon.
- (e) The outlet can be located at the site of the temporary waste-weir, and, in the case of a high dam, during its construction it can be raised so as to form a higher temporary waste-weir. This will save the necessity for the formation of two or more temporary flood-escapes situated in different places.
- (f) Sufficient discharging power can be obtained, so as to save the waste-weir from being called into action in all but large floods.

The monetary value of (b), the diminution of silting, may be calculated thus:—The average annual yield from

the Máládevi catchment has been estimated at 19,359 million cubic feet, or, say, 15,000 million cubic feet in excess of the full-supply storage of the tank. Assuming, (vide paragraph 38), that the volume of the silt is $\frac{2}{3} \times \frac{1000}{1000}$ of the volume of the water which contained it, and that the headwall discharge prevents the deposition of one quarter of this, the amount of silt got rid of annually by it would be:—

 $15,000,000,000 \times \frac{2}{3} \times \frac{1}{1000} \times \frac{1}{4} = 2,500,000$ c.ft.

From Appendix 7, one million cubic feet should irrigate four acres of land, producing an aggregate net final irrigation revenue of, say, Rs.20. Therefore the 2½ million cubic feet of storage saved would be worth annually, say, Rs.50, and this capitalised at 25 years' purchase would be equal to Rs.1,250, which may be taken as the financial value of the reduction of silting calculated on moderate assumptions. The result in regard to revenue is not great, but it is certainly of importance to retard the rate of silting up of a reservoir and the consequent annual decrease of irrigation under it.¹

The principal disadvantage of the type is that it will generally be the most expensive form. From Appendix 1 it will be seen, however, that in No. 1, Mukti tank, with a maximum depth of available storage of 41 feet, the cost of the ordinary culvert outlet was Rs.26,368, while in No. 14, Mhasvad tank, with a maximum available storage depth of 24 feet, but with a much greater discharging power, the cost of the headwall outlet was only Rs.28,392.

The more elaborate design for the Máládevi tank project, illustrated in Plate 9, was estimated at Rs.1,22,372, which exceeds by, say, Rs.1,00,000, the

¹ Rs. 1,250 is the capitalised saving on one year's silting; for each succeeding year the saving will gradually decrease as the storage of the reservoir lessens by silting.

t 19.3.
c feet:
ssum:
X i
that i:
puara
would

t. igate rigalion

iion iay, uld ial

te nt e estimated cost, Rs.21,420, of a design for an outlet of the ordinary culvert form for another project for this reservoir. This latter must have been much under-estimated, as 5.4 per cent. (vide paragraph 28) of Rs.12,00,000 (vide Appendix 15), the cost of the reservoir, amounts nearly to Rs.65,000. The outlet originally proposed consisted of a masonry outlet tower 12 feet in diameter, with five 2-feet diameter sluices, a masonry culvert under the dam, and a light iron approach bridge of two spans of 37 feet each.

However, the estimate of the design for the headwall on the centre line of the dam:—

Includes the cost of the temporary waste-	Rs.
weir channel	10,000
Saves the construction of a 200-feet length	
of embankment, which would cost about	37,000
Saves the construction of another temporary	
waste-weir channel and the increased	
amount of embankment over it, which	
would cost about	23,000

The remaining disadvantage of this type is that it may admit water to the heart of the dam, but it should be easy to prevent this by good design and careful construction, as explained in paragraph 205.

Total ...

207. Outlet Tower in the Centre Line of the Dam.¹
—This form of outlet is known in America as the "dry well"; it is particularly adapted to the case in which a masonry core wall is used in the construction of the dam (vide paragraph 58). A culvert is constructed under the dam, and, where it crosses the core wall, a rectangular tower having one, two, or more divisions in plan, is built

Rs.70,000

^{1 &}quot;Minutes of Proceedings Inst. C.E.," Vol. cxxxii., p. 255.

up as the dam is raised, and in it are placed the valves controlling the discharge (vide Fig. 37).

The advantages of this form are :-

- (a) It saves the cost of an approach bank and bridge;
- (b) It enables the valves to be easily approached in all weathers;

FIG. 37

(c) The tower cannot be injured by ice.

CORE DAM

CORE DO DAM

RESERVOIR


The disadvantages attributed to it are:—

- (d) Water is admitted into the heart of the dam. (In a work with a masonry core wall this is of small importance, as dependence is chiefly placed on that wall to cut off leakage);
- (e) The valve tower is liable to be affected by any unequal settlement of the earthwork, which may cause a leak to form and may force the lifting rods out of the

vertical. (The tower will, however, be the strongest section of the masonry core wall.)

In an ordinary dam, without a core wall, these objections would be serious ones and sufficient to condemn the design for adoption.

208. Tunnel round the Dam.—This form of outlet (vide Fig. 38), being quite independent of the dam, cannot

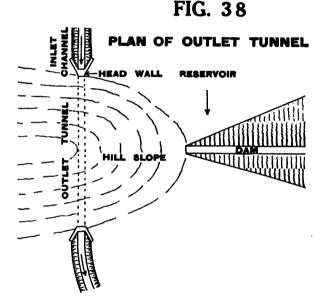

in any way affect that; it is, therefore, a very safe one and is being adopted to a considerable extent in English practice. The objections raised to it are:—

- (a) Its great expense, which is generally not necessary, seeing that other forms of outlet can be made quite safe. In India, moreover, the scale of the natural features of the country is so large that in most cases the cost of the tunnel would be extremely heavy.
- (b) The work, being underground, cannot be so carefully supervised as above-ground work. (This objection

is not a very strong one, seeing that tunnels are well constructed in many situations, and that those for reservoirs will not usually be of considerable length nor of great depth below the ground surface.)

- (c) The excavation of the tunnel, which should be in rock, is liable to cause fissures, which may lead to loss of water. (This, also, is not a very serious objection, as the fissures will usually not be of any great depth, and the water getting into them will, to a great extent, follow the line of the tunnel and emerge with it.)
- (d) It is difficult to construct the tunnel headwall so as to make it have a water-tight connection with the excavation. (This objection can be met by providing the headwall with good staunching walls so as to unite it with the natural ground, and also by constructing a few staunching rings at intervals near the head of the tunnel.)

When the rock is sound it is not necessary to line the tunnel: if the rock is not sound, the expense of lining will usually be so great that it will generally be advisable not to adopt this form of outlet.

PLAN

TRIVITATION TO THE PROPERTY OF THE PROPE

FIG. 39

209. Headwall across an Open Channel outside the Dam.—This is a very simple form: a channel is dug round the flank of the dam, and across it is built a simple headwall. which are the regulating sluices (vide Fig. The excavation of the channel (unless the spoil from it can be utilised for the construction of the dam) may be expensive, and thus this type is adapted only for works having a small full-supply depth above outlet sill. It shares all the advantages of the tunnel form, and, in addition, has that of being easily inspected during construction, and of being easily maintained thereafter. It was adopted in the case of the Medleri tank, No. 20 of Appendix 1; its cost there was Rs.10,409, or nearly one-third that of the dam, which is very high.

- 210. General Remarks.—(a) The Outlet Channel.—
 The inlet channel upstream of the regulating sluices and the outlet channel downstream of the embankment should both be at right angles to the dam for a length at least equal to twice its height, as it is undesirable to have a deep excavation close to its toes. The former should thereafter be led directly towards deep water to shorten its length as much as possible, and the latter to ground sufficiently low to lessen the cost of excavation.
- (b) Fore- and Tail-Bays. On the upstream side the outlet channel should be confined by wing walls from the headwall (or outlet tower); these form the fore-bay (vide Fig. 34, p. 248). The longer these walls are the more expensive will they be, and the further will the water have access to the heart of the embankment; but the shorter will be the outlet culvert, the nearer will be the headwall to the dam, and the smaller will be the approach bank to it. As a general rule it is not advisable to have the wings very long; their tops should therefore not be advanced much further than where the dam is 5 feet above ground level, and their splay should be at 1 in 3.

Similarly, the tail-bay at the downstream end of the outlet should not have its end wall much higher than 5 feet above ground level. It may have its wings splayed

at 1 in 3 or curved ogee in plan to form a discharge regulating basin at the head of the irrigation channel.

The wings of both bays should extend to where the prolongation of the dam slopes will meet the ground line 2 feet above the full-supply depth of the outlet, and should be returned into the natural ground (in a direction parallel to the axis of the dam), for a distance long enough to prevent any slips of the channel excavation from outflanking them.

- (c) Gratings.—To prevent the entry into the outlet sluice of wood, rubbish, &c., which might interfere with its working, a grating should be fixed upstream of it (vide Plates 8 and 10). For large sluices this should be made of iron rails which can be utilised to form an inspection chamber by placing wooden planks upstream of them. For small sluices an ordinary grating should be fixed at a small angle to the vertical so that débris may not lodge in it. The waterway of all gratings should be considerably in excess of that of the sluices.
- as close as possible to the tail-bay, so that the adjustment of the discharge let out of the reservoir may be effected as quickly as possible. If this discharge is passed down to the river to be picked up by the canal headworks, the gauge will conveniently be of the form of a clear overfall weir. If, however, there is no fall available for this purpose, or if the discharge is at once passed into the canal, the gauge will have to take the form of a gauging run. With either form it is advisable to have a table of discharges made out corresponding to the various depths of the channel, so that the actual quantity let out from the reservoir may at once be ascertained; the gauging run must, of course, be maintained to its correct original

section, for which purpose that may preferably be formed in masonry or concrete.

(e) Inspection of the Outlet Culvert.—This inspection should be made twice yearly, once just before and once just after the monsoon, and all damage to the culvert, &c., should immediately be made good. As foul air may accumulate in the culvert, before the inspection takes place a full discharge should be passed down it to clear out such air. Often the culvert can be inspected from the downstream end by reflecting sunlight along it internally by means of a mirror.

III. REGULATING WORKS.

- 211. General Description.—The regulation of the discharge from the reservoir is effected by means of valves, or sluices, which control the inlet end of the outlet, and are themselves actuated by lifting rods, working up and down the face of the regulating headworks. The headworks will first be described; they may be classified as:

 —(1) Outlet Towers; (2) Outlet Headwalls; and (3) Dam Slope Outlets.
- 212. Outlet Towers.—These are generally used for water-supply storages from which the supply has to be drawn at different levels in order that the clear supernatant water may be obtained continuously as the reservoir surface falls. If the water of the reservoir is excluded, the valves and lifting rods in the interior of the tower can always be inspected. Should, however, the valves for securing double control (vide paragraph 215) be placed on the outside of the tower, they cannot, of course, be inspected until the reservoir surface falls below them, nor can they be removed and repaired until that happens.

In plan, outlet towers are usually circular, and are

flattened on the downstream side of the interior to form a seat for the guides of the lifting rods. A tower square in plan is illustrated in Plate 13; it has a better architectural appearance than one circular in plan, and is in some ways more convenient than it, but will generally be more expensive.


The thickness of the walls of an outlet tower has to be designed with reference to the water pressure they have to withstand at different levels, so that leakage through them may be prevented. A much less thickness is sufficient to secure stability, the tower being subject on all external sides to equal water pressure, and a less thickness will also safely withstand the crushing effect of that pressure. For large towers it will be found economical to construct the walls with masonry facings and a hearting of very fine concrete (really a coarse mortar), well rammed in between them. To secure water-tightness, the work should be built, or at least pointed externally, with Portland cement.

Steps for inspection should be provided inside the tower from the top to the bottom, and these had better be arranged ladder-wise rather than spirally, as the latter system does not give a good hand-hold.

213. Outlet Headwalls.—For irrigation storages several outlet sluices at different levels are not necessary, as throughout the year the water is passed out from the reservoir at outlet-sill level, and for them a headwall is sufficient. The headwall consists of a simple wall on the reservoir face of which the lifting rods work (vide Fig. 34, page 248). The capstans actuating these rods are carried at the top of the wall on a small platform, which is supported by arching thrown across the top of the side pilasters of the wall, or by corbelling from the face of the wall.

214. The Approach Bank.—In order that the outlet headwall should not admit water near to the heart of the dam, it is placed some distance on the reservoir side from the centre line of the embankment. To connect it with the main dam, an approach bank is thrown out from the latter, and from this a small foot-bridge is carried to the headwall (vide Fig. 34, page 248). The top of the approach bank, the footway of the bridge, and the top

FIG. 40 FIG. 41

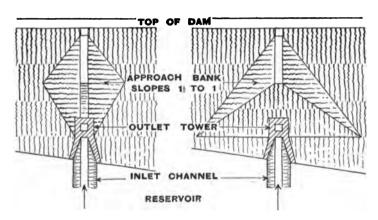

of the headwall need not be raised more than 2 feet above high-flood level. The side-slopes of the approach bank, being of very short length, may be made at an inclination of $1\frac{1}{2}$ to 1, as sketched either in Fig. 40 or in Fig. 41; the latter, having the larger base, is the more secure form, and affords a better cover to the outlet culvert. This bank should have its surface pitched all over except on the top. It should, of course, be made at the same time as the main dam, should be constructed with it, and should not be patched on to it subsequently. Owing

to its pyramidal form it is not likely to slip, although its side-slopes are steep. The end of the bridge resting on the approach bank is most conveniently supported by rails fixed in pot sleepers, which can be packed up to make good any settlement that may occur. Some long approach bridges are supported at their centres by timber or masonry piers, but the better design is to make them with bowstring girders in one span.

The advantage of having the approach bank leading to a subsidiary ridge and not to the main dam has been pointed out in paragraph 197. Where this ridge offers good foundations, a masonry foot-bridge can be built from it to the outlet headwork with advantage to permanence and appearance (vide Plate 13, Figs. 2 and 4).

215. Double Control over Sluices.—If a single sluice is placed outside a headwall or on the reservoir side of an outlet tower, it cannot be inspected or repaired until the surface of the water falls below it. If, in the case of a tower, a second valve is placed upstream of the first one (which would then be inside the tower), double control is given to the outlet pipe to which they are fixed in common. By shutting off the supply to the downstream valve by means of the upstream one, the former can be examined and repaired, but the latter cannot be attended to until the water level falls below Thus, in ordinary designs, the outlet sluices of headwalls and the lowest external ones of outlet towers can be examined only in the rare cases when the reservoir is emptied below outlet sill level; this extent of drawoff should not be allowed to occur, especially in watersupply schemes.

The remedy for this defect is a simple one, and consists in constructing, just upstream of the headwall or tower, an inspection chamber by means of a cross-wall built

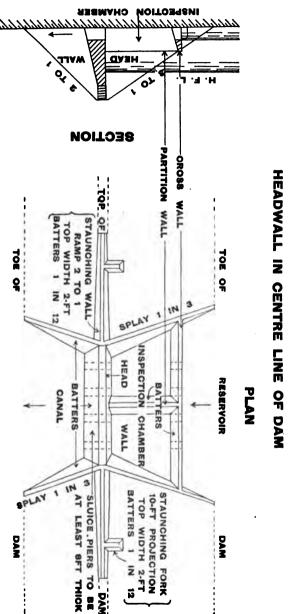


FIG. 42

between the wing walls of the fore-bay (vide Fig. 42 and Plate 13, Figs. 1 and 4). If necessary, and as shown in Fig. 42, a partition wall may be constructed in this chamber, so that one half of it may be laid dry for examination while the supply is allowed to pass through the other half. For large outlets with large sluices, the inspection chamber can be formed by placing wooden needles or planks in front of the grating which is primarily intended to prevent logs, &c., from obstructing the flow or from jamming the sluice (vide Plate 8, Fig. 3, and Plate 10, Fig. 3). For this reason this grating should be fixed in the piers some distance in front of the face of the headwall, and it should be arranged with a slight vertical slope, so that débris may float up from it and may not adhere to it.

The cross-wall, (or the top of the needles), should be raised to such a level that at it the storage contents of the reservoir are sufficient to last from the time of inspection (which would generally be a month before the commencement of the rains), until the first monsoon replenishment may be expected. At the bottom of the cross-wall would be a simple sluice opening, which could be closed either by a simple wooden shutter or by means of sand bags; any leakage through it would pass down the outlet. By this arrangement the lowest valves and sluices can be examined and painted, and, if necessary, repaired each year, while the uppermost ones would be attended to as the water surface fell below them.

216. Dam Slope Outlet.—In this form (vide Fig. 43) the expense of a masonry headwall is avoided, but it is applicable only to small reservoirs.

The ends of the outlet pipes are turned through a quadrant, so that the valves may be circular, and not elliptical ones, as they would have to be were they placed

at the mouths of straight pipes. The valves are situated in small masonry chambers, and the pipes are led into the outlet culvert through a concrete stopping piece. The valve lifting rods pass through guides fixed to stones, supported on the slope of the dam, and are worked by gearing placed at its top.

SECTION

SECTION

CUILVERT

CONCRETE STOPPING PIECE

PLAN

The objections raised to this class of outlet are:-

- (a) The settlement of the dam may put the stone supports, and hence the guides, out of line with the proper direction of the lifting rods;
- (b) The valves cannot be inspected until the reservoir is dry;
- (c) Great force is required to work the long lifting rods (the length of each of which is that of the slope and not of the vertical height of the dam); these rods rest on numerous guides and, in the usual plan, actuate elliptic-shaped valves of areas increased beyond those of circular ones. The guide friction could, however, be reduced

by using rollers, and the valve area by the device above described.

IV. VALVES AND SLUICES.

217. Ordinary Valves and Sluices.—For water-supply purposes, when the rate of supply is small, as it generally is, the commercial pattern of water-valve can economically be used. In this the valve travels up and down a screwed spindle fixed in a cast-iron casing, and therefore its position cannot be indicated by the lifting rod itself. For medium-sized irrigation works two or more of these may be used in conjunction with each other. For large irrigation works, where large discharges are required, special sluices are made. These consist of three parts—the fixed seating, the fixed guides between which the movable gate works, and the gate itself. Examples of these are illustrated in Plate 11 and Plate 12. (See also Appendix 18^A, Specification 27.)


All the surfaces in moving contact should be faced with planed brass, or gun-metal, to diminish friction, to prevent rusting, and to make a water-tight joint. As the seating for these large gates has to be made in more than one piece, great care must be taken to fix it to a perfectly true plane. The truth of the seating after it is fixed can be tested by stretching threads diagonally from its opposite corners and by then passing up horizontally another thread, which should throughout its course just touch the diagonal threads and the vertical sides of the seating.

The masonry sill leading to the sluices should be altogether below the seating, and its upper surface should be sloped downwards to the reservoir to direct the outflow upwards, so as to scour out any silt which otherwise might be deposited at the base of the seating.

To prevent the sluice from jamming, it is best to make its bottom line part of a large circle and to bevel it slightly at the centre, as thus the gate will be guided on to the sill of the seating.

218. "Pole-and-Plug" Yalves.—In some small native tanks the outlet head (Fig. 44) consists of a small masonry chamber roofed with a slab, which is pierced by a conical inlet hole the discharge of which is regulated by a conical wooden plug fitting into it and fixed to a pole. A second


FIG. 44
PART LONGITUDINAL SECTION

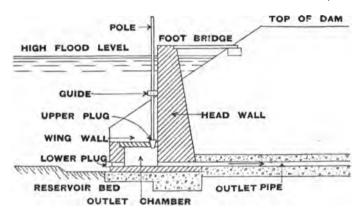

conical hole is made horizontally in the front wall of the chamber at outlet-sill level, which, in this case, is the silted-up bed of the reservoir, and this also is closed by a conical plug which is regulated by hand when the water level falls below the roof of the chamber.

This form of valve has been elaborated in iron as sketched in Fig. 45. It is simple, and can easily be worked and inspected; also, it enables the contents at the bottom of the reservoir to be drawn off with the maximum head. Under a great head of water, on account

SECTION ON AB SIDE ELEVATION

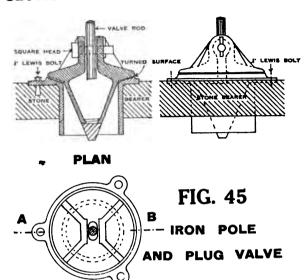


of its form, it would be difficult to work, and would be subject to much vibration.

By using a number of these "pole-and-plug" outlets, at different levels in different chambers (vide Fig. 46), it is easy to maintain a practically constant discharge


FIG. 46

SECTION

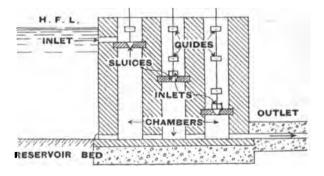

by lifting the different plugs as the water level falls. Similar regulation may be arranged for with simple plugs (vide Fig. 47) removable by hand.

FIG. 47

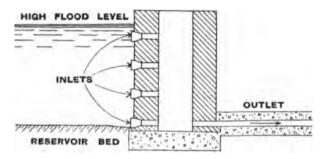

Another form of "pole-and-plug" outlet on the principle of the "dam slope outlet" is sketched in

FIG. 48

DAM SLOPE OUTLET


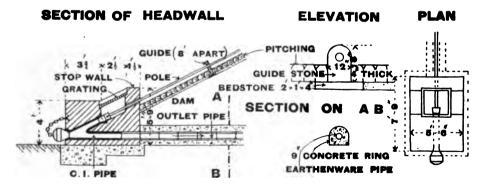


Fig. 48. This can be used up to depths of 10 feet: it dispenses with the necessity for a high headwall, but, if thought desirable, its upper limb can be made vertical,

a headwall can be built at it and the pole can be made to travel up and down this.

219. Equilibrium Yalves—Working of Ordinary Yalves.—The principle of the equilibrium valve is that as water acts on all sides of it, it is not kept on to its seat by water pressure, and therefore the force required to work it is considerably reduced (vide Fig. 49). The valve is slightly tapered so that it fits water-tight on to its seat only when it is fully closed. Such valves are used in waterworks practice, where they frequently

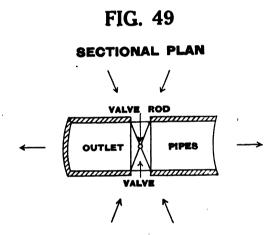

have to be worked, but they are not adopted for irrigation schemes, as they are less water-tight, and require more space and therefore larger headworks than do ordinary valves. The expense of having a few extra men for the ordinary sliding gate during the few times it has to be worked is not great. A better arrangement for utilising the water pressure is to have a turbine by which the capstan heads can be revolved and the lifting rods actuated.

220. Testing Gates—Calculations for Gates.—Gates of any considerable size should be tested at the manufac-

turer's yard before delivery on to the works. For the test (vide Appendix 18^A, Specification 27 (xii), p. 382) the gate is laid horizontally so as to bear only on the longitudinal members of the frame, which will be its most unsupported position in practice (i.e., when it is not fully closed), and weights are placed on it. A convenient arrangement is to put the weights on a series of levers (half right-handed and half left-handed), as this obviates the necessity for heavy foundations. Taking an actual case of a gate 5 feet broad and 7½ feet high with its sill 29 feet below high-flood surface, the test, as shown in Fig. 50, was:—

P = pressure on gate

$$w = \text{weight of lever} =$$
 840 lbs.
 $w_1 = \text{loading weight} =$
 417 lbs.
 $l = \text{length of lever} =$
 25 feet
 $a = \text{distance from centre of }$
 $a = \text{distance from centre of }$
 $a_1 = \text{distance from centre of }$
 $a_1 = \text{distance from centre of }$
 $a_1 = \text{distance from centre of }$
 $a_2 = \text{distance from centre of }$
 $a_3 = \text{distance from centre of }$
 $a_4 = \text{distance from cen$

Then
$$P = \frac{wl}{2a} + \frac{w_1a_1}{a}$$

$$= \frac{840 \times 25}{7 \text{ ft.}} + \frac{417 \times 24\frac{1}{2}}{3\frac{1}{2} \text{ ft.}}$$

$$= 3,000 \text{ lbs.} + 2,919 \text{ lbs.}$$

$$= 5,919 \text{ lbs.} = 52.85 \text{ cwts.}$$

As six similarly loaded levers were used, the total pressure on the gate was:—


 $6 \times \frac{52.85}{20}$ tons = 15.85 tons on the centre line of, and = 31.71 tons evenly distributed, over the gate.

Under the action of the test the gate should not be deflected appreciably. The amount of deflection would

be ascertained by stretching a thread across the gate, and by measuring its distance from a fixed point when the gate was loaded and when it was unloaded.

FIG. 50

DIAGRAM OF FORCES

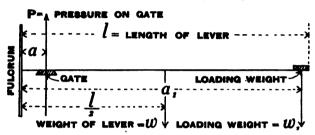

The gate area = 5 feet \times $7\frac{1}{2}$ feet = 37.5 square feet. The depth of the centre of gravity of the gate below the water surface . . . = $29 - \frac{1}{2}(7\frac{1}{2}) = 25.25$ feet.

Sq. feet. Feet Head. Weight of water water pressure on the gate $= 87.5 \times 25.25 \times 62.43$ = 59,114 lbs. = 26.89 tons.

The force required to lift the gate is:-

The frictional	resistanc	e of	pressure. Tons.	Coefficient of friction.	Tons.
the gate on	the guid	es ==	26.39	\times 0.3=	7.917
The weight of	the gate	and			
${f the\ rod}$	• •	• •	• •	=	1.528
Allowance for e	extras	• •	• •	=	0.555

Total force required = 10.000 tons.

The compressive strain which can easily be put on the lifting rod by eight men is:—

Men. Lbs. Refort per man. Circumference of capstan path. Pitch of screw. Lbs.
$$8 \times 20 \times (2 \times 3.14 \times 3.5 \text{ feet}) \div \frac{3}{4.8} \text{ feet} = 56,269$$

$$= 25.12$$

This number of men should therefore suffice to lift the gate.

221. Suggested Arrangements for Gates.—The ordinary form of gate involves the construction of some kind of headwall, or tower, up the face of which the lifting rod works—in most cases under water, so that it cannot be inspected. If, instead of this, the valve were worked by bevel gearing placed at the downstream end of the outlet culvert, and the rod were passed through the culvert, the headwall would be saved, and the lifting rod could be inspected at any time. In this case the valve could be given either a horizontal or a vertical motion; the end of the valve rod would be stepped into the valve seating, and would have a pinion engaging with rackwork fixed to the valve.

To reduce the force required to overcome the weight of the ordinary valve and rod, a counterpoise might be used, or if the gates are at different levels they might be coupled in pairs to balance each other, the upper one falling and the lower one rising to open the sluices, and vice versa.

222. General Remarks.—(a) The Outlet as a Flood-Regulator, &c.—As explained in paragraph 200, the outlet can be used as a flood-regulator, and also to lower the tank level rapidly. For these purposes the sluices should be made larger than is necessary only for the supply of irrigation water, or additional sluices should be provided.

(b) The Outlet as a Source of Water Power.—In paragraph 219 it has been stated that the outlet sluices might be raised by means of a turbine worked by the pressure of the water in the reservoir. The pressure of the reservoir might also be utilised to furnish water power for industrial concerns, especially when the discharge is returned directly to the river and is not at once sent down the canal, as then there will be greater head utilisable. The water thus made use of will afterwards be available for irrigation. Unfortunately, owing to the isolated position of most reservoirs, manufacturing operations cannot usually be economically conducted near them, but with the advent of electrical installations this difficulty may be overcome. Another objection to making thus a further use of the stored water is that its discharge will have to be regulated solely by the requirements of irrigation, and may therefore be too irregular for being utilised for a manufacturing operation. might be remedied by having an auxiliary steam plant for use as a stand-by on occasions when the water power was not available. Seeing that the country must develop, and that scientific applications must improve. it is desirable, when constructing an outlet, to provide means for supplying water power, as this cannot be done subsequently without greatly increased expense and difficulty.

223. Lifting Rods and their Adjuncts.—(a) Lifting Rods.—The lifting or valve rod should be attached to the gate below its centre of gravity (Plate 12). For the largest form of gate it should pass through a cored pillar, forming part of the casting of the gate, and should be secured by a screwed nut below it (Plate 11, Figs. 1, 2 and 10, and Appendix 18^A, Specification 27). For smaller gates the end of the lifting rod may be forged out into two straps bolted to the gate, and extending

diagonally nearly to its edges at the bottom.¹ The object of these arrangements is to prevent the gate from getting during its travel a sideways motion, which would tend to make it jam in its seat.

In one form of rod (Plate 11, Fig. 2) its top has a screw thread cut on it which engages with the female screw of the capstan head, through which it passes and by which it is actuated. The length of the rod which passes through the top (square) guide is made square in section, so as to be held by it, and is thus prevented from rotating with the capstan head. With this form of gear the whole lifting rod works up and down, and its top is always visible above the capstan head, so that the position of the sluice connected with it can readily be ascertained.

In another form (Plate 12, Figs. 1 and 2) the top of the lifting rod proper is bolted to a cast-iron pillar having a female screw cut in it, into which the screw from the capstan head works, and, by revolving, causes the pillar and the lifting rod to move up and down. The pillar is square in section externally, and passes through a special square guide which prevents its rotation. The weight of the pillar adds to the weight to be lifted, and as the screwed lifting rod does not travel through the capstan head, its motion and the position of the gate cannot be seen directly. To determine that position it is necessary to bolt on to the top of the cored pillar a "tell-tale" rod, which will always project above the top of the headwall and will move up and down as the gate rises and falls.

(b) Guides.—To prevent the lifting rod from buckling, it is made to pass at intervals through guides or plummer

^{1 &}quot;Minutes of Proceedings Inst. C.E.," Vol. lxxvi., Plate 2, Fig. 10.

- blocks. The lower guides (Plate 12, Fig. 5) have circular holes, but, as explained above, the uppermost one (Plate 12, Fig. 7) has a square one to prevent the rod from rotating. Care should be taken in spacing the guides that they will not interfere with the travel of the joints of the lifting rod, as these cannot pass through them.
- (c) Joints.—The valve rods are liable to buckle, as an extreme amount of thrust comes upon them when the valves jam or do not work freely from any cause. It is therefore advisable to make them of mild steel and of somewhat fuller dimensions than are required merely for actuating the gates when they are working freely. In particular the joints are apt to give: for rods up to 2 inches in diameter the ends of the lengths should be forged out flat and formed into lap joints, secured by bolts passing through them: for reds of larger diameter their ends should be scarfed, and the joint should be confined in a strong collar and secured by slightly tapered bolts passing accurately through the ends of the lengths and the collar (Plate 11, Figs. 16 and 17).
- (d) Stops.—The positions of the gate when fully open or fully shut should be fixed by stops, and arrangements should be made to indicate visibly at the capstan when the gate has reached them so that the working of the capstan head may then be stopped.
- 224. Capstan Heads.—Plate 11, Fig. 4, illustrates a form of capstan head through which the head of the lifting rod rises and falls, and Plate 12, Fig. 1, one in which it only rotates horizontally. In each instance the capstan is bolted down to its foundation and its internal brass lining is free to rotate. In the former, the screwed head of the lifting rod works up and down through the internal brass, which is cut with a female screw. In the latter, the lifting screw has annular collars on it, which engage in

recesses in the brass lining and prevent it from moving vertically. In this form, below the capstan head the lifting rod is cut into a screw which engages with a female screw in the head of the hollow pillar forming the top of the lifting rod proper, so that, as the lifting screw revolves, the hollow pillar is either drawn up or forced down.

In Plate 12, Figs. 8, 9 and 10, is shown a better design, by the late Mr. La Trobe Bateman, Past President, Inst. C.E., in which the lifting screw works against a bed step and is separate from the lifting rod; the top of the rod is pinned to a long link carried by a movable stud engaging with the lifting screw. Any deviation of the lifting rod from the vertical is thus not communicated to the screw, and grinding action is thereby avoided.

CHAPTER V.

MISCELLANEOUS.

I. WATER-SUPPLY SCHEMES.

- 225. Proximity of Storage to the Town necessary.— Owing to the expense of conveying water in a sanitary duct from the storage reservoir to the population to be served, it is necessary in India, for all but very large towns, to select the site for that reservoir within a few miles of the town which it has to supply. The choice of site being thus restricted to a small area, the probability is that an economical one will not be available, and that the cost of storage will therefore be high. This is not a matter of so much importance in the case of a watersupply scheme as it is in that of an irrigation project, as for the former higher water rates can be charged. Moreover, although economy is desirable for a water-supply scheme, the quantity of storage required for it will be comparatively small, and therefore the proportion which the cost of storage will bear to that of the whole project will generally be less than it will be in the case of irrigation reservoirs.
- 226. Amount of Storage, &c., required to ensure Certainty of Supply.—The amount of storage required for a water-supply scheme is much less than is necessary for irrigation. Taking the daily consumption per head as 12½ gallons, and making an allowance of one-third of this for loss by evaporation as in Appendix 7, one million cubic feet of storage will suffice for one year for the

requirements of 1,000 persons, an amount which is calculated in that Appendix to be sufficient for the irrigation of not more than four acres. As, however, it is imperative that the water-supply for a town should never fail, it is necessary that for it there should be a storage sufficient to last for two years: for irrigation schemes this extent of storage is not required (vide end of paragraph 23).

To secure this certainty, the catchment area should be ample, and, if the natural one is not sufficient, the run-off from subsidiary catchments (vide paragraph 9) should be impounded in subsidiary reservoirs or diverted into the main one by feed channels. An additional advantage of a subsidiary storage reservoir is that if it is large enough, or if the main one can be arranged to feed it, as well as to be fed by it, either of them can, when necessary, be used exclusively in parts of alternate years. The one then not in use can be drained and its bed ploughed up and allowed to desiccate, which will improve its sanitary condition.

Irrigation should, as a rule, not be combined with water-supply schemes as the demands for town consumption, on account of their superior importance, must first be met, and this may prejudice the working of irrigation. It is only when the town supply is small relatively to the requirements of irrigation, and the total storage is designed as ample for both, that the combination can safely be made.

In all ordinary situations the reservoir can be formed by means of an earthen dam, but, should there be exceptional circumstances rendering this in the least degree a risky form of construction, a masonry dam should be built instead, so as to gain perfect security of supply.

227. Sanitation of the Catchment Area.—Conservancy of Yillages in the Catchment Area.—Filtration.—

In respect to the amount of the yield of the catchment, there is no difference between the physical conditions which should obtain in the case of a water-supply reservoir and in that of an irrigation one (vide paragraph 7). the former there is, however, the additional necessity for securing a clean, sanitary drainage area. The only absolutely safe gathering ground would be one consisting entirely of uninhabited, uncultivated, unpastured, and barren soil or rock of an insoluble nature. Such can practically never be found, and it is therefore necessary. in a good water-supply scheme dependent upon a storage reservoir, to have recourse to filtration to remove the defects due to the nature of the drainage area. however, most desirable to make the catchment as sanitarily perfect as possible. There is, of course, pollution from manured lands, but the amount of unburnt manure used in India is usually small, and the fact that it is ploughed into the ground will still further reduce its potency for evil. The most harmful thing in a catchment is a collection of human inhabitants with their animals, and the pollution from these increases with their number and their nearness to the reservoir or to its tributary streams.

Probably the simplest effectual way of dealing with a village in a catchment area would be to surround it and the places reserved for defectation by an embankment or by catchwater drains. The drainage from this area would then be led to a small tank with a storage capacity equal to at least one-fourth of the maximum annual yield of its catchment, and this storage could be utilised for the irrigation of fields, also embanked round, and the tank emptied when necessary, say, four times during the monsoon. The embankments round the village and the area thus to be irrigated and the dam of the small tank

would all have puddle trenches under them, and would be constructed perfectly staunch. During the fair weather the bed of that tank and the lands irrigated from it would be ploughed up and allowed to desiccate. This irrigated area should be acquired, and might be let out on liberal annual leases, coupled with the condition that the lessees would be held responsible for the proper working of the system. Such a treatment would interfere little with the habits of the people, but would, of course, involve careful supervision.

During the construction of the main and subsidiary storage reservoirs for the water-supply scheme, the work-people should be camped below the dams, and should not be allowed to resort upstream from them for natural purposes.


Where filtration is adopted, it will generally be best to place the filters close to the storage reservoir, (i.e., at the head of the supply main), so that only filtered water may enter the pipe system and the spread of pathogenic germs in it may be prevented. Moreover, in this situation the ground levels will probably be more suitable for the location of the filters, and there will be available for them a larger area with cleaner surroundings than will be practicable near the town itself. In schemes having open ducts from the reservoirs, the filters must, perforce, be placed near the town, as these ducts are themselves liable to contamination.

228. The Works of a Water-Supply Storage Reservoir.—In respect of the dam and waste-weir, the design for the storage reservoir for a water-supply scheme will be the same as that for an irrigation project.

For the outlet it will be necessary to arrange to draw off the water from about 2 feet below the surface of the reservoir continuously as its level falls (vide paragraph 212), and to have double control of the valves (vide paragraph 215): for these reasons towers are generally preferable to headwalls for water-supply outlets. In Plates 13 and 14 is illustrated an outlet for a water-supply storage reservoir. The water is drawn from the reservoir through a series of inlet pipes at different levels, each of which is controlled by a valve in the interior of the water tower, and is protected externally by a fine grating in a bellmouth. The inlet pipes all communicate with a

FIG. 51


CROSS SECTION AT PIPE HANGER

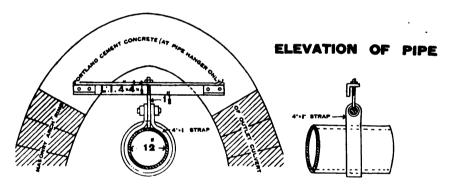

central stand-pipe, either directly or by means of short branch pipes at right angles to the inlet pipes, and these branches carry the guides for the lifting rods of the lower valves. The individual lengths of the pipes are designed so as to be of as few patterns as possible. Downstream of the stand-pipe is a valve at the head of the outlet pipe, which thus gives double control to all the inlet pipes. Upstream of the tower is an inspection chamber, which provides treble control for the two lowermost valves. At the base of the tower are two large unwatering pipes, to be used when the tank level has to be rapidly lowered

(vide paragraph 200). All the valves are thus inside the tower, and can be inspected at any time and can be taken out and repaired when necessary, the water being then shut off from them by placing a tarpaulin, &c., temporarily over each inlet grating.

FIG. 52

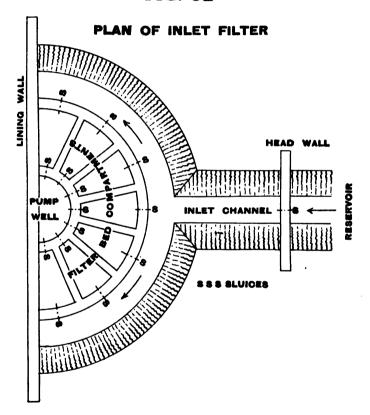

The outlet pipe (vide Plate 14, Fig. 5 and Fig. 51) is suspended from the crown of the culvert arch, so that its level can be adjusted by means of the suspending bolt. This is a convenient position for the main, as here it does not interfere with the drainage of the culvert nor obstruct

the discharge of the unwatering valves, while the supply main itself can be easily inspected.

When the storage reservoir is below the level of the town, the supply for the latter will have to be pumped up from the former, and an outlet may thus become unnecessary, which is an advantage (vide paragraph 198). An arrangement for combining the inlet to the pumps with a filter is sketched in Fig. 52. The inlet channel is excavated till it reaches ground above the high-flood level of the reservoir, and across it is built the inlet headwall and the filter chamber. The latter is designed with a series of independent compartments, each of which can be shut off from the others, its sand washed, and its level adjusted to suit that of the reservoir as it falls, so that the operations may, if necessary, be made continuous. communication with the reservoir can be shut off by the headwall across the inlet channel: if the subsoil is suitable for the purpose, the water can be allowed to percolate through it to the filter, which will greatly aid in its purification.

This design was made before modern investigations showed that the efficiency of a filter depends chiefly upon the bacterial scum which forms on the sand, and it might not be approved now on account of the small size of the compartments. However, these could be increased greatly beyond what is shown in the diagram without much cost, as only the head regulator and lining walls would require to be made of heavy sections to withstand, respectively, the pressure of the full head of water in the reservoir and the thrust of the ground. The filtration would be improved were a coagulant mixed with the inlet water.¹

¹ Since this was written, quick-acting mechanical sand filters have been much developed. For working these, most of the bacteria are precipitated by coagulants before the water is admitted to the filters. The filters act principally by retaining

229. Utility of Water-Supply Storage Reservoirs as Famine Relief Works.—Owing to their situation near a large town, water-supply storage reservoirs form useful works for the employment of relief labourers, who can thus be easily supervised. The works, being comparatively small, can more nearly be completed during a single season of scarcity than larger ones, and will be of greater public utility than an irrigation scheme which directly benefits a smaller number of the population. Even if the municipality concerned is subsequently unable to pay for the full value of the work done, the loss to Government may not be so great as if an unremunerative irrigation scheme had been undertaken instead.

II. ARRANGEMENT OF WORKS.

230. General Arrangements.—Detailed notes of general arrangements are given in Appendix 22. Before commencing the actual execution of the work, great care should be taken to arrange everything so that due progress may be made uninterruptedly throughout its construction. The workshop, stores and office should be placed conveniently with respect to the work as a whole, and, for the sake of security and quiet, should be removed as far as possible from existing habitations. The camps for labourers should be carefully selected with respect to sanitary conditions, a bazaar should be maintained under supervision, and all should be placed under the charge of a medical officer. The camps should be set out in regular lines; each camp should be well separated from its neighbours, and should, as a rule, not contain more than 200 huts or 1,000 people. The sites

the balance of the bacteria on their surface, and are washed frequently by filtered water passed upwards through them. This arrangement is efficient, quick-acting, clean, and compact.

should be properly located on high, well-drained ground, removed from undergrowth, and not too close to the working area. The huts should be erected on raised plinths 1 foot high, with main roads 10 yards wide and cross roads 5 yards wide. The huts may be of bamboo matting, grass, &c., as these can generally be constructed by the people with a little assistance in the shape of material. A hospital should be built near the quarters of the medical officer, and so as not to be a danger to the camps, while, at the same time, not being far removed from them. The greatest precautions must continually be taken to conserve the drinking-water supply, and to keep the working area and camps as clean as possible, for which purpose conservancy and sanitary guards should be placed under the medical officer (vide Appendix 22, paragraph 29).


281. Works Arrangements.—A large scale plan of the whole of the works and working area should be made, so that everything may be shown on it and may be arranged with proper reference to its importance in respect to the whole scheme. This should show the areas from which the soils required for construction can be obtained and the probable quantities available from them.

The most difficult and anxious part of the whole work is the closure of the dam, and everything should give place to its construction. Works roads should be set out with reference to it; all materials should be stacked, and earth and murum required for its rapid completion should be reserved for it, close at hand.

The area to be excavated for the construction of the dam should be set out methodically, so as to get the maximum amount of material from it at the cheapest rate, while, at the same time, ensuring a check on the measurements. For this purpose some such sort of arrangement

as is sketched in Fig. 53 should be made. The whole area should first be divided into blocks separated by roads for carts, and each block should then be subdivided into pits to be excavated. At first these pits should be dug uniformly from 3 feet to 5 feet in depth, and should then be deepened gradually in steps, 1 or 2 feet deep, from the cart road, so that the carts may enter each pit by moving down a ramp left at one side. An index plan should be

FIG. 53
PLAN OF BORROW PITS

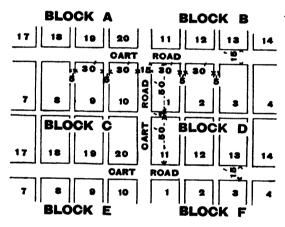

kept with reference numbers for each block, which should itself have a reference letter, in order that the measurements may easily be traced at any time.

These pits are likely to be fouled by the workers, and a strict watch should be kept on them to prevent this from occurring. The most effectual preventive is, however, to arrange for proper latrine areas, at distances conveniently near to the working area, and to conserve them properly.

For all special works men should be specially selected and trained. The general arrangements should ensure that each evening every responsible man is fully acquainted with the work which he has to get done the following day; alterations of this programme should be avoided as much as possible, as they cause confusion and delay, and thus occasion expense and retard progress.

III. PLANT REQUIRED FOR THE WORKS.

- 232. General Remarks.—In Bombay the earlier works were constructed with very little plant, reliance being placed upon labourers, pack animals, and carts for the conveyance of the earthwork on to the dam. The objections to this are that progress is not so rapid as might be, and that there is a greater liability to strikes and stoppage of work. The animals and carts no doubt help in the consolidation of the earthwork, but this can be done more effectually by rolling. General arrangements for "stores and tools" and "plant" are described under those headings in Appendix 22.
- 238. Tram Plant.—For the rapid conveyance of earthwork it is advisable to have tramway plant consisting of light trucks, and rails with sidings, points, cross-overs, &c., and there should be sufficient of these stocked, so that some may always be available from store to replace damaged articles or to meet an emergency requiring greater progress. The trucks should be light ones, chiefly of the side-tip pattern, with a few of the end-tip variety; the fittings should be as simple as possible, so that they may be renewed on the works when necessary and may not easily be injured. The trucks can be pushed by labourers or hauled by animals: it may in certain cases, such as the construction of the gorge embankment, be useful to haul them by means of stationary engines and wire cables.

In constructing the dam with tram plant, the rails should be laid on the embankment parallel to its axis, and should first be placed near one edge; the lines should then be shifted gradually over the top until they approach the other edge. As they are moved on, the earth deposited from the trucks should be mixed, levelled, rolled, and finally wetted, each operation taking place on strips parallel to the axis of the dam.

Rules for the management of tram plant are given in Appendix 22, paragraph 59.

- 234. Rollers.—A light roller, weighing, say, a quarter of a ton per foot run, should first be used to consolidate and form on the deposited earth a surface upon which the ordinary roller, weighing, say, three-quarters of a ton per foot run, can work. Finally, in the case of all high and important dams, it is desirable to complete the consolidation by means of a 10-ton steam roller. Grooved rollers, split rollers, and light stone rollers for the top of the dam have been noticed in paragraph 119. Ordinary rollers should be of cast iron, not stone, and should be provided with scrapers to prevent them from lifting the earth.
- 235. Pumps.—Water should be laid on all over the works both for constructional purposes and for the supply of the labourers. As the lifts will be high for large dams, it is advisable to have for them steam pumps, piping, and 4-feet cube wrought iron tanks connected in series as reservoirs for these purposes. Hand pumps are useful for lower lifts and for unwatering foundations; for the latter there should be a reserve of pumping power to deal with any unusual amount of water which may be met with, as in such cases everything depends upon the rate at which it can be got rid of.
- 236. Stone-Metal Crushers and Concrete Mixers.— These will be required only when there is a large amount

of concrete to be made for the waste-weir and outlet; as a general rule, hand labour will suffice for the preparation of material for these works.

237. Tools and Instruments (vide Appendix 22, part 4).—It is true economy to have good tools, especially on a large work, where it is certain they will be worn out rather than will rust away. There should always be a large balance of good tools in store to meet sudden demands, and to enable useless tools to be replaced without delay.

Similarly, there should be a reserve of surveying instruments, as these are peculiarly liable to injury on a large work.

IV. MAINTENANCE OF WORKS.

238. The Dam.—During the construction of the dam, careful observations by level and theodolite should be made, as described in paragraph 125, at all high parts of the dam, and at such others where from any cause there may be any tendency to failure. These observations should be continued for at least a year after all movement has apparently ceased. During their continuance and after their cessation an annual record should be maintained of the levels of the top of the dam taken on the chainage stones fixed on it.

The next most important matter to which attention should be paid is the drainage of the dam. Rain water should not be allowed to concentrate when flowing down the slopes nor to lodge anywhere near the base of the dam, and all drains there may be should be kept running free from all obstructions. Wherever possible, a continuous record of the discharges of such drains should be maintained as a permanent record. The best test

of the sufficiency of the drainage is that the ground downstream of the dam is dry.

The dam should always be kept clear of long grass and shrubs, the latter being carefully rooted out. The slopes should be maintained to an even surface so as to shed the rainfall regularly. Trees should not be allowed to grow on the dam nor within 30 feet of its toes. Some weeks before the monsoon commences, the whole of the slopes should have the vegetation on them burned: this will make the young grass spring up the better afterwards, and will also expose any rat-burrows, &c., and give time for their being cut out and refilled. Burning has, however, the disadvantage of destroying the finer grasses and thus of encouraging the growth of the coarser and less desirable ones. During the monsoon a permanent gang of labourers should be employed in preventing the guttering of the slopes and in filling up cracks, settlements and rain scores. Cracks can best be filled by ramming into them a gritty mixture by means of chisel-pointed poles. The gang should be maintained at full strength for the first two monsoons, and thereafter it can gradually be reduced as experience dictates.

The pitching should be examined as the water level falls, and all loose stones, settlements, and other defects made good in a continuous system of repair. All shrubs should be rooted out.

239. The Waste-Weir.—If there is a temporary crest, this should be removed as soon as the reservoir falls below permanent crest level, and all woodwork in connection with it should be dried, tarred, and stored. It is generally not advisable to attempt further storage from occasional storms later on in the year.

As soon as the sluices are laid dry, they should be oiled and painted, and, some time before the monsoon

commences, the lifting gear should be tested, so as to see that all is in perfect working order.

The masonry should have all repairs effected as early as possible after the monsoon, so that the mortar may have the advantage of setting properly in the cold weather. All plants growing in the masonry should be rooted out as soon as possible. These remarks, of course, apply equally to the masonry works of the dam and the outlet.

- 240. The Outlet.—The culvert should be examined twice a year, some little time before the monsoon and just after its close, and all structural repairs should then be made good. The valves, their seats and their rods, should be examined a month before the monsoon, and all parts in contact greased and others painted. The capstan heads and screws should be constantly oiled and protected from the weather; in the case of the screws this may be done by wrapping them round with oiled coir string. The ironwork of the approach bridge and headwall should be kept well painted, and the woodwork tarred, and any settlement which may take place at the approach bank should at once be made up.
- 241. The Reservoir.—The plantations should be carefully attended to, and preparations for planting more trees made throughout the fair weather by the small number of guards maintained for watching the plantations.

If silt clearance by ploughing is attempted (vide paragraph 36), the ploughing should proceed continuously as the reservoir level falls and the ground dries sufficiently to permit of it. Field owners should be encouraged to embank their fields in order to catch silt; where there is not hard ground for the formation of small waste-weir escapes, pipes with proper inlets might be

fixed at the flanks to lead the impounded water safely away.

The silt experiment lines (vide paragraph 39) should be examined, and should be levelled over just before the replenishment of the reservoir is likely to commence.

V. THE REPORT, PLANS, ESTIMATES AND SPECIFICATIONS.

- 242. The Report. (a) General Description. The Report forwarding the plans and estimates for sanction should be as concise as possible, and repetitions should be The writer should, however, place himself in avoided. the position of the persons who will have to study the Report without the advantage of detailed local knowledge, and should make everything as clear to them as it is to himself from possessing that knowledge. All statistical information should be given in a table, as in Appendix 26, where it can be found in a moment, whereas, if it is buried in a mass of verbiage, it is not so easily traceable. It is not necessary that the Report should discuss matters of common professional knowledge, as its main objects are to explain the reasons for selecting the site dealt with and rejecting others, and to describe the particular features of the scheme. The reasons for the rejection of these other sites should be given carefully so as to show that the whole neighbourhood has been investigated thoroughly, and thus to avoid a reference on this point by those who have to examine the scheme (vide paragraph 43^A).
- (b) Preparation of the Project.—The extent of survey done is best explained by recording the result of the field work on the plans. The names of all those who have been connected with the drawing up of the scheme should be reported, so that they may be given all the

credit which is their due, and so that proper weight may be attached to their opinions.

- (c) The Site and the Works.—All peculiarities of the site; the nature of the foundations; the reasons for locating the different works at the places settled for them, and for choosing the types of works adopted in the project should be described; and the locality, quantity available, and cost of the materials required for construction should be noted.
- (d) Statistics of Rainfall and Yield.—In respect to rainfall statistics, it is best to tabulate the daily fall during the monsoon months of as many years as possible, rather than the total monthly or annual falls. From such a table may be prepared one showing falls each over 1 inch, which alone are likely to produce a fair amount of run-off. The statistics on which the yield of the catchment and the storage required have been calculated should be given in detail. It should be noted if rainfall records or river-gauge statements of discharge have been depended upon—the latter, it is scarcely necessary to say, are the better of the two, as they show the actual results of all the factors producing run-off.
- (e) Waste-Weir Floods.—The method of the disposal of the waste-weir floods should be described, and it should be made perfectly clear that their course will be harmless to neighbouring lands and property, or, if they are likely to cause damage, that full provision for compensation has been made in the estimates.
- (f) Revenue Matters.—The principal crops grown in the neighbourhood; the probable effect on cultivation of the introduction of irrigation; the nature of the soil of the land under command; the amount of manure and fuel available; the character of the cultivators; the peculiarities of the seasons and climate; the prospects

of trade owing to the nearness of good markets; and the facilities afforded by communications by road and rail should be stated. The written opinions of the Revenue officers on all these matters should be obtained before the project is worked up, and should be attached to the Report.

- (g) Financial Return.—When calculating the financial return, the results of an average year should be taken into account, that is to say, the storage, "duty," and area irrigated which are considered should be those of an ordinary year. The protective value of the work during a drought year should also be estimated. Statements should be attached to the Report to show the probable annual expenditure on the construction of the work and the financial results anticipated from it during the first twenty years after its completion.
- (h) Arrangement of Report.—The Report should be divided into sections and paragraphs, and these should be carefully indexed for ready reference. At the end should be a series of statements giving the principal dimensions, costs, &c., of the project (Appendix 26); the reservoir contents at each contour (Appendix 17); rainfall and river gauge statistics; and waste-weir flood calculations (Appendices 12, 13 and 14).
- 243. The Plans.—Care should be taken to send up a complete set of plans, so that the scope of the project may easily be ascertained from them. It is a waste of time to make any but type drawings for minor works, as these may have to be altered during construction, and their detailed design can safely be entrusted to the discretion of the officers who will have to carry them out. The scales of the drawings should be chosen so that they may be as small as is consistent with showing the proper amount of detail in them; large, unwieldy

drawings are difficult to deal with, and are usually unnecessary, as intricate parts can easily be shown by enlarged detailed drawings. The index plan should show all places mentioned in the Report; all roads, railways, irrigation works, and natural features; and the proposed canal system and the land irrigable by it.

The following is a list of drawings for the reservoir, which comprises all that will generally be required:—

- 1. Index Plan of Project.—Foolscap size (for insertion in the Report).
- 2. General Plan of Catchment. Scale, 1 mile to 1 inch.
- 3. Contoured Plan of Reservoir.—Scale, 660 feet to 1 inch (to show all works and the waste-weir outfall).
- 4. Land Plan (to show all land to be acquired).—Scale, 660 feet to 1 inch (this should correspond with the village maps).
- 5. Dam.—Plan, longitudinal and cross sections; details of foundations and closure arrangements.
- 6. Waste-Weir.—Plan, longitudinal and cross sections; details of automatic gates, sluices, and temporary weir crest.
- 7. Outlet.—Plan, longitudinal and cross sections; details of tail- and fore- bays, approach bridge, valves, lifting rods, and capstans.

On every drawing, where required, all the foundations and the trial pits by which they were determined should be shown; the direction of the flow of water should be indicated by arrows; and all reduced levels, water levels, and dimensions should be carefully given, so that they may at once be seen on inspection.

Each plan should bear the name of the project and its

own distinctive name: the year of its preparation; the estimated cost of the work; the names of the surveyor, designer, and draughtsman; and, where necessary, references to benchmarks and to the pages of the book in which the survey is recorded. It will make reference easy if the plans (tracings or blue prints) are folded foolscap size and bound in a series of pamphlets (or placed in small portfolios), each pamphlet, or portfolio, having outside an index to the drawings it contains.

244. The Estimates.—The detailed estimates should be prefaced by a Recapitulation showing the total cost of each work arranged under main heads (vide Appendix 15).


The estimates of the works should then follow in the order of the recapitulation, and each should consist of a general description, the detailed measurements and an abstract of cost. The general description should be confined to explaining the drawings and to giving any tabular information there may be respecting them: the reasons for selecting the type of work chosen and other general particulars should appear in the Report itself. The measurements under the different subheads should be arranged throughout in the same order, so that the total quantities and costs of any particular part of the work may be ascertained at any time. The abstract should be made out so as to exhibit clearly the total cost of each subwork, and the "contingencies" allowed for each should be added in each case to enable this to be done (vide Appendix 16).

245. The Specifications.—It is desirable to draw up for each district a complete set of specifications which can be printed and attached to each project, thus saving trouble and securing as much uniformity as is desirable. The specifications should clearly distinguish between

what is definitely settled and what is left to the discretion of the principal responsible officer, and as much latitude as possible should be given to him to meet unforeseen requirements. Specimen specifications for earthwork and pitching are given in Appendix 18, and for the waste-weir and outlet in Appendix 18^A.

ORAGE (
Descripti 	No.	Remarks.
•	28	29
masonry.	1	Storage for Lower Pánjhra River Works.
ıvated char	2	Town water-supply.
onry wall	3	
evated char	4	Old work restored.
onry wall	5	
nel in roc	6	
onry wall	7	
onry wall a	8	550 feet is the originally designed length of the waste- weir and 400 feet is its actual length.
onry wall	9	Town water-supply.
p nry wall a	10	Do.
channels	11	
vated char	12	
avated cha	13	Town water-supply.
crete wall	14	
and chan		Storage for Yerla Canals.
crete wall	16	Do. Gondoli Canal.
onry wall annel.	17	Town water-supply.
i Ditto		Water-supply for Sátára; small scheme abandoned
onry wall		for larger.
the Government.		

ts the fraction within the li



APPENDIX 2.

TABLE OF TOTAL MONSOON RAINFALL AND ESTIMATED RUN-OFF AND YIELD PER SQUARE MILE FROM CATCHMENT AREAS.

(Vide Chapter I., paragraphs 13 and 16.)

	2	3	4	5	6	7	8	9	10
	G	ood Catchr	nent. ·	Ave	rage Catcl	ment.	В	ad Catchm	ent.
Total Monsoon Rainfall in inches.	Per- centage of Run-off to Rainfall.	Depth of Run-off due to Rainfall in inches.	Yield of Run-off from Catchment per square mile in mill. cft.	Per- centage of Run-off to Rainfall.	Depth of Run-off due to Rainfall in inches.	Yield of Run-off from Catchment per square mile in mill. cft.	Per- centage of Run-off to Rainfall.	Depth of Run-off due to Rainfall in inches.	Yield of Run-off from Catchment per square mile in mill. cft.
1 2 3 4 5	0°1 0°2 0°4 0°7 1°0	0,020 0,013 0,014 0,001	0'002 0'009 0'028 0'065 0'116	0°1 0°15 0°3 0°5	0'001 0'003 0'003 0'001	0'001 0'08 0'087	0,2 0,3 0,1 0,02	0,0002 0,002 0,002	0'000 0'004 0'014 0'032
5 6 7 8 9 10	1°5 2°1 2°8 3°5 4°3	0'090 0'147 0'224 0'315 0'430 0'572	0'209 0'341 0'520 0'732 0'999 1'329	1.1 1.2 5.0 3.3 3.3	0°067 0°168 0°236 0°329 0°429	0°156 0°255 0°390 0°549 0°749 0°996	05 07 10 14 17 21 26	0°025 0°045 0°073 0°112 0°157 0°215	o o 58 o 104 o 170 o 260 o 366 o 499 o 664
12 13 14 15 16	5'2 6'2 7'8 8'3 9'4 10'5	0'744 0'936 1'162 1'410 1'680 1'972	1'728 8'174 2'699 3'276 3'903 4'58t	4.6 5.4 6.2 7.0 7.8 8.7	0.558 0.202 0.841 1.024 1.440	1'296 1'630 2'024 2'457 2'927 3'435	3.1 3.6 4.1 4.7 5.2 5.8	oʻ286 oʻ372 oʻ468 oʻ581 oʻ705 oʻ840 oʻ986	0.864 1.037 1.349 1.638 1.951
18 19 20 21 22 23	12.8 13.9 15.0 16.1 17.3 18.4	2'304 2'641 3'000 3'381 3'806 4'232	5'353 6'135 6'970 7'855 8'842 9'832	9.6 10.4 11.35 12.0 12.9 13.8	1.728 1.980 2.250 2.535 2.854 3.174	3 433 4'014 4'601 5'227 5'891 6'631 7'374	6'4 6'9 7'5 8'0 8'6	1,200 1,200 1,200 1,125 1,125	2 290 2 676 3 067 3 485 3 927 4 421 4 916
24 25 26 27 28 29	19'5 20'6 21'8 22'9 24'0 25'1	4.680 5.150 5.668 6.183 6.720 7.279	10'873 11'964 13'168 14'364 15'612 16'911	14.6 15.4 16.3 17.1 18.0 18.8	3'510 3'862 4'251 4'637 5'040 5'459	8'154 8'973 9'876 10'773 11'709 12'683	9.7 10.3 10.9 11.4 12.0 12.5	2'340 2'575 2'834 3'360 3'639	5 436 5 982 6 584 7 182 7 806 8 455
30 31 32 33 34 35 36	26'3 27'4 28'5 29'6 30'8 31'9 33'0	7.895 8.494 9.125 9.768 10.472 11.165 11.880	18-330 19-733 21-188 22-693 24-329 25-939	23.3 22.3 23.1 23.1 23.1	5.917 6.370 6.840 7.326 7.854 8.373	13'747 14'799 15'891 17'019 18'246 19'454	13'1 14'2 14'8 15'4 15'9	3'945 4'247 4.560 4'884 5'236 5'582	9'165 9'866 10'594 11'346 12'164 12'969
37 38 39 40 41 42	34'I 35'3 36'4 37'5 38'6 39'8	12.617 13.414 14.196 15.000 15.826 16.716	27.600 29.312 31.163 32.985 34.848 36.767 38.835	24'7 25'5 26'4 27'3 28'1 28'9 29'8	8'910 9'462 13'660 10'647 11'250 11'869	20'700 21'984 23'372 24'735 26'136 27'575	16.5 17.0 17.6 18.2 18.7	5'940 6'308 6'707 7'098 7'500 7'013 8'358	13'800 14'656 15'581 16'490 17'424 18'383
43 44 45 46 47 48	40'9 42'0 43'1 44'3	17'587 18'480 19'395 20'378 21'338 22'320	40.858 42.933 45.058 47.342 49.572 51.854	30.0 31.2 33.3 34.0 31.2	12'537 13'860 14'546 15'283 16'003 16'740	29' 126 30' 643 32' 199 33' 793 35' 506 37' 179 38' 890	19'9 20'4 21'5 22'1 22'7 23'2	8'358 8'793 9'240 9'697 10'189 10'669	19 417 20 429 21 466 22 529 23 671 24 786
49 50 51 52 53	45.4 46.5 47.6 48.8 49.9 51.0 52.1 53.3	23'324 24'400 25'449 26'520 27'613 28'782	54'186 56'686 59'123 61'611 64'151 66'866	35'7 36'6 37'4 38'2 39'0	17'493 18'303 19'086 19'890 20'709	40.639 42.514 44.342 46.208 48.113 50.149	23.8 24.4 24.9 25.5 26.0 26.6	11.160 11.662 12.200 12.724 13.806 14.391	25 9 27 27 093 28 343 29 561 30 805 32 075
54 55 56 57 58 59 60	54*4 55*5 56*6 57*8 58*9 60°0	29 920 31 080 32 262 33 524 34 751 36 000	69'510 72'205 74'951 77'883 80'734 83'635	39°9 40°8 41°6 42°4 43°3 44°1 45°0	22'440 23'310 24'196 25'143 26'063 27'000	52°132 54°153 56°213 58°412 60°550 62°726	27'2 27'7 28 3 28'9 29'4 30'0	14.960 15.240 16.131 16.222 18.000	33'433 34'755 36'102 37'475 38'941 40'367 41'817
	<u> </u>	<u> </u>		J	<u> </u>	1	1	<u> </u>	''/

APPENDIX 3.

CALCULATION OF THE AMOUNT OF STORAGE REQUIRED FOR THE IRRIGATION OF A CERTAIN AREA AND TO SUPPLEMENT THE DISCHARGE OF A NATURAL STREAM.

(Vide Chapter I., paragraph 26.)

- 1. The following calculation shows how the amount of storage which is required to supplement the discharge of a natural stream may be determined. The stream considered is one which has a deficient supply in the fair season, and a superabundant one during the monsoon. By storing only sufficient of the excess discharge during the latter period to tide over the deficiency of the former one, the catchment can be made to serve the area contemplated at the minimum expense, as the normal daily discharge of the stream will thus be fully utilised.
- 2. The first thing to be done is to calculate the daily supply required by the canal and then to gauge the daily discharge of the stream, as the irregularity of the flow of the latter will not permit of monthly results being taken directly into account. When the discharge of the stream is in excess of the requirements of the canal, the balance is available for being stored. When, however, the former is less than the latter, the difference will have to be supplied by the storage already effected.
 - 3. The daily observations should be recorded in the following form:—

I 3 5 Discharge Discharge of Discharge Discharge required natural Stream required from that can be at Weir Site. for Canal. Storage. Stored. Date. Average Average Average Average for day. for day. for day. for day. Cft. per sec. Cft. per sec. Cft. per sec. Cft per sec.

REGISTER OF DAILY GAUGINGS.

At the end of the month the columns should be totalled and multiplied by 86,400, the number of seconds in one day, and the results thus obtained tabulated in the form given below:—

ESTIMATE OF STORAGE REQUIRED.

I	2	3	4	5	6
Year and Month.	Quantity required for Canal. Mill. cft.	Discharge of natural Stream at Weir Site. Mill. cft.	Quantity required from Storage. Mill. cft.	Quantity that can be Stored. Mill. cft.	Contents in Reservoir, with F.S. Storage = 150 mill. cft. (at end of each month). Mill. cft.
			Initial	storage	130.373
January	26.784	5.575	21.500	1	100.164
February	25.026	4°150	20.000	''	88.258
March	26.784	1.284	25'200		63.028
April	25.020	10.146	22.397	6.623	47.284
May	26.784	0.453	26.331	1	20.953
lune	39.744	25.871	32.287	18.714	7:080
July	53.568	19.982	40.276	6.990	26.506
August	53.268	35.717	39:359	21.508	44.857
September	51.840	10.565	41.248	_	85-985
October	38·88o	68:947	25.799	55 [.] 866	30.067
November	25.050	4.881	21.030	,,	9.028
December	26.784	16.045	20.876	10.134	1.711
Totals	421.632	203.613	337.857	119.838	

NOTES.

- 1. Col. 2 + col. 5 = col. 3 + col. 4.
- 2. The increments in col. 6 are equal to the excesses of col. 5 over col. 4, and the decreases, to those of col. 4 over col. 5.
- 3. In col. 6 the entries in light type indicate the contents at the ends of the months of a reservoir with an assumed F.S. Storage of 150 mill. cft., no allowance for evaporation, etc., being made. The entries in heavy type indicate the additional storage required in the reservoir to enable it to tide over the periods concerned.

4	. The total of col. 3	•••		•••			•••	Mill. cft. 203-613
	Plus the initial storage			•••	•••	•••	•••	130:373
	Minus the final storage (in		case a	minus	quantity)	•••	•••	1711
	Plus the maximum deficien	cy	•••	•••	•••	•••	•••	85.935
	Equals the total of col. 2		•••	•••		•••	•••	421.632

^{5.} To ascertain the amount of storage required:—to the assumed storage add the maximum deficiency, or deduct the minimum excess at the beginning of the rains, and then add the proper allowances for evaporation and absorption and for loss in transit down the feed channel.

APPENDIX 4.

RESERVOIR EXPENDITURE ESTIMATE.

(Vide Chapter I., paragraph 27.)

- 1. For the proper regulation of the draw-off from a Reservoir it is necessary to frame an estimate of the expenditure, month by month. The following data may be assumed:—
 - 2. Duty of Water.—This may be taken thus :-

```
Nov. 1st—Feb. 28th ... 60 acres per cft. per sec.

March 1st—June 30th ... 40 ,, ,,

July 1st—Oct. 31st ... 80 ,, ,,
```

- Note. 1.—The actual seasons begin and end fifteen days earlier than these dates, but this may be neglected for the estimate.
- Note 2.—The duties are purposely taken low so as to agree with what may occur in practice; by good management it should be easy to increase them.
- Note 3.—The duties assumed are average ones for all classes of crops that may be irrigated at the same time.
- 8. Acreage under Irrigation.—It will be necessary to assume the acreage under irrigation from time to time, and the utility of the estimate will depend upon the correctness of the assumptions made. The acreage assumed should be as large as previous experience indicates, but subject to the restriction noted in paragraph 7 below.
- 4. Amount of Draw-off.—This should be calculated on the acreage assumed and on the duties given in paragraph 2 above.
- 5. Allowance for Evaporation and Absorption, &c.—This may be assumed thus (vide end of paragraph 23):—

```
Nov. 1st—Feb. 28th ... 3 in. depth per month over the then top area of the Reservoir.

March 1st—June 30th ... 8 in. ,, ,,

July 1st—Oct. 31st ... 4 in. ,, ,,
```

These amounts should be deducted from the estimated Reservoir level at the end of each month so as to give the estimated level at the beginning of the next month. They correspond to a loss of storage during the year which is equal to a draw-off of 5 feet in vertical depth from the mean area of the Reservoir.

- 6. Available Supply.—The amounts available at the different Reservoir levels should be taken from the table of Reservoir contour capacities. The necessary deductions for the silting-up of the Reservoir should be made.
- 7. Extent of Estimate.—The estimate should extend from the time when there is no more chance of replenishment, say November 1st, until there is a fair certainty of monsoon replenishment during the next monsoon, as ascertainable from the records. It should start with the actual level of the Reservoir. The estimated future levels, when once sanctioned, should not be exceeded without further sanction, which should be obtained after giving full explanation of the causes necessitating it. The estimate should close with a small balance in the Reservoir to allow for contingencies, and, for the same reason, credit should not be taken for hot-weather replenishments. It should be submitted on November 15th.
- 8. Type Estimate.—The following is given as part of a type estimate of a Reservoir supplying a canal which is also partly fed by a river:—

·	At beg of m	inning onth.	. . .	supply. feet.		ss per	n of et.	f water alone. feet.	due to	evapo- et.	of month.	
Month.	Estimated R. L. of Reservoir.	Storage in Reservoir Mill, cubic feet.	River Supply. Million cubic feet.	Total available su Million cubic fe	Acres irrigated.	Duty allowed, acres per cubic foot per second.	Total consumption of water. Water. Million cubic feet.	Consumption of from Reservoir al Million cubic fe	R. L. of Reservoir consumption.	Allowance for everation. Feet.	Estimated R.L. Reservoir at end of	Remarks.
1	2	3	4	5	6	7	8	9	10	11	12	13
Nov. Dec.	113.00	247.86 242.29	134'14 57'71	382.00	2,000 2,500	60 60	86,400	0.00	113.25	0°25 0°25	113.00	

APPENDIX 5.

ESTIMATE OF THE DURATION OF A WATER-SUPPLY STORAGE.

(Vide Chapter I., paragraph 27.)

The following estimate was made of the duration of supply in a connected series of reservoirs designed for the water-supply of the town of Dharwar, Bombay Presidency. It was assumed in it that the storage of the upper reservoirs would first be utilised, being run-off for this purpose into the main Kelgeri Storage Reservoir, and that the latter would be the last to be drawn upon. For the sake of simplicity of calculation it was further assumed that the storage required to make good the loss by evaporation from the lower tanks was not replaced from the upper subsidiary tanks.

I	2	3	4	5	Ġ	7	8	9	10	11
		ommencer of month.	nent	Evapo	ration.		nent.	At e	nd of m	onth.
		Tank.		Depth		Draw- off.	[ota] nishr		Tank.	
Month.	R.L.	Surface area.	Con- tents.	on top area.	Amount.		Total deplenishment	Con- tents.	R.L.	Surface area.
R	A.L.	Mill sq. feet.	Mill. cft.	Feet.	Mill. cft.	Mill. cft.	Mill. cft.	Mill. cft;	X.L.	Mill, sq. feet.
					NKHEDI T					
Nov.	F.S.L gr'oo Balane cont	o 649 ce in tank ingencies	2°528 and allo 	or 16 wed for	0°104 } 0°324	3.100	2*528	{Nil,	Tank ru Nov. 30	n dry on oth.
				Kench	ITTAHKA	Tank.				
Nov.	F.S.L.	} 1.550	4.879	0.16	0.192	_	0.192	4.684	79.80	1,500
Dec	79'80	1,500	4.684	0.16	0.103	2.120	2.362	2.322	79.50	0.775
Jan.	Balanc	e in tank ingencies	and allo	wed for	9 124	2.120	2'322	{ Nil,	Tank ru Jan. 31	1°200 0°775 n dry on st.
					'	·	L			

1	2	3	4	5	6	7	8	9	10	11
		ommence of month.		Evapo	oration.		nent.	At e	nd of m	onth.
		Tank.		Depth		Draw- off.	Cotal		Tank.	
Month.	R.L.	Surface area.	Con- tents.		Amount.		Total deplenishment.	Con- tents.		Surface area.
	K.D.	Mill. sq. feet.	Mill. cft.	Feet.	Mill. cft.	Mill. cft.	Mill. cft.	Mill. cft.	R.L.	Mill. sq. feet.
			1	KELGERI	URMUND	INKERI.				
Nov.	F.S.L. 78'76	2.932	12.100	0.19	0.469	[—	0.469	11.637	78·60	2 870
Dec	78.60	2.870	11.637	0.16	0.459	_	0'459	11'178	78'44	2.790
Jan	78.44	2'790	11'178	0.16	0.446	_	0'446	10.732	78.28	2 730
Feb	78.38	2,430	10.232	0.33	0.010	1.000	2 870	7.862	77.12	2.320
March	77.15	2.320	7.862	0.67	1.224	2'170	3.724	4'138	75.25	1.680
April {	75°25 Balanc allow	red for c			9.0.018	3.100	4.138		Tank ne after Ap	ot drawn ril 30th.
			Kei	GERI S1	TORAGE R	ESERVOI	R.			
Nov.	F.S.L. 60'00	6.599	59.299	0.16	1.026	-	1.026	58.243	59.84	6.230
Dec	59.84	6.230	58'243	0.16	1'045	_	1'045	57° 198	59.68	6.470
Jan	59.68	6.470	57'198	0.16	1.032	_	1.032	5 '163	59'52	6'400
Feb	59'52	6'400	56.163	0.33	2,133	_	2,133	54.030	59.19	6.580
March April	59°19 58°52	6.380	49.010	0.67	4'120 4'000		4'120	49'910	58·52 57·85	6'000 5'770
May	57.85	5.220	45.010	0.21	2'942	2'170	2,113	40'798	20.00	5.420
June	56.00	5.420	40.708	0.31	1.807	2.100	3.007	36.891	56.16	5 154
July	56.16	5'154	36.891	0.16	0.825	2'170	2.995		55°50 l, Tank	
Follow-	55.20	4'935	33.896	3.48	11,001	23 360	34°471		l, Tank June 30t	
At pumpin	g sill	1'437						l' '	, ,	
Mean area	•	3.182			During 11	months	•			

Notes.

^{1.} These calculations show that, starting with full tanks on November 1st, the supply would last up to June 30th of the next year but one, and that they would thus tide over a year during which there was no replenishment.

2. The allowances in feet for evaporation and absorption, on the top areas, were:

For \{ Nov. Dec. Jan. Feb. March April May June July Aug. Sept. Oct. o'16 o'16 o'16 o'16 o'33 o'67 o'67 o'51 o'31 o'16 o'16 o'16 o'17, is., for the whole year 3'65 feet. A separate allowance was not estimated for absorption, as it was believed it would be very small, for the beds of all of the tanks are formed of puddled rice fields. On the other hand, full credit was not given for the rain falling on the tanks themselves, which would compensate for a good deal of loss on this account.

3. The daily supply to be given to the town is 430,000 gallons, or 68,900 cubic feet. In the calculations it has been taken equal to 70,000 cubic feet.

APPENDIX 6.

STATISTICS OF CERTAIN IRRIGATION WORKS IN INDIA.
(Vide Chapter I., paragraph 29-31.)

TABLE L.

DUTY OF WATER OBTAINED ON CERTAIN IRRIGATION WORKS IN INDIA DURING 1885—86, 1890—91, AND 1895—96.

(Vide Irrigation Revenue Reports Statistical Table L-K)

	1			rngated discharge	per cubic utilised.	foot of	
Pr Aince.	Name of Work.	1385	−86 .	1342	— 9 г.	1895—96.	
	<u> </u>	Kharif.	Rabi.	Kharif	Rabi	Kharif.	Rabi.
1	2	3	4	5	6	7	8
	I. TANKS.						
Bombay	1. Mhasvád Tank 2. Ekruk Tank	148°00 50°83	43°00 28°07	88 ⁻ 54 57 ⁻ 77	52°41 29°38	42 64 60'76	41,51 31,02
United !	3. Jhansi Lakes 4. Hamirpur Lakes	=	29°00	=	31,00 31,00	7°00	72°00
Rajputana	5. Bir Tank 6. Ladpura Tank 7. Balad old and new Tanks	=	Ξ	=		10°00 40°00 18°00	85,00 21,00 30,00
Baluchistan	8. Khushdil Khan Reservoir	_	-	_	_	-	138-66
	2 CANALS.	ŀ					
Bombay {	9. Nira Canal 10. Hathmati Canal 11. Krishná Canal	115 00 16 20 61 00	60°00 47°44 22°00	38.00	96°29 67°96 37°00	54°-9 36°36 42°00	54 '82 54 '00 25 '00
Sind {	12. Mithrau Canal 13. Sukkur Canal		55 85	34 33	37 98	37°58 37°17	26°37 240°17
United Provinces	14. Upper Ganges Canal 15. Agra Canal 16. Betwa Canal	86°00 97°00	171 °00 131 °00 65 °00	81.00 81.00	142°00 115°00 77°00	88.00 89.00 98.00	96.00 102,00
Punjab 1	17. Swat River Canal 18. Bari Doab Canal 19. Sirhind Canal	64.00	158'00 157'00 193'00	57°00 64°00 66°00	169,00 140,00 150,00	77°00 68°00 44°00	120.00 132.00 110.00
Bengal {	20. Orissa Canals 21. Sone Canals	80'10 94'30	99,30 —	90°99 88°48	11'32 47'41	67°00 74°32	72.87
Baluchistan	22. Shebo Canal	_		35.00	94.00	20'80	99'70
Madra* {	23. Godavari Delta System 24. Cauvery ,, 25. Kistna ,,	90°45 71°34 78°24	7'04 58'37	94'93 ¹ 72'21 ¹ 124'44 ¹	2.883 1,204 Q1 ₃	94°281 61'941 125°051	27 ⁻⁸²² 90 ⁻⁷³⁸

 1 First Crop. 2 Second Crop. For Sind and Madras the figures given are the areas irrigated per cubic foot of discharge at head .

APPENDIX 6.

TABLE II.

Duty of Water obtained on certain Irrigation Works in Bombay (Deccán), giving Average Results.

(Vide Irrigation Revenue Reports, Statistical Table I.-E.)

				-,		Util	ised l	Disch	arge.	,				
Name of Work.			K	arif	Duty	7.				R	abi E	outy.		
	1894—95	1895-96	1897—98	1898-99	1900-01	Total.	Average.	1894—95	1895-96	1897-98	1898-99	1900—01	Total.	Average.
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
Mhasvád Tank Ekruk Tank Bhátodi Tank Nirá Canal Krishná Canal Lower Pánjhrá Canals	34 61 122 48 49 103	42 61 19 54 42 94	13 86 118 100 52 77	73 83 14 85 38 375	153	271 501 355 440 318 649	54 100 71 88 64 162	50 38 135 57 22	41 31 123 54 25 132	101 44 154 124 26	42 44 161 91 26	51 62 118 53 142	285 157 635 444 152 274	57 39 127 89 30
Totals	417	312	446	668	69z	2,534	539	302	406	449	364	426	1,947	479
Average .	70	52	74	111	138	445	89	60	68	90	75	85	378	76

The years 1896-97 and 1899-1900 are excluded, being famine years

Table III.

Proportions of Areas Irrigated to Culturable Areas under Command on Irrigation Works in Bombay (Deccán).

(Vide Irrigation Revenue Reports, Statistical Table IV.—E.)

Year.	Culturable area in acres.	Irrigated area in acres.	Percentage of col. 3 to col. 2.	Remarks.
I	2	3	4	5
1888—89	512,301	79,195		The entries in col. 2 for the
1889—90	533,313	80,599		years 1888—80 to 1893—94
189091		75,901		are believed to show the
189091	535,762			total culturable area under command of the completed
Total	1,581,376	241,695	15.3	projects (vide Irrigation Revenue Report, 1894—95, para. 6 of Govt. Resolution, No. 9.
1891—92	559,911	97,074		W.I., 123 of Jan. 23rd, 1806).
1892-93	571,903	66,486		For the remaining years the
1893—94	583,897	81,000		entries in col. 2 show the
93 94				culturable area under com- mand of the projects as
Total	1,715,711	244,560	14.3	actually constructed.
Grand Total, 1888—1894	3,297,087	486,255	14.7	
1894—95	341,015	85,394		
1895—96	315,040	76,129		
1896—97	279,741	119,210		
1090—97				
Total	935,796	280,733	30.0	
1897—98	316,425	127,722		
1898—99	316,425	105,055		
1899—1900	316,425	105,830		
Total	949,275	338,607	35'7	
Grand Total, 1894—1900	1,885,071	619,340	32.0	
1900-01	316,425	126,178	39.9	
Grand Total, 1894—1901	2,201,496	745,518	33.9	

Table IV.

Areas Irrigated under Different Crops in Bombay (Deccán).

(Vide Irrigation Revenue Reports, Statistical Table III.—E.)

		Acres Irrigated.										
Description	of Crop.	1894—95.	189596.	1897—98.	1898—99.	1900-01.	Total.	Aver.				
1		2	3	4	5	6	7	8				
z. Perennial	Area Percentage	*17,633	14,533 90	10,198	11,094	10,766	64,224	12,845				
2. Rabi	Area Percentage	*14,823 18	*12,035	21,023 17	25,120 25	21,521 19	94,522 19	18,904 19				
3. Monsoon dry	Area Percentage	34,788 43	33,459 46	*75,198 62	48,812 49	*71,167 61	263,424 45	52,685 54				
4. Eight months	Area Percentage	12,393 15	10,596 15	11,702	12,762	12,196 10	59,649 12	11,930				
5. Hot weather	Area Percentage	1,117	1,101	*3,332 3	1,538 2	1,783 1	8,871 2	1,774 2				
6. Total	Area Percentage	80,754 100	71,724 100	121,453	99,376	117,433 100	490,690 100	98,138				

TABLE IVA.

AREAS AND PERCENTAGES OMITTING EXCEPTIONAL AREAS, MARKED THUS * IN TABLE IV.

		1	Acres Irrigated.					
Description of C	rop.	•	Total.	Average.	Percentage			
1			2	3	4			
1. Perennial	•••		46,591	11,658	15			
2. Rabi		•••	67,664	22,555	23			
3. Monsoon dry	•••		117,059	39,020	40			
4. Eight months	•••		59,649	11,930	20			
5. Hot weather	•••	•••	5,539	1,385	2			
6. Grand total	•••		296,502	_	100			

The years 1896-97 and 1889-1990 are excluded, being famine years.

APPENDIX 7.

(Vide Chapter I., paragraphs 28, 29 and 32.)

ESTIMATES OF REVENUE RESULTS FROM RESERVOIR STORAGE.

1. ESTIMATE OF THE IRRIGATING CAPACITY OF RESERVOIR STORAGE.

Let A = the area in acres of each crop in quadrennial rotation;

Q = the quantity in cubic feet required for the irrigation of 4 A;

The duty for perennial crops (sugar, plantains, &c.) = 100 acres for 365 days;

The duty for rice = 40 acres for 122 days;

The duty for monsoon dry crops = 160 acres for 122 days;

The duty for rabi = 120 acres for 121 days.

Discharge cft. per sec. Secs. Days. Cubic feet.

Then Q =
$$\frac{A}{100} \times 86,400 \times 365 = 315,360A$$
+ $\frac{A}{40} \times 86,400 \times 122 = 263,520A$
+ $\frac{A}{160} \times 86,400 \times 122 = 65,880A$
+ $\frac{A}{120} \times 86,400 \times 121 = 87,120A$

Thus Q for 4 A . . . = 731,880A, say 750,000A,

adding one-third for loss by evaporation and absorption = E.

$$Q + E$$
 for 4 A = 1,000,000A cubic feet.

Or, in other words, if A = 1 acre, with these duties the reservoir will irrigate 4 acres per million cubic feet of storage.

If the duties are taken three-quarters of the above, the reservoir will irrigate 3 acres per million cubic feet of storage.

If the duties are taken one-half of the above, the reservoir will irrigate 2 acres per million cubic feet of storage.

2. ESTIMATE OF THE RETURN FROM RESERVOIR STORAGE.

The following table shows the return which may be expected from the storage of one million cubic feet, assuming:—

That the quoted rates are assessed for the irrigation of the crops:

- (1) when the work is first opened, and
- (2) after it has been in operation for some years; that working expenses are at the rate of Rs.2 per acre; and that, respectively, full, three-quarter and half duties are obtained.

ESTIMATE OF REVENUE FROM A STORAGE OF ONE MILLION CUBIC FEET.

1	2	3	4	5	6	7	8	9
		At Origin	nal Rates	L.		At Final	Rates.	
Сгор.	Rate	1	Revenue	,	Rate	R	evenue.	
	per acre.	Full duty.	duty.	duty.	per acre.	Full duty.	duty.	duty
	Rs.	Rs.	Rs.	Rs.	Rs.	Rs.	Rs.	Rs.
1. Perennial	10	10.00	7.50	5.00	16	16.00	12.00	8·co
2. Rice	4	4.00	3.00	2.00	6	6.00	4.20	3.00
3. Monsoon dry	1	1.00	0.75	0.20	1	1.00	0.75	0.20
4. Rabi	3	3.00	2.52	1.20	4	4.00	3.00	2.00
5. Gross revenue		18.00	13.20	0.00		27.00	20.52	13.20
6. Working expenses	2	8.00	6.00	4.00	2	8.00	6.00	4.00
7. Net Revenue	-	10.00	7:50	5.00	_	19.00	14.5	9.50

Applying the rates in force in any locality in this manner, it can be seen what will be the probable revenue from the storage; and, estimating the approximate cost of the storage, the approximate return from the capital expenditure can be obtained.

3. Estimated Amount of Storage for Different Classes of Crops Per Rupse of Assessment.

The following table shows the estimated amount of storage per rupee of assessment required for the different crops. This is deduced from:

(a) The estimated consumption of water utilised for bringing them to maturity, plus the estimated loss by evaporation which occurs from the storage until they are matured; and

(b) the crop rates :--

ESTIMATED AMOUNT OF STORAGE PER RUPEE OF ASSESSMENT.

1	2	3	4	5	6	7	8	9	to
	Qu	antity	of Storag	e Require	d.	At Origi	nal Rates.	At Fir	al Rates.
Crop.	Eva	poratio	on.				Amount	As-	Amount
Сюд	Loss until crop is matured.	Per- cent- age loss	Amount of loss.	Stor- age uti- lised.	Total.	Assess- ment per acre.	Storage per rupee of Assess- ment.	ment	Storage per rupee of Assess- ment.
	Inches.		c. ft.	c. ft.	c. ft.	Rs.	c. ft.	Rs.	c. ft.
r. Perennial	48	46	115,000	325,000	440,000	10	44,000	16	27,500
2. Rice	16	16	40,000	270,000	310,000	4	77,500	6	51,667
Monsoon dry	16	16	40,000	65,000	105,000	i	105,000	1	105,000
4. Rabi	24	22	55,000	90,000	145,000	3	48,333	4	36,250
5. Totals	48 (during year)	100	250,000	750,000	1,000,000	-	_	_	_

The assessments are usually fixed with reference to the value of the crops, and not according to the amount of water which has to be stored for them. The above table shows, on the assumptions made, that under reservoirs the irrigation of valuable perennial crops should be encouraged, while that of monsoon crops should be discouraged so far as revenue and return are concerned. Unless, however, the land is heavily manured, a rotation of crops is necessary, and the return on the capital expenditure must therefore be estimated on the average results from the different crops under cultivation.

APPENDIX 8.

TABLE OF WASTE-WEIR RUNS-OFF.

(Vide Chapter III., paragraph 171.)

I	2	3	4	. 5	6
Increments of Catchment Area.	Run-off from each increment of Catchment Area in col. 1.	Discharge from each increment of Catchment Area in col. 1 due to Run-off.	Discharge from Total Catch- ment Area due to Run-off.	Average Run- off from Total Catchment Area.	Remarks.
Square miles.	Inches per hour.	Cubic feet per second.	Cubic feet per second.	Inches per hour.	
o—1 1—2	3.00 2.64	1,936 1,704	1,936 3,640	3.00 2.82	
2—3 3—4	2·30 2·00	1,490 1,291	5,130 6,421	2·65 2·49	
4—5 5—6	1·85 1·72 1·62	1,194 1,110	7,615 8,725	2·36 2·25 2·16	
6—7 7—8 8—9	1.82 1.45	1,045 981 936	9,770 10,781 11,687	2·08	
910	1.40	903	12,590	1.95	
10—15 15—20	1.00	3,743 3,227	16,333 19,560	1·69 1·51	
20—25 25—80	0.80	2,968 12,907	22,528 35,435	1·40 1·10	
50—75 75—100 `	0.72 0.65	11,565 10,500	47,000 57,500	o·97 0·89	
100—150 150—200	0.60 0.88	19,500 17,000	77,000 94,000	o·8o 0·78	

Col. 3 = Increment of area in Col. 1 \times Col. 2 \times 645.33 cubic feet.

Col. 4 = Sum of entries in Col. 3.

Col. 5 =
$$\frac{\text{Col. 4}}{\text{Last area in Col. 1} \times 645.33}$$
.

Note.—Plate II. shows the entries in Cols. 2 and 5 diagrammatically.

APPENDIX 9.
TABLES OF VALUES OF BAZIN'S COEFFICIENTS.1
(Vide Chapter III., paragraph 172.)
TABLE I.—FOR EARTHEN CHANNELS.

r.	cg.	Mean vel.			Mean vel.			Mean vel.
		Max. vel.	r. 	<i>c</i> 3.	Max. vel.	r.	cy.	Max. vel.
0.02	11.0	.320	2.65	67.8	.728	65	84.8	.770
0.10	16.7	.398	2.40	68.2	.729	6 5 6 6	85°o	.771
0.12	20.3	'446	2.75	68.6	731	6.7	85.3	·771
0.50	23'4	480	2.80	69.0	732	6.8	85.5	.772
0.22	25.9	.506	2.85	69.3	'733	6.9	85.7	.772
0.30	28.3	.528	2.30	69.7	'734	7'0	86·o	.773
0.32	30.4	'545	2.95	70.0	'735	7.1	86.3	.773
0.40	32.3	.261	3.00	70.4	.736	7.2	86.4	774
0.45	34.0	:574	3.05	70.7	.737	73	86.6	.774
o·50 o·55	35'7	.585	3.10	71.0	737	7.4	86.8	.774
0.60	37 ^{.2} 38 [.] 7	.595 .605	3.12	71.4	.738	7.5	87.0	.775
0.65	40.0	.613	3.50	71.7	739	7.6	87.2	775
0.40	41.3	620	3°25 3°30	72.0	740	7.7 7.8	87.4	.776
0.75	426	.627	3.32	72·3 72·6	741	7'9	87.6	776
0.80	43.7	.634	3'40	72.9	.74I .742	8·o	87 [.] 8 88∙o	.776
0.85	44'9	.639	3.45	73.2	743	8.5	88 [.] 4	777
o.3o	459	.645	3.20	73.5	743	8.4	88.7	·778
0.95	46.9	650	3.22	73.7	745	86	89.1	.778
1.00	47.9	.654	3.60	74.0	745	8.8	89'4	.779 .779
1.02	48.9	659	3.65	74.3	746	6.0	89.7	7/9 780
1.10	49.8	.663	3.40	74.6	747	9.5	00.0	·781
1.12	50.7	'667	3.75	74.8	747	9.4	90.3	.781
1,50	51.2	.671	3·8o	75·I	748	<u>9</u> .6	90.6	.782
1.52	52.3	.674	3.85	75'3	749	9.8	90.0	.782
1.30	53°I	.677	3.30	75.6	'749	10.0	91.5	.783
1.35	53'9	·68o	3.92	75.8	.750	10.5	91.4	.783
1.40	54.6	683	4.0 ·	76·1	.750	10'4	91.4	.784
1.45	55.3	.686	4.I	76.5	.752	10.6	91.9	.784
1.20	56.0	689	4.5	77.0	.753	10.8	92.2	785
1·55 1·60	56.7	.691	4'3	77.5	'754	11.0	92.4	·785
1.65	57'4 58'0	694	4'4	77.9	755	11.5	92.6	·785
1.40	58.6	.696 .698	4 [.] 5 4 [.] 6	78·3	.756	11.4	92.8	.786
1.75	59.2	701	40	78.7	757	11.8	93.I	786
1 8o	59.8	703	4 [.] 7 4 [.] 8	79 [.] 1	·758 ·759	12.0	93'3	787
1.85	60.4	705	4'9	79.9	759 760	13.0	93'4	787
1.00	60.9	707	5.0	80.3	.760	14.0	94'4 95'2	.789
1.95	61.5	708	5.1	80.6	.761	15'0	95.9	.791 .793
2 00	62.0	710	5.5	80.0	.762	16.0	95.6	795
2 05	62.5	712	5.3	81·3	.763	17'0	97.2	795
2.10	63.0	714	5.4	81.6	.763	18°0	97.7	798
2.12	63.2	715	5.2	81.0	.764	19.0	98.2	798
2.30	64.0	717	5.6	82.3	765	20'0	9́8·6	·8oo
2.25	64.4	.718	5.7	82.6	.765	25.0	100.3	·804
2.30	64.9	720	5.8	82.9	.766	30.0	101.2	·806
2 35	65.3	721	5.9	83.2	.767	35'0	102.4	.808
2.40	65.8	'722	60	83'4	.767	40.0	103.1	.809
2.45	66.2	723	6.1	83.7	.768	50.0	104.1	.809
2 50	66 6	725	6.2	84.0	.768	70.0	105.5	.810
2·55 2 60	67 o 67 4	726	6·3	84.3	.769	100.0	100.1	.810
	0/4	727	6.4	84.2	.770	Inf.	108.3	.810

¹ Extracted from Higham's "Hydraulic Tables," Nos. III. and IV.

APPENDIX 9.

TABLE II .- FOR MASONRY CHANNELS.

COEFFICIENTS - c.

r.	Class I.	Class II.	Class III.	r.	Class I.	Class II.	Class III.
0.5	125'4	94.8	56.5	3.75	146.0	127.6	105.0
0.20	135.3	108.8	72.0	4.00	146.1	127.8	106.2
0.75	139.1	1150	80.8	4.20	146	128	107
1.00	141'2	118.5	86.7	5.00	146	128	108
1.22	142.4	120.8	90.9	5.20	146	129	109
1.20	143'3	122'4	94.0	6.00	147	129	110
1.75	143'9	123.6	96.5	6.20	147	129	110
2.00	144'4	124'5	98.5	7.00	147	129	110
2.22	144.8	125.2	100.1	7:50	147	129	111
2.20	145'1	125.8	101.2	8.00	147	130	111
2.75	145'4	126.3	102.6	8·50	147	130	112
3.00	145.6	126.7	103.6	9.00	147	130	112
3.22	145'7	127'0	104.2	10.00	147	130	112
3.20	145'9	127.3	105.2	100.00	148	131	116

RATIOS OF MEAN TO MAXIMUM VELOCITY.

7.	Class I.	Class II.	Class III.	r.	Class I.	Class II.	Class III.
3.00 3.00 4.00	o·85 o·85 o·85 o·85	o·83 o·83 o·83 o·83	0.44 0.46 0.80 0.81	5.00 9.00 2.00	o·85 o·85 o·85 o·85	o·83 o·84 o·84 o·84	0.81 0.81 0.82 0.82

Class I.—Bed and sides, fine plastered, planed planks, &c.

- ,, II.—Bed and sides, out stone, brickwork, planking, &c.
- ,, III.—Bed and sides, rubble masonry.

APPENDIX 10.

TABLE OF THE DISCHARGE OF A WASTE-WEIR CHANNEL HAVING A BED WIDTH OF 200 FEET AND A BED SLOPE OF 1 IN 100.

(Vide Chapter III., paragraph 174.)

1	2	3	4	5	6	7	8	9
Total Depth.	Afflux Height, d ₁	Tail Depth, d ₂	Afflux Co- efficient,	Channel Co- efficient,	$\frac{\mathbf{D}}{c_1 b \sqrt{\mathbf{z}}}.$	$\sqrt{d_1} \left(d_2 + \S d_1 \right).$	Mean Velocity of Tail Channel.	Dis- charge, D.
Feet.	Foot.	Feet.					Feet per second.	Cubic Feet per second.
1 2	0°30 0°74	0.40 1.50	0.60 0.60	41.00 25.10	0°495 1°510	0'495 1'505	3'40 5'78	476 1,457
	1.54	1.76	0.60	59.00	2.85	2.87	7.78	2,741
3 ··	1.70	2.30	0.62	64-4	4:47	4.46	9-66	4,444
5 6	2.12	2.85	0.64	68.8	6.34	6.39	11.42	6,510
	2.68	3.37	0.66	72.0	8.29	8-29	18.08	8,784
7 8	3.08	3.92 4.48	0.68	75°0 77'5	10'46 12 '80	10.45 12.84	14.55 16.04	11,407
	3·52	5.02	070	79.5	15.23	15.28	17'41	14,874 17,585
9 10	3.95 4.36	5.64	0.74	81.4	17:87	17·87	18-80	21.210
11	4.77	6.23	0.76	83·1	20.56	20.21	20·II	25,057
12	5 ·17	6.83	0.78	84.6	23.34	23.34	21.38	29,208
13	5.24	7'46	0.80	85.8	26.24	26.50	22.57	33,668
14	6.00	8.00	0.80	86.8	29.44	29.40	23.61	37,775
15 16	6 47 6 94	8·53 9·06	0.80 0.80	87.7 88.6	32·65 86·03	32.61 86.00	24·56 25·51	41,893 46,236
17	7.42	9.58	0.80	89.3	39.47	39.52	26.43	50,645
18	7.86	1014	0.80	90-0	43·10	43.06	27.28	55,304
19	8.33	10.67	0.80	90.4	46.88	46·81	28.10	60,157
20	8.80	11.20	0.80	91.8	50 67	50-63	29.03	65,085
j		I)	1) .]	

NOTES.

2. The channel coefficient c_2 is found from Appendix 9 (I.) with reference to r and not to d_2 of this Appendix. In tail channels of considerable width r is, however, only very slightly less than d_2 .

^{1.} In the Table the afflux coefficient c_1 has been taken approximately. Rankinel gives Poncelot and Lebros' coefficients, which were determined from experiments with sharp-edged rectangular orifices only about 8 inches wide in vertical flat plates, and it is believed none on a large scale have ever been made. The values of c_1 are increased up to a total flood-depth of 13 feet, on account of the more efficient discharging power of a deep channel. No further increase of them is thereafter made, as large waves, and consequently more friction, will be caused. Any errors made by these assumed values will be minimised in the calculations given in Appendices 12, 13 and 14, in the proportion that the discharges of the waste-weir cut bear to the total flood, and this will always be small.

^{1 &}quot;Civil Engineering," 11th ed., art. 448, p. 680.

APPENDIX 11.

TABLE OF THE DISCHARGE FROM EACH FOOT OF LENGTH OF A CLEAR OVERFALL WEIR, IN CUBIC FEET PER SECOND.

(Vide Chapter III., paragraph 176.)

Calculated by the formula:—D = $\frac{2}{3}$ cbd $\sqrt{2gd}$.

Height of still water above weir crest = d.

CUBIC FEET PER SECONI	RECON	PER	FEET	CUBIC
-----------------------	-------	-----	------	-------

F4				I	Decimals	of a Foot	.			
Feet.	.0	·z	'2	•3	-4	•5	-6	.7	•8	.9
o	0.00	0.10	0.58	0.2	0.81	1.14	1.21	1.11	2'34	2.80
1	3.50	3.81	4'35	4.01	5'49	6.00	6.71	7'35	8.01	8.69
2	9.39	10.11	10 85	11.61	12.39	13.10	14.01	14.85	15.41	16.28
3	17'47	18.37	19.29	20.53	21.17	22.13	23.11	24.10	25.11	26.13
3 4 5 6	27.16	28.21	29.27	30.35	31.44	32.25	33.67	34.80	35'94	37.09
5	38.25	39.42	40.60	41.80	43.01	44.53	45.46	46.71	47'97	49.24
6	50.2	51.81	53 11	54.42	55.74	57.07	58.41	59.76	61.13	62.44
7	63.87	65.26	66 66	68.07	69.49	70.92	72.36	73.81	75.27	76.64
7 8	78 22	79.71	81.31	82.72	84 24	85.77	87.31	88.86	90'42	91.08
9	93.55	95.13	96.72	98.32	99.93	101.22	103.18	104.82	106.47	108.12
10	109.78						—	<u>-</u>		

NOTES.

1. The formula $D=\frac{2}{3}\,cbd\,\sqrt{2gd}$, devised by Mr. James B. Francis, was deduced by him from an elaborate series of experiments at Lowell, U.S.A. (Lowell Hydraulic Experiments, New York, 1871) on a sharp-created weir 10 feet long, of the full width of the stream, and with heads varying from 0.4 to 1.6 feet. Further experiments were made by Fteley, Stearns and others, from which Hamilton Smith has derived values for the coefficient c for such weirs varying in length from 2 to 19 feet.

For a 2-feet weir with a depth of 0.10 foot, the coefficient determined was 0.652; with a depth of 0.40 foot the coefficient attained its minimum, 0.636, and then increased gradually to 0.648 with a depth of 1.00 foot, the maximum depth of the experiments with this length of weir. The intermediate observations varied proportionally.

For a 19-feet weir with a depth of 0·10 foot, the coefficient was 0·657; with a depth of 0·70 foot the coefficient attained its minimum, 0·618, and then increased gradually to 0·623 with a depth of 1·60 feet, the maximum depth of the experiments with this length of weir. The intermediate observations varied proportionally.

¹ Vide Table No. 42, p. 220 of "Public Water Supplies," by Turneaure and Russell. Chapman and Hall, 1st ed., 1907.

2. Generally in tables for the discharges of gauging weirs constructed on Francis' formula the value of the coefficient o adopted is 0.512 throughout, although that given in Molesworth's Pocket Book is calculated with the value of o as 0.67 throughout. Judging from the above experiments, from the analogy of Bazin's coefficient (Appendix 9) and from general considerations, the coefficient must increase slightly as the depth of the discharge increases (vide also the note to Appendix 10).

It is believed that, owing to the practical difficulty of gauging flows of great depth, experiments for determining their coefficients have never been made.

3. The Table given above has therefore been constructed in the following manner. The coefficients adopted were:—

Depths in Feet.	Coefficients.	Depths in Feet.	Coefficients.	Depths in Feet.	Coefficients.	Depths in Feet.	Coefficients.
0.00 0.50 1.00 1.50 2.00	o·600 o·605 o·610 o·615 o·620	2·50 3·50 4·00 4·50	o·623 o·625 o·628 o·63o o·633	5.00 5.20 6.00 6.20 7.00	o·635 o·638 o·640 o 642 o·644	7·50 8·50 8·50 9·00 9·50	o·646 o·647 o·649 o·650 o·650

The results thus obtained were afterwards slightly adjusted so as to get a series of discharges differing regularly from each other, and these were thereafter tabulated.

4. It must be remembered that the experiments quoted above were made on sharp-crested weirs, and therefore their results do not hold good for waste-weir walls as constructed in practice, which walls have crests of appreciable width.

Experiments¹ were made at the Cornell University Hydraulic Laboratory, U.S.A., by Rafter and Williams, with weirs of different sections, 6.58 feet long and from 4.6 to 4.9 feet high, free access being provided for the air beneath the sheet of water. Unfortunately the sections experimented with were not similar to those which are adopted in India for waste-weir walls. The following are the coefficients ascertained for weirs with vertical sides and horizontal crests, which are the ones nearest to the usual Indian section.

COEFFICIENTS.

Width of Weir Crest in Feet.		Height of Still Water above Weir Crest in Feet.							
	2.0	2.2	3,0	3*5	40	4*5	5,0		
2·62 6·56	0.23	0°54 0°46	0°57 0°47	o·59 o·47	0.62 0.48	0·65 0·49	0.20		

The Table given in this Appendix will therefore be fairly exact for weirs having level crests with widths of from 3 feet to 4 feet and downstream batters of 1 in 4 (which will be the ones generally constructed in connection with storage reservoirs), and, especially, in the case of depths of water of from 5 feet to 6 feet, which will usually be the maximum flood depths on them.

5. The larger coefficients of discharge over a sharp-crested than over a broadcrested weir point to the desirability of forming a waste-weir wall with a sharp crest. This can be done by fixing an angle iron on the upstream side of the top of the wall and by bevelling that top downstream. A considerable increase of storage or shortening of the waste-weir can thus be effected.

¹ Vide Table No. 45, p. 224 of "Public Water Supplies," by Turneaure and Russell. Chapman and Hall, 1st ed., 1907.

APPENDIX 12.


MÁLÁDEVI TANK PROJECT.

TEMPORARY WASTE-WEIR FLOOD CALCULATIONS.—FIRST CLOSURE.

Table of Open Channel Discharges and Reservoir
Flood-Absorption.

(Vide Chapter II., paragraph 137.)

SECTION OF OPEN CHANNEL.

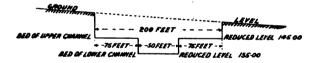

Data.

The flood to commence when the channel is discharging at the rate of 5,300 cubic feet per second, or at the rate of about $\frac{1}{18}$ inch per hour run-off, which is a fair, small flood. To pass this discharge the total flood depth of the 50-foot channel will have to be 10 feet deep, so that the calculations will begin from Reduced Level 145.00. The rise of the reservoir surface level thereafter to be that due to a run-off at the rate of about 0.5 inch per hour from the catchment of 153 square miles.

In the first hour the reservoir will thus have to rise 4 feet; in the second hour, 3 feet; in the third hour, 2 feet; and, afterwards, 1 foot per hour, to deal with the assumed intensity of the flood.

The quantities discharged by the channel are calculated out foot by foot during the periods of rise.

e go	At the	end of eac	ch hour.		r	uring the ho	ur.	
Number of hours from Commencement of Flood.	Reduced Level of Reservoir Surface.	Height of Reservoir Surface above Bed of Lower Channel.	Height of Reservoir Surface above Bed of Upper Channel.	Total Discharge of Lower Channel.	Total Discharge of Upper Channel.	Increment of Reservoir Storage (or Flood Absorp- tion).	Total Flood dealt with. (Col. 5 + Col. 6 + Col. 7.)	Equivalent Run-off (of Col. 8) from Catchment.
1	2	3	4	5	6	7	8	9
		Feet.	Feet.	Million Cub. Feet.	Million Cub. Feet.	Million Cub. Feet.	Million Cub. Feet.	Inches.
,{	146'00 147'00 148'00	11 12 13 14	1 2 3 4	5°205 6°104 7°073 8°037	0°161 0°653 1°417 2°425	29°086 30°660 32°281 33°944	157.046	0.44
2 {	150°CO 151°OO 152°OO	15 16 17 18	4 5 6 7 8	11°950 13°219 14°532	4*929 6*882 9*085	35.643 37.383 39.164	172'787	0'49
3{	153°CO 154°OO	18	8	23 [.] 838 25 [.] 979	17.646 21.814	40'994 42'865	} 173'136	0.49
4 5 6 7 8	155'00	20 21	10	56'336 60'750	52'375 62'459	44'77I 46'746	153'482 169'955	o'43 o'48
6	157 00	22	12	65 250	73'008	48 792	187'050	o.23 o.28
7	159'00	23 24	13	69°250 74°250	84 [.] 877 96 [.] 447	50'88't 53'015	205'008	o.23
9	100,00	25	15	78.750	107.22	55,165	- 241,464	0.68
		Totals		520'523	541'730	621'417	1,683.670	4'75
Add	total of	Column 5			520'523			
Tota	l Discha	rge of Cha	nnels		1,062.253	,		
Perc	entage q	uantities			63.00	36.01	100'00	
Add	total Hi	gh-Flood l	Discharge		at Reduced L 60'00 for 15 h			8-19
		1	Total Run	off dealt with	n in 24 hours			12'94

The calculations thus show that with the open temporary waste-weir channel the Reservoir High-Flood Level will not rise above Reduced Level 160.00. At this level the discharge of the channel is 53,920 cubic feet per second, which is equal to a run-off of 0.546 inch per hour from the catchment of 153 square miles.

APPENDIX 13.


MÁLÁDEVI TANK PROJECT.

TEMPORARY WASTE-WEIR FLOOD CALCULATIONS—SECOND CLOSURE.

Table of Outlet Headwall Discharges and Reservoir Flood-Absorption.

(Vide Chapter II., paragraph 138.)

SECTION OF OUTLET HEADWALL.

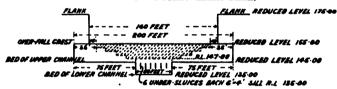

Data.

The flood to commence when the crest is flowing 4 feet deep, i.e., is discharging 5,706 cubic feet per second, or at the rate of about $\frac{1}{17}$ inch per hour run-off, which is a fair, small flood.

The reservoir surface will therefore be at Reduced Level 159.00 at the commencement. The rise of the reservoir surface level thereafter to be that due to a run-off at the rate of about 0.5 inch per hour from the catchment of 153.00 square miles.

In the first and second hours, the Reservoir will thus have to rise 2 feet per hour, and, subsequently, 1 foot per hour, to deal with the assumed intensity of the flood.

The quantities discharged by the Headwall, &c., are calculated out foot by foot during the period of rise.

Note.

In construction the Headwall crest should be finished off with a central gap—as shown by dotted lines—so as to give it a greater discharging power, to deal with the flood earlier, and to lessen the action of the flood on the foundations.

, pt	At the end of each hour.		During the hour.				
Number of hours from Commencement of Flood.	Reduced Level of Reservoir Surface.	Height of Reservoir Surface above Headwall Crest.	Total Discharge of Headwall Crest.	Total Discharge of Under-sluices.	Increment of Reservoir Storage (or Flood- Absorption).	Total Flood dealt with. (Col. 4 + Col. 5 + Col. 6).	Equivalent Run-off (of Column 1) from Catchment.
1	2	3	4	5	6	7	8
		Feet.	Million Cubic Feet.	Million Cubic Feet.	Million Cubic Feet.	Million Cubic Feet.	Inches.
Add tota Total Ou	160'00 161'00 162'00 163'00 163'00 165'00 166'00 168'00 168'00 Totals I of Column telet Headwa	•	12*311 17*011 21*324 26*417 63*725 75*308 87*725 100*310 113*650 127*530 645*311	6'635 6'635 6'635 6'635 13'478 13'687 13'687 13'882 14'101 14'301 109'695 645'311 755'006	55' 192 57' 413 59' 711 61' 986 64' 338 66' 734 69' 391 72' 339 75' 336 78' 396 660' 846	155'197 182'708 141'541 155'729 170'803 186'531 203'087 220'236 1,415'832	0°44 0°51 0°40 0°44 0°48 0°52 0°57 0°62 3°98
Add total Outlet Headwall Discharge for 16 hours							6.41
Total Run-off dealt with in 24 hours							10.60

By calculation it is ascertained that the discharge of the tail channels when flowing level with the crest of the Headwall (Reduced Level 155.00) will be about 80,000 cubic feet per second. As the maximum discharge to be dealt with is only 49,367 cubic feet per second, (due to a run-off of 0.5 inch from the catchment), the Headwall will thus discharge throughout as a Clear Overfall Weir.

To determine the discharge of the Under-sluices, the approximate effective head on them is first calculated, i.e., the difference between the surface of the Reservoir upstream and that of the Tail Channel downstream. This latter is deduced from Appendix 10.

The calculations thus show that with the Outlet Headwall crest constructed as shown by the full line (much more so when built as shown by the dotted lines), the Reservoir High-Flood Level will not rise above Reduced Level 169.00. At this level the discharge of the Headwall and Under sluices is 41,424 cubic feet per second, which is equal to a run-off of 0.42 inch per hour from the catchment of 153 square miles.


APPENDIX 14.

MÁLÁDEVI TANK PROJECT.

PERMANENT WASTE-WEIR FLOOD CALCULATIONS.—TABLE OF WASTE-WEIR DISCHARGES AND RESERVOIR FLOOD-ABSORPTION.

(Vide Chapter III., paragraph 193.)

FLOOD SECTION OF WEIR.

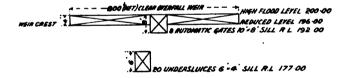

Data.

The flood to commence when the reservoir level has risen 10 feet above the sills of the under-sluices, *i.e.*, to Reduced Level 187.00. Its initial amount will thus be 7,600 cubic feet per second, or at the rate of about $\frac{1}{18}$ th inch per hour run-off, which is a fair, small flood.

All sluices (except the automatic gates) to be fully open and the weir crest unobstructed. The Reservoir surface to rise 1 foot per hour.

These calculations do not take into account the discharge from the Outlet sluices, which will vary from 6,221 to 7,027 cubic feet per second, or from 0.06 to 0.07 inch per hour run-off, during the period considered.

ent	At the end		During the hour.								
Number of hours from Commencement of Flood.	Reduced Level of Reservoir Surface.	Height of Reservoir Surface above Bed of Waste-Weir Tail Channel.	Total Discharge of Under-sluices. Total Discharge of Waste-Weir		Increment of Reservoir Storage (or Flood. Absorption).	Total Flood dealt with. (Col. 4 + Col. 5 + Col. 6.)	Equivalent Run-off (of Column 7) from Catchment.				
1	2	3	4	5	6	7	8				
		Feet.	Million Cubic Feet.	Million Cubic Feet.	Million Cubic Feet.	Million Cubic Feet.	Inches.				
1 2 3 4 5 6 7 8 9 10 11 12 13	188'00 189'00 190'00 191'00 192'00 193'00 195'00 196'00 197'00 198'00 199'00	11 12 13 14 15 16 17 18 1 19 20 21 22 2 23	28'440 30'420 32'220 33'840 35'280 36'720 38'160 39'600 41'040 42'480 43'200 43'200	5'137 19'656 41'209 67'777	128*438 130*886 133*357 135*747 138*028 140*328 140*328 144*985 147*356 149*733 152*128 154*555 157*002	156'878 161'306 165'577 169'587 173'308 177'048 180'806 184'585 188'396 197'350 214'984 238'964 267'979	o'44 o'45 o'47 o'48 o'59 o'51 o'52 o'53 o'55 o'60 o'67				
	Totals		487*800	133'779	1,855*189	2,476'768	6'96				
Add to	tal of Columi	14	•••	487.800							
Total V	Vaste-Weir I	vischarge		621.249							
Percent	tage quantiti	es		25,10	74.92	100,00					
	al Waste-Wei itic gates)	r High-Fl	ood Level Di	scharge for 1:	hours (inclu	ding auto-	4°60				
		Total Run	-off dealt with	in 24 hours			11.26				

To determine the discharge of the Under-sluices, the approximate effective head on them is first calculated, i.e., the difference between the surface of the Reservoir upstream and that of the Tail Channel down-This latter is deduced from Appendix 10.

At first the sluices have partly drowned and partly clear openings, and finally, wholly drowned openings.

¹ Masonry crest of Waste-Weir Wall.
² At Reduced Level 200-00 the automatic gates come into action and the total Waste-Weir discharge becomes 41,224 cubic feet per second, or, at the rate of 0.418 inch per hour run-off from the catchment of 153 square miles.

APPENDIX 15. RECAPITULATION OF MÁLÁDEVI TANK PROJECT.

(Vide Chapter V., paragraph 244.)

	I				2	3		
•	. Itens.							
I.	Works.							
1. <i>l</i>	leadworks.				ĺ	Į		
Preliminary expenses—s	urvey, gaugi	ng, &c.	•••	•••		expenditure to ritten off.		
2	. Land.							
Compensation for acquis	ition	•••	•••	•••		75,000		
3. Ma	sonry Works.							
Waste-Weir	••• •••	•••	•••	•••	1,56,007			
Outlet	•••	•••	•••	•••	1,22,372	2,78,379		
4	Buildings.							
Bungalow and outhouses		•••	•••		6,727	1		
Overseers' quarters	•••	•••	•••		1,121			
Watchmen's quarters		•••	•••		1,052	1		
Temporary buildings	•••	•••	•••	•••	1,100	10,000		
5. <i>E</i>	Earthwork.							
Dam embankment, pitch	ing, puddle t Plantation.	rench,	&c.			8,46,954		
Planting and preserving	rees around	the Re	servoi	r		5,000		
	iscellaneous.					-		
Maintenance during cons Boat and boat-house	truction	•••	•••		10,000	11,000		
Total I	Works					12,26,333		
II. Est	ABLISHMENT		•••			12,20,000		
Construction Establishm cost of the project ex	ent (at 18 j clusive of l	per cer and ch	at. on arges	the -i.e.,				
on Rs. 11,51,333)	•••	•••	•••	. •••	2,07,240			
Direction and accounts (a	at 5 per cent.	on di	tto, di	itto)	57,560	j.		
	I. Establ		ent			2,64,800		
Tools and Plant (at 51 per			_1ece 1	and l				
charges) say:—		•••	•••		•••	58,000		
A. Tota	al Direct	Char	ges		•••	15,49,183		
IV. Suspense (not Aff	ECTING CHA	RGES T	O GRA	NT).				
Capitalisation of abateme Leave and pension allo				on	75,000			
II. ESTABLISHMENT)		•••	•••	[37,100			
Interest on I. Works (at				ndi-		ł		
ture and 4 per cent. on	previous exp	enditur	re ²)	•••	1,22,600			
B. <i>Tota</i>	ıl Indirec	t Cha	rge s	'	•••	2,34,700		
Grand Total, Direc	ct and In	direc	t Cha	ırge	s	17,83,833		
						, ,		

¹ An extra allowance beyond the usual one of 1½ per cent. has been made to provide for the large amount of plant necessary.

² The work is estimated to take 5 years for completion; hence the interest charges amount to 2 per cent. for 5 years on the whole sum at charge.

APPENDIX 16.

ABSTRACT ESTIMATE OF MALADEVI TANK PROJECT.

(Vide Chapter V., paragraph 244.)

1	2	3	4	5	6	7
Quantity.	Unit.	Items.	Rate.	Per.	Amount.	Remarks.
		I. DAM EMBANKMENT. 1. Puddle Trench.	Rs. A. P.		Rs.	
1,140,841 182,495 23,803 27,495	Cft.	Excavation in soil 1 Ditto in murum 1 Ditto in rock 1 Ditto rock in puddle	1 8 0 1 8 0 4 0 0	100 "	17,113 2,737 952	
106,675 1,347,139 213,350 4,219	,, Rft.	trench drain 1 Ditto nulla puddle trench I Filling dam puddle trench Ditto nulla ", Puddle trench drain, ex-	6 0 0 0 12 0 1 4 0 1 0 0	11 11 11	1,650 800 16,839 2,134	
,, ,		cavation and filling Add conting	I O O Total encies at 5 per	cent.	4,219 46,444 2,322	
18,361 50,386 17,358	Cft.	2. Central Wall. Excavation in rock 1 Concrete Masonry facing:	3 0 0 15 0 0 32 0 0	Rs.	48,766 551 7,558 5,555	
,,,,,		Add conting	Total encies at 5 per	Rs.	13,664	
		3. Drainage Works. (a) Foundation, Surface, and Cross Drains.	Grand Total	Rs.	14,347	
610,012 235,860 188,280	Cft "	Excavation in soil 1 Filling with clay Ditto gravel	0 8 0 0 12 0 2 0 0	100	3,050 1,769 3,766	_
			Total (a) Rs.	8,585	

¹ In all estimates the rates for excavation are reduced by the value of the material to constructional items (dam, drystone, toe, &c.), where full rates are allowed.

ESTIMATE—continued.

I	2	3	4	5	6	7	
Quantity.	Unit.	Items.	Rate.	Per.	Amount.	Remarks.	
		I. DAM EMBANKMENT.— continued.	Rs. A. P.		Rs.		
492,844 492,844 210	Cft. Rft.	(b) Downstream Drain. Excavation in soil Filling Rear drain below dam	0 12 0 2 0 0 1 0 0	100 Rft.	3,896 9,857 210		
		Add conting	To:al (b) Total (a) + (b) rencies at 5 per	Rs.	13,963 22,548 1,127		
		4. Drystone Toe.	Grand Total	Rs.	23,675		
51,331 68,533 553,383 4,161,473	Cft. " "	Excavation in rock 1 Excavation in soil 1 Concrete Drystone	3 0 0 0 4 0 15 0 0 4 0 0	100 " "	1,540 171 83,007 1,66,459		
		Add conting	Total encies at 5 per		2,51,177 12,559		
		Dan Embanhmant	Grand Total	Rs.	2,63,735		
26,836,904 34,822 187,081 191,855 20,935	Cft. Sft. "	5. Dam Embankment. Embankment Pitching 12" thick Ditto 12" to 18" thick Ditto 18" thick Ditto 24" thick	1 8 0 6 0 0 8 0 0 10 0 0 15 0 0	100	4,02,553 2,089 14,966 19,186 3,140		
,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,		Add conting	Total encies at 5 per	Rs. cent.	4,41,934 22,097		
			Grand Total	Rs.	4,64,031		
76,657 36,516 4,296	Cft. Rřt.	6. Masonry Wall at Top. Coursed rubble masonry Concrete Coping, extra	22 0 0 16 0 0 0 8 0	roo Rft.	16,865 5,843 2,148		
		Add conting	Total encies at 5 per		24,856 1,243		
		7. Miscellaneous.	Grand Total	Rs.	26,099		
		Road to bungalow from Rambhori Works roads Sundries	Lump Ditto • Ditto		2,100 2,100 2,100		
			Grand Total		6,300		
Grand Total - I. Dam Embankment Rs. 8,46,954							

¹ See note on p. 333.

APPENDIX 16.

ESTIMATE—continued.

	, 2	3	4	5	6	7
Quantity.	Unit.	Items.	Rate.	Per.	Amount.	Remarks.
71,197 37,895 22,729 3,275 1,493	Cft.	II. WASTE-WEIR. A. Clear Overfall Section. Excavation in soil and murum 1 Concrete Masonry facing Block-in-course masonry Cornice	0 12 15 0 32 0 50 0	o 100 0 " 0 " 0 Rft.	7534 5,684 7,273 1,638 1,493	
		Add contin	gencies at 5 pe		831	
			Grand Tol	al Rs.	17,453	
42,136 37,929 32,780 57,188 17,192 2,205 16,348 2,821 263 80 562 522 130 20	Cft. " " " " " No. Rft. Cwt. No.		1 8 6 4 0 6 15 0 6 50 0 6 60 0 6 70 0 6 60 0 6 8 0 6 1 0 6 4 0 6	Each Rft. Cwt. Cft. Each Rs. cent.	562 2,088 520	
18,736 5.350 5.787 15.367 5,925 3,949 706 144 8	Cft. "" "" "Rft. No.	C. Automatic Gate Section. Excavation in murum 1 Ditto in soft rock 1 Ditto in hard rock 1 Concrete Block-in-course masonry Arching Cornice Automatic gates, 10' × 8'	0 8 0 1 8 0 4 0 0 32 0 0 50 0 0 55 0 0 1,800 0 0 Tota encies at 5 per	Rft. Each Rs.	94 80 231 2,305 1,896 1,960 388 144 14.400 21,498 1,075	

¹ See note on p. 333.

APPENDIX 16.

ESTIMATE—continued.

1	2	3	4	5	6	7
Quantity.	Unit.	Items.	Rate.	Per.	Amount.	Remarks.
		II. WASTE-WEIR-contd.	Rs. A. P.		Rs.	
		D. Arcade Footpath.				į
3,269 17,179 5,223 1,020 160 1,035	Cft. " No. Cft. No.	Concrete Block-in-course masonry Arching Corbels Cut- and ease-water caps Cut teak woodwork Travelling winches Tramway	15 0 0 32 0 0 55 0 0 60 0 0 5 0 0 4 0 0 250 0 0 Lump.	Each Cft. Each	490 5,497 2,873 612 800 4,140 500 1,500	
		Add conting	Rs.	16,412 821		
			Grand Total	Rs.	17,233	
82,094 17,671 12,162	Cft.	E. Protective Works. Excavation in soil 1 Ditto in soft rock 1 Ditto in hard rock 1	0 8 0 1 8 0 5 0 0	100	410 265 608	
38,372 20,522 27,913	"	Concrete Coursed rubble masonry, 1st sort Ditto, 2nd sort Protective bank near Rambhori	15 0 0 32 0 0 24 0 0 Lump	"	5,757 6,567 6,699 800	
		Add conting	Total gencies at 5 per	Rs. cent.	21,106 1,055	
			Grand Total	Rs.	22,161	
		F. Approach and Tail Channels.				
3,916,853 327,600	Cft.	Excavation in soil 1 Embankment	0 6 0 0 6 0	100	14,688	
		Add conting	Total gencies at 5 per	Rs. cent.	15,916 796	
			Grand Total	Rs.	16,712	
	Gı	rand Total—II. Was	te-Weir	Rs.	1,56,007	

¹ See note on p. 333.

ESTIMATE-concluded.

I	2	3	4	5	6	7
Quantity.	Unit.	Items.	Rate.	Per.	Amount.	Remarks.
		III. OUTLET.1	Rs. A. P.		Rs.	
297.737 31,703 106,800 292,562 87,683 2,569 3,193 2,235 387 84,303 6 2,182,500 569,637 10,968 1,360 2	Cft. "" " " " " " " " " " " " " " " " " "	Turbine sluices Turbine pipes Add conting Grand Total—III. IV. Buildings. Bungalow Out-houses Overseers' Quarters Watchmen's Quarters Temporary Buildings	 	cent.	8,184 8,545 658 326 1,400 2,375 1,16.545 5,827 1,22,872 4.893 1,834 1,121 1,052 1,100	
	G	and Total—IV. Bui	aings	KS.	10,000	

¹ This estimate provides for all work in the 200 feet length occupied by the temporary Waste-Weir Channel.

² See note on p. 333.

APPENDIX 17.

MÁLADEVI TANK PROJECT.

TABLE OF RESERVOIR CONTENTS AT EACH CONTOUR.

(Vide Chapter I., paragraph 21.)

I	2 3 4 5		5	6	
Reduced level of Contour.	Square root of area of Contour.	Area of Contour.	Contents between successive Contours.	Contents up to each Contour.	Remarks
		Square feet.	Cubic feet.	Cubic feet.	
185	4,828	18,781,584	_		Outlet sill.
136	4,427	19,598,320	19,163,320	19,163,320	
137	4,527	20,493,729	20,044,359	39,207,679	
138	4,626	21,399,876	20,945,169	60,152,848	
139	4,725	22,325,625	21,861,117	82,013,965	
140	4,825	23,280,625	22,801,458	104,815,423	l
141	4,924	24,245,776	23,761,567	128,576,990	
142	5,023	25,230,529	24,736,519	153,313,509	ŀ
143	5,122	26,234,884	25,731,073	179,044,582	
144	5,222	27,260,284	26,747,417	205,791,999	
146	5,321	28,313,041	27,786,529	233,578,528	
146	5,465	29,866,225	29,086,177	262,664,705	
147	5,609	31,460,881	30,660,097	293,324,802	
148	5,754	33,108,516	32,281,194	325,605,996	
149	5,898	34,786,404	33,944,004	359,550,000	
150	6,042	36,505,764	35,642,628	395,192,628	1
151	6,186	38,266,596	37,382,724	432,575,352	Ī
152	6,330	40,068,900	39,164,292	471,739,644	
153	6,475	41,925,625	40,993,758	512,733,402	1
I 54	6,619	43,811,161	42,864,937	555,598,339	
155	6,763	45,788,169	44,771,209	600,369,548	1
•	•	*	•	• _	(Sill of waste-weir
177	10,203	104,101,209	103,013,304	2,202,486,148	under-sluices.
•_	*		•	l . •	Masonry crest of
196	12,188	148,547,344	147,356,121	4,498,935,205	waste-weir wall.
•	*				H.F.L. and F.S.L.
200	12,579	158,231,241	157,001,700	5,112,353.401	Crest of teak shutters.

NOTES.

 Surveyed contours, &c., are shown in heavy type figures.
 Interpolated contours, &c., are shown in light type figures.
 The table is constructed on the assumption that the square roots of the areas of the interpolated contours between the surveyed ones are in arithmetical progression.

APPENDIX 18.

SPECIFICATIONS FOR THE PUDDLE TRENCH, DAM EMBANKMENT AND PITCHING.

(Vide Chapter V., paragraph 245.)

INDEX TO CLAUSES.

	IND	ĽA	. TO CL	A	DED.			
							to	leferences Chapter II.
1	Comount						Para.	Page
1.	General	•	•	•	•	• 1		
	I. Tr	IE	Puddle	Tr	ench.			
2.	Position and Extent		•				85, 89	98, 103
3.	Depth		•		•		86	99
4.	Side-slopes		•				88	102
5.	Bottom-width .		•		•		87	101
6.	Key Trench		•				94	108
7.	River Crossing: Concret	æ T	Wall				95	109
8.	Minor Drainage Crossing	gs			•	•	95	110
9.	Springs in the Trench		•		•	•	92	107
10.	Material for Filling.						92	105
11.	Method of Filling .		•			88,	90, 92	103, 105
12.	Puddle Trench Drain		•		•		97	111
	II. THE F	טס'	NDATION	OF	тне Г	AM.		
13.	Clearance of Site .						113	134
14.	Foundation Benches and	T	renches			11	2. 113	132, 134
15.	The Surface Drain .						107	123
16.	The Downstream Drain						107	124
17.	Rear Drains						108	126
18.	General		•		•	•		
	III. The Su	PER	STRUCTU	RE	OF THE	D	M.	
19.	The Sections of the Dam	1	_		_		65	74
	The Material of the Dam		-			. 7	981	91—96
	Spreading and Mixing						118	138
	Consolidation	:	•			.11	19, 122	139, 143
		•	-	-	•		z 2	•
							44 4	-

·	II. THE SUPERSTE	RU OTU R	e of th	ie I)_w_	conti	rued.	to Ch	erences apter II.
	TTT				•			Para. 117	Page 137
	Thickness of Lay						•	120	142
	Slopes of Layers							121	143
26.	Testing the Cons	tructio	on of tl	he I	Oam			125	146
	Junctions of Ear				•		•	123	144
28.	Finishing off the	Emba	nkmen	t			•	124	145
	Excavations for						•	102	118
			IV.	Piro	HING.				
30.	The Extent and	Thick	ness of	the	Pitch	ing		154	176
31.	The Stone .	•	•		•				. —
32.	Laying		•			•		153	175
33.	Foundation and	Top C	ourses			•		155	177
		,	V. Mıs	CEL	LANEO	U8.			
34.	The Berm .	•					•	76	87
3 5.	The Drystone T	oes					.128	, 129	151, 152
36.	The Toe Wall							77	89
37.	The Crest Wall							70	80

SPECIFICATION FOR EARTHEN DAMS.

1. General.—The dam is to consist of an earthen embankment with puddle and concrete trenches, as shown on the drawings. It is to be faced with pitching on the water-slope and to be provided with an outlet (s) and waste-weir (s). All works in connection with it shall be executed in strict accordance with the plans, estimates, and these specifications except when written orders by the Engineer permit deviations from them to be made. Only the best materials and the soundest form of construction shall be permitted, and everything shall be executed in a thoroughly workmanlike way.

The following specifications proceed in the order in which the works will be carried out:—

I. THE PUDDLE TRENCH.

2. Position and Extent.—The puddle trench shall be excavated continuously along the centre line of the dam and shall extend from the high-flood margin on one bank to that on the other bank.

3. Depth.—The trench shall be excavated until sound rock, or impervious soil, is met with, and shall be carried into it for a minimum depth of 1 foot. It shall not be filled until it has been passed by the Engineer himself, who shall carefully consider, by taking into account the nature of the subsoils passed through and the full-supply pressure head of the reservoir, whether the depth is sufficient to ensure the staunchness of the work. As a general guide it may be stated that, where sound rock is not met with but compact subsoils exist, the depth of the trench shall not be less than half the full-supply pressure head of the reservoir at the point considered, and, where the subsoils are less compact, the depth shall not be less than that pressure head. In both these cases the bottom of the puddle trench shall be carried for at least one-tenth of that pressure head into sound, retentive, clayey material which shall extend well below it.

The puddle trench shall not be continued below the foundation of the outlet culvert, but, if that is crossed at a lower level, shall there be replaced by a concrete trench well keyed into the puddle at its flanks.

The puddle trench shall be replaced by a concrete trench when the pressure head is great and the sub-strata are of fissured, hard material, as the Engineer by written order may direct. The concrete shall be laid and consolidated as specified in clause 6.

- 4. Side-slopes.—The ratio of the side-slopes shall be determined by the Engineer from a consideration of the nature of the soils through which the trench passes, but in no case shall it be less than 1 in 8 in rock, nor less than 1 in 4 in soils, nor greater than is necessary to ensure the stability of the sides of the trench until it is filled in, and the sufficiency of the thickness of the filling. The side-slopes shall be steepest at the base and flattest at ground level, and nowhere shall the sides be taken out vertically. Shoring shall not be resorted to if it can possibly be avoided, but, where it is necessary, it shall be made in short lengths with slopes battering not less than 1 in 8, and the trench shall be rapidly filled in.
- 5. Bottom-width.—The bottom-width of the trench shall not be less than one-eighth of the full-supply pressure head plus 3 feet, nor less than 6 feet. It shall be taken out level in cross section, except where a key trench shall be ordered (clause 6), and shall not have any vertical steps in longitudinal section, all changes of level being effected by gentle slopes.

- 6. Key Trench.—If there is fissured rock at the bed of the puddle trench, a key trench, not less than 3 feet wide, shall be excavated along the centre line of the dam, and shall extend, both vertically and horizontally, into sound rock. It shall be filled with fine rich concrete in well-rammed 4-inch layers constructed at once, one on top of the other, until the whole key trench is completed, and on this filling a concrete wall shall be carried up at least 2 feet above the bed of the main trench, and shall be finished off with battering sides and a smooth, rounded top.
- 7. River Crossing-Concrete Wall.-At the river crossing the puddle trench shall be replaced by a concrete wall of which the foundations shall be carried at least 2 feet into perfectly sound, unfissured rock, and the superstructure shall be raised to a height not less than one-eighth of the full-supply pressure head. superstructure shall have its sides faced with masonry, and these shall batter not less than 1 in 8; its top shall not be less than 6 feet wide and shall be finished off with a longitudinal key recess to secure proper union with the embankment. The concrete wall shall be continued well into the natural banks of the river, and shall be keyed well into the puddle trench, which shall be thickened out to overlap it on both sides for a length not less than one-quarter of the full-supply pressure head. The concrete wall shall be constructed with smooth sides, plastered upstream with mortar or luted with clay, and small vertical pilasters and recesses shall be formed on its upstream side so as to make it key thoroughly with the earthwork of the dam. On the downstream side of this wall shall be constructed a drain leading to the rear drain (clause 17).
- 8. Minor Drainage Crossings—At these the puddle trench shall be deepened and widened, or shall have a key trench constructed at its base, or shall be replaced by a concrete wall, as the Engineer shall direct in writing after taking into consideration the depth of the full-supply pressure head and the nature of the subsoils.
- 9. Springs in the Trench.—All large springs in the trench shall be led in pipes to its downstream side, and shall be carried up with the trench filling. When the trench filling has reached a sufficient height, the pipes shall be carefully plugged with fine cement mortar. Small quantities of water shall be carefully drained off so as not to affect the filling of the trench in any way.
 - 10. Material for Filling.—The material to be employed for

filling shall be the most retentive clay procurable within one-half a mile of the site: it shall be quite free from vegetable or slushy matter and earth impregnated with salt, and shall not be liable to deterioration by the infiltration of water. It shall not be mixed with gritty soils or with sand, and shall be only slightly damp.

11. Method of Filling. Just before filling is commenced, the aides and bottom of the trench shall be slightly roughened, so that the new material may unite perfectly with the natural soil. Where the bed of the trench is in rock or other hard material, it shall be swept and washed free from dust, &c. The bed thus prepared, shall be wetted and the first layer of the filling material, which shall have been made into stiff plastic balls, shall be thrown on to the bed and trodden so as to secure a perfect junction with it. The rest of the filling shall be constructed in layers not exceeding 3 inches in thickness, and these shall be smoothened and then thoroughly consolidated by ramming or by rolling with heavy rollers, so as completely to fill the trench from side to side; after its completion, each layer shall be wetted slightly to receive and unite with the The material of the filling shall be only slightly damp, and all clods in it shall be broken up. The surface of the layers shall rise downstream at an inclination of about 1 in 6. At vertical and horizontal intervals and breaking joint with each other shall be excavated wedge-shaped trenches, 3 feet wide at top and 1 foot deep, and these shall be refilled with the clayey material and thoroughly rammed before the upper layers are constructed.

Where sand pockets occur at the upstream side of the trench, they shall be excavated out just before the filling reaches them, and the filling shall be thoroughly worked into the cavities thus formed. If much sand is met with, the trench shall be widened on the upstream side to such extent as the Engineer may direct.

The filling shall be continued until the trench is completely filled, and up to 2 feet above ground surface; this upper part shall be constructed together with the embankment on each side, and thereafter the embankment shall be carried uniformly over it. If the construction of the embankment is not at once to be undertaken, the puddle shall be covered over with 2 feet of soil to prevent it from cracking—for the same reason the layers of the puddle trench filling shall be constructed, one on the top of the other, as rapidly as possible. Should, however, cracks

appear, the defective layers shall at once be cut out and properly remade.

12. Puddle Trench Drain.—When such a drain has been designed, it shall be carefully constructed of the specified dimensions in a trench excavated in the main bed of the puddle trench and founded throughout on an unvielding foundation, and shall have a continuous longitudinal slope to its outfall, which shall be continued across all depressions in the puddle trench. The side walls and covering slabs shall be constructed of as long stones as possible, laid in mortar, with half-inch dry joints at intervals of 5 feet intermediate with each other at the top and sides. The whole shall be surrounded with dry material (in accordance with the detailed drawing), and this shall be carefully covered with the material of the trench filling for a depth not exceeding 3 feet. After the whole drain has been completed, it shall be tested with water to see that it is perfectly free from obstructions, and, when this has been proved to be the case, the filling of the main trench . shall be resumed and completed. Should the flow be obstructed, the defective part shall be cut out and properly remade.

Wherever the levels of the ground permit, the drain shall be led out of the dam and allowed to discharge into the natural drainage channels, and shall in this case be constructed in sections independent of each other, each starting at least 5 feet downstream of the end of the upper section.

II. THE FOUNDATION OF THE DAM.

13. Clearance of Site.—The whole site to be covered by the embankment shall be cleared for its full width of all rubbish, loose stones, surface fissured rock (on the upstream side), powdery, greasy or cracked earth, silt, saud, and all soils charged with lime or other salts, or in other respects unsuitable for the foundation. All trees, shrubs and vegetation growing on the site shall be completely rooted out, and the holes thus formed shall have their sides neatly sloped.

Particular care shall be taken thoroughly to clear the site where the dam crosses the main and tributary streams, water-courses, &c., so as to obtain a perfectly sound foundation at these places.

The material thus removed shall not be utilised for the construction of the dam without the written permission of the

Engineer, and, if not utilised, shall be neatly spread or disposed of as may be directed.

The foundation of the dam shall consist of sound material not liable to deteriorate under the action of water, nor to slip, and shall be able to support the dam while sustaining only a small and uniform amount of compression.

14. Foundation Benches and Trenches.—The whole site outside the puddle trench shall be excavated into foundation benches parallel to the centre line of the dam, with a width from crest to crest of 20 feet and a depth of trough of 3 feet, unless otherwise directed in writing or shown on the drawings. The side next the centre line of the dam shall be excavated with a slope nearly parallel to that of the dam on that side, and the slope of the other side of the bench shall be adjusted accordingly.

At the base of the foundation benches shall be excavated a series of treuches with sides sloping at 1 in 4, 3 feet wide at bottom and 3 feet deep, and with a central trench on each side of the main puddle trench 4 feet wide at bottom and 5 feet deep. On the upstream side these shall be filled with the most retentive clay procurable within half a mile of the site, and this shall be thoroughly well rammed. On the downstream side the trenches shall be filled with quarry spauls, small rubble, &c., covered with fine dry material, to form drains, which shall have a continuous fall throughout their course, and shall be led, at intervals of about 300 feet, out of the dam by cross drains of similar section and construction into the downstream drain (clause 16) or to natural outfalls. The lower drains shall not be begun nearer than 5 feet from the downstream ends of the cross drains of the upper ones.

Where the dam rests on steep end-long ground, the foundation benches shall be excavated at right angles to the axis of the embankment, and with their main slope rising towards the surface of the ground downstream. On the upstream side of the puddle trench the benches shall be divided into sections not more than 50 feet long, each separated from the others by unexcavated strips 5 feet wide running parallel to the centre line of the dam, and, on the reservoir side of these strips shall be stop trenches filled with carefully rammed clay. On the downstream side of the puddle trench the foundation trenches shall be excavated at right angles to the dam in the furrows of the benches, and shall be led straight out of the dam, independently of each other.

15. The Surface Drain.—The natural ground beyond the

downstream toe of the dam shall be dressed off for a width of 30 feet, with an inclination from the dam of 1 in 10 to form a surface drain, which shall be constructed in disconnected sections corresponding with the natural slope of the ground and not exceeding 300 feet in length, and having a longitudinal fall sufficient to carry off the drainage to be dealt with. Each section shall be separated from the one downstream of it by an unexcavated strip not less than 10 feet wide so as to prevent the formation of longitudinal scour channels. The discharge of these sections shall be led by outfall gutters, starting from just upstream of the unexcavated strips, and shall be carried across the downstream drain (clause 16) in watertight channels, and these gutters shall be continued in open excavation to discharge clear of that drain.

16. The Downstream Drain.—Just clear and downstream of the surface drain shall be a downstream drain, which shall have a base width of 5 feet, side-slopes not flatter than 1 in 4, and a continuous longitudinal fall. It shall, if possible, be carried 1 foot into sound rock, but, where this does not exist, it shall have a depth of not less than 10 feet. Wherever practicable, it shall be constructed in discontinuous sections, discharging by cross drains of similar design into the natural drainage lines, and each of these sections shall be separated from the neighbouring ones by unexcavated strips 10 feet wide.

At the base of this trench shall be a drystone slab drain 4 inches wide and 6 inches deep at the head, and gradually increasing in section as it is continued downstream. The trench shall be filled with sound, dry material from the excavations, &c., up to within 3 feet of the ground surface (the larger particles being placed at the bottom), and this material shall be lined at the sides for 1 foot and covered at the top by 2 feet of fine gravel and coarse sand. The whole shall be finished off by a cover of soil carried 1 foot above ground level.

17. Rear Drains.—At all valley lines crossed by the dam shall be rear drains leading from the puddle trench drain at right angles to the axis of the dam, with as steep longitudinal slopes as practicable, into the natural drainage lines. Their section shall be in proportion to the drainage they will have to discharge. Outside the dam, if excavated in soil, thay shall be constructed like the downstream drain, but, if in rock, they may be left as simple excavations, care being taken to divert all surface flow from them.

The main rear drain shall lead from the deepest part of the foundation where the main stream is crossed by the dam, and shall be constructed with particular care, so that its flow shall never be obstructed. A flushing pool shall be constructed at its head, in order to assist in keeping it clear.

18. General.—The longitudinal and cross sections of the various drains shall be clearly shown on the drawings, and the drains themselves shall be constructed in strict accordance with them, except when deviations are permitted in writing by the Engineer. The whole of the excavations for the drains shall be inspected by the Engineer, and they shall not be filled in until he has certified in writing that he has passed them.

III. THE SUPERSTRUCTURE OF THE DAM.

- 19. The Sections of the Dam.—The sections of the dam shall be clearly shown on the drawings, the work shall be constructed in strict accordance with them, and no deviation from them shall be permitted except with the written permission of the Chief Engineer. These sections shall show the limits of the hearting and the thickness of the casings; the toe and crest walls and the berms, if any; and shall clearly indicate all levels, slopes and dimensions.
- 20. The Material of the Dam.—The hearting shall consist of a mixture of pure clay and pure grit in the proportion of 1 to 1, but, where these materials are not procurable within half a mile of the site, the best available within that distance shall be used, in such proportions as will result in an equivalent mixture. The soils used shall be free from all slushy, salty, sandy or powdery material, rubbish and vegetation, and shall be of a tough nature, not liable to become greasy when wet or to crack when dry.

The casings shall consist of the same materials as the hearting, but their mixture shall be equivalent to one of 1 part of pure clay to 2 parts of pure grit. The whole section of the dam shall be constructed at the same time, and patchings-on shall not be allowed except with the written permission of the Engineer.

21. Spreading and Mixing.—The clay shall first be deposited evenly to the proper thickness on the wetted surface of the last completed layer, and shall be covered evenly with the proper thickness of grit, all clods and large particles being first broken up. The two shall then be intimately and thoroughly incor-

porated with each other by hand, by harrows, or by inverting ploughs, as may be directed, so as to form one homogeneous mixture free from all stratification. If, after the completion of the finished layer, such stratification is detected, the layer shall be excavated and properly remade. After the mixture has been completed, the layer under construction shall be levelled and its surface made uniform by hand or by harrows.

22. Consolidation.—On the completion of the mixture, the layer shall be thoroughly and evenly consolidated by rollers, so that no further compression by them is practicable and so that a loaded cart travelling over the layer shall not make a rut of perceptible depth on it. In places where the roller cannot work, the consolidation shall be effected by uniform ramming, which shall similarly be continued until further compression is not practicable by it. The rammers shall work in unison, ramming first on one side of them and then on the other, and shall advance slowly, thus compacting the earthwork and kneading it together. As ramming is inferior to rolling, it shall be limited to as small an area as possible. The layers, when rammed, shall not exceed 3 inches in thickness.

In order to avoid an excessive and sudden amount of settlement, no part of the embankment shall be raised vertically more than 30 feet in one season except with the written permission of the Engineer.

During construction the layers shall be made at least 18 inches wider on each side of the dam than the designed section, and this extra width shall be dressed off after the embankment has been raised at least 5 feet higher than the layer concerned.

23. Watering.—The quantity of water used shall be rigidly limited to the amount just sufficient to unite the old layer with the new one which is to be constructed on it, and the water shall be evenly distributed over the former just before the construction of the latter is commenced.

Should the new layer during consolidation crack or move in front of the roller, this is an indication that too much water has been used; the new layer shall then be dug up and its material shall be allowed to dry partially, and shall then be levelled and reconsolidated. Similarly, should the material be found on inspection of the weekly trial pits (clause 26) to be too wet, it shall be cut out and remade, unless the Engineer by written order permits it to remain.

Should the materials to be brought on to the dam be in too dry a state to be thoroughly consolidated, they shall be watered in situ, and shall be utilised when in a proper condition. Soils which are naturally in too damp a condition to be used shall be excavated and allowed to dry in situ until they are in a fit state for the work.

After the completion of a portion of the embankment and before the final dressing off of the slopes to proper section, water shall be poured down the slopes for several days until the earthwork is not able to absorb more moisture, so that the surface may thus be thoroughly compacted.

24. Thickness of Layers.—The materials of the layers shall be so deposited in thickness that, when thoroughly consolidated by ordinary rollers, the finished layers shall have a thickness of not more than 5 inches for the top 30 feet in height of the dam, of not more than 4 inches for the next 30 feet, and of not more than 3 inches for the remainder of the base of the dam and for the river crossing.

When steam rollers are employed, these thicknesses of the layers may be increased by fifty per cent.

- 25. Slopes of Layers.—The surface of the layers shall be level for a width of about one-sixteenth of the section on each side of the centre line of the dam; on the downstream side, it shall slope up at an inclination not exceeding 1 in 10; and on the upstream side, at an inclination which shall make the upstream edge level with the downstream one.
- 26. Testing the Construction of the Dam.—At the close of each week the work constructed during the week shall be tested by means of small trial pits, 2 feet by 2 feet, which shall be excavated throughout its depth, and any change in construction or alteration of the completed work thus proved to be necessary shall be carried out in accordance with the written instructions of the Engineer.
- 27. Junctions of Earthwork.—Junctions shall be avoided as much as possible, but, where unavoidable, they shall thus be constructed:—
- (a) Cross-sectional Junctions.—The loose surface earth of the end slope of the old embankment shall be entirely removed, and that slope shall thereafter be cut into a series of joggles and tongues sloping vertically up it. The excavated surface shall be well wetted and the new earthwork consolidated in intimate union with it.

(b) Longitudinal Junctions.—All loose surface earth shall be removed, and the solid surface of the old embankment shall be cut into a series of benches of irregular width and depth, which shall be wetted. The new earthwork shall then be constructed in layers sloping steeply on to the old embankment, and shall be consolidated in intimate union with it.

Such junctions shall not be raised more than 20 feet in height in one season, and in the case of (a), they shall be broken up into steps not exceeding 10 feet in height and separated by horizontal breaks of not less than 50 feet, over which the subsequent work shall lap by a distance of not less than 50 feet.

When an old dam has to be raised, all the loose top surface shall be removed, and one or more key trenches, not less than 4 feet wide at bottom and 3 feet deep, and with slightly sloping sides, shall be excavated parallel to the centre line, and shall be carefully filled with the most retentive material procurable within half a mile of the site, and this shall be thoroughly rammed before the main part of the new earthwork is commenced.

28. Finishing off the Embankment.—The dam shall be constructed to the correct lines, widths and levels, and due allowance for settlement shall be made; its slopes shall be dressed uniformly to 1½ inches extra to the designed width, and shall then be rammed to that width. The top shall be properly finished off with a fall of 1 inch to the reservoir, and shall be covered with half an inch of coarse sand, which shall be well rolled in.

During construction arrangements shall be made for the prevention of water lodging on any part of the dam, and of the guttering of the slopes by rainfall; for filling in at once any settlements or cracks that may occur; and, generally, for maintaining the whole structure in thoroughly good order. The work shall proceed uniformly and regularly in as long continuous lengths as practicable.

The downstream slope of the dam shall be turfed, or sown, with fine grass of a binding character, and one which will thrive in this situation. Upstream of the full supply contour of the reservoir and downstream of the downstream drain, the dam shall be enclosed by a good fence or hedge.

Proper arrangements for all works roads shall be made for use during the construction and after the completion of the dam. 29. Excavations for Materials.—Excavation shall not be permitted within a width equal to twice the height of the dam from its downstream toe, nor within one equal to four times the height of the dam from its upstream toe. At the side next the dam the depth of such excavations shall not exceed 5 feet, and shall not be increased therefrom at a greater inclination than 1 in 10. The excavation pits on the downstream side shall not be continuous with each other, so that the formation of scour channels may thus be avoided.

The entire stripping off of the water-tight cover of pervious strata shall not be permitted on the reservoir side within a minimum width equal to ten times the height of the dam from its upstream toe.

All excavated pits shall be arranged in neat lines and in blocks to facilitate the record of their measurements.

IV. PITCHING.

- 30. The Extent and Thickness of the Pitching.—The pitching shall extend from and to the levels, and shall be of the thickness shown on the drawings, and everywhere that thickness shall be represented by single through stones of the full depth. Whenever practicable, the pitching shall not be constructed until the embankment has had a full year in which to settle.
- 31. The Stone.—The pitching shall consist of sound, hard and durable stone which will not weather and will not deteriorate when exposed to the action of water. It shall be roughly hammer-dressed, so as to remove all large projections in order that the stones may meet all round their bases for a depth at least one-quarter of their height and completely cover and protect the embankment. The stones shall be as regular as possible in horizontal and vertical section, and at least nine-tenths of them shall have a horizontal section at the base of not less than 50 square inches for 12-inch pitching; 65 square inches for 15-inch pitching; 80 square inches for 18-inch pitching; and 100 square inches for 2-feet pitching.
- 82. Laying.—The stones shall be firmly bedded on a layer of sound, hard murum or quarry spauls at least 6 inches in thickness, and shall be laid with their broadest ends downwards, so that they may meet all round their bases for a minimum depth equal to one-quarter of their height. They shall be hammer-dressed so as to fit closely to each other at their bases, and shall be malleted

securely against each other and on to their seat, so that their bases shall be parallel to the slope of the dam, and so that, when struck by a heavy hammer, they shall not be disturbed. The stones shall be laid with the longest dimension of their bases as nearly parallel to the axis of the dam as possible, and shall break joint in every direction, so that long, unbroken joints may be avoided. After the laying of the pitching has been inspected and passed, any large spaces between the tops of the stones shall be filled each with a single large chip well driven home, so that the stones may be firmly wedged to each other, and so that the upper surface of the pitching may present a fairly regular appearance free from large interstices. The pitching, thus completed, shall be finally tested and passed.

The face slope of the completed pitching shall be that designed for the dam, and the various thicknesses of the bedding and the stones shall be allowed for accordingly in the earthwork of the embankment.

88. Foundation and Top Courses.—The foundation course shall consist of a line of headers, the depth of which shall not be less than 1 foot in excess of that of the pitching stones abutting on them. They shall be roughly squared and shall be fixed on a bed of spauls in a small trench cut to take their extra depth. Where the ground is soft and liable to erosion by wave action, an apron of large quarry spauls, or medium-sized rubble, shall be formed over and for at least 5 feet beyond the foundation course so as to protect it.

The top course shall consist of a line of headers, the depth of which shall not be less than 9 inches in excess of that of the pitching at the top, and shall project by that amount beyond the face of the pitching. The headers shall be roughly squared, and shall be fitted together with close joints in one continuous line parallel to the top of the dam.

V. MISCELLANEOUS.

34. The Berm.—The berm shall be constructed in accordance with the drawings at the same time as the main embankment and similarly to it. It shall be founded on a good hard stratum, and its base for at least 2 feet in thickness shall be formed of packed rough rubble and sound stony debris from the excavations; on top of this shall be at least 2 feet of sound clean murum. The rest of the berm shall be made of a mixture of 1 part of pure clay

to 2 parts of pure grit, or of the natural soils available in the proportions which will form an equivalent mixture. When there is an excess of stony débris from the excavations it may be utilised to form the berm, in which event the larger particles shall be placed nearer the base and the outer slope than the smaller ones. The top of the berm and its outer slope shall, however, be made with a casing, at least 2 feet thick, of 1 part of pure clay to 2 parts of pure grit or of an equivalent mixture.

The top of the berm shall have a uniform slope of 1 in 20 extending downwards from the slope of the dam to the outer edge of the berm. In it shall be formed two water-tight paved drains, each leading diagonally from 5 feet from where the centre line of the berm meets the slope of the dam to the ends of the outer edge of the berm where it abuts on the natural ground. The bed of each drain shall be at least 1 foot wide and shall rest on retentive clay at least 1 foot thick; it shall be formed of stone slabs breaking joint with each other, and at least 4 inches thick, and extending to at least 3 inches beyond the side walls of the drain which shall consist of a single thickness of the longest stones readily available, and not less than 9 inches high and wide. The interior surface of the drain shall be roughly dressed; the joints of the stones shall not exceed three-quarters of an inch in thickness and shall be set full in mortar. The outfall of each drain shall be excavated as an open channel, which shall discharge clear of the dam.

35. The Drystone Toes.—The drystone toes shall be constructed in accordance with the drawings, and shall be founded on sound rock or hard murum, but where these materials are not near the surface, the ground shall be excavated in sloping benches of at least 5 feet mean depth for the foundation of the toes. The base thus prepared for soft soils shall be covered over with murum at least 2 feet thick, formed in thoroughly consolidated layers not exceeding 4 inches in thickness. Under the upstream toe the murum shall be mixed with an equal volume of clay, but under the downstream toe shall be clean and underlain by a layer of quarry spauls, &c., not less than 18 inches thick, which shall be thoroughly packed and drained. When the downstream toe is founded on rock or hard murum, drystone drains each 3 feet by 3 feet in cross section shall be constructed through its base in number sufficient to secure its thorough drainage.

The toes shall be built of good, sound rubble stones of the largest size and as flat-bedded as are readily procurable, and they shall be laid in layers roughly normal to the outer slope of the dam. The stones in each layer shall be firmly bedded in clayey murum, which shall be as stiff as practicable, shall break joint with each other and shall interlock with the stones of the layer below them. All projecting corners shall be knocked off by a hammer and the stones made to fit roughly together. The joints between the stones shall be packed with clayey murum well worked into them by short iron bars, and each large interstice shall have a single chip of the largest size practicable driven into The top of each layer shall be covered with clayey murum just before the stones of the upper layer are built on it, and these shall be laid so as to interlock and break joint with those of the lower layer. Each stone shall be malletted firmly to its bed and the adjacent stones, so that the stone may have a solid bearing on it and them.

The upstream face of the upstream toe shall be formed of roughly-dressed stones of the largest size readily procurable and not less than 12 inches deep in the work, and these shall be set full in mortar. The downstream face of the downstream toe shall similarly be formed, but the stones shall be set in clayey murum. As many headers as practicable shall be built in the faces so as to tie them into the hearting.

The core walls, if specified to be built of masonry, shall be constructed of uncoursed rubble in accordance with Appendix 18⁴, Specification 21, but if of concrete, in accordance with Specification 18 of that Appendix.

36. The Toe Wall.—The toe wall shall be constructed in accordance with the drawings, and shall be securely founded on concrete (vide Appendix 18^A, Specification 18), and the superstructure shall be built of coursed rubble masonry (vide Appendix 18^A, Specification 19), or of rough-coursed rubble masonry (vide Appendix 18^A, Specification 20) as may be specified. The top of the wall shall be formed by a coping of rough-dressed stones projecting 3 inches beyond its downstream face.

At the back of the wall shall be a layer of clean quarry spauls, sound stone débris, &c., at least 18 inches thick, and between this and the dam shall be a layer of clean murum at least 12 inches thick. Weep holes shall be left through the wall, so as to discharge the drainage thus collected, and a slab drain shall

be built through the wall where it crosses the rear drain of the dam.

37. The Crest Wall.—The crest wall shall be constructed in accordance with the drawings, and shall be securely founded on concrete (vide Appendix 18^A, Specification 18), and this shall be protected from wave-wash by an apron of pitching at least 2 feet thick and 5 feet wide. The superstructure shall be built of coursed rubble masonry (vide Appendix 18^A, Specification 19), or of rough-coursed rubble masonry (vide Appendix 18^A, Specification 20) as may be specified. The top of the wall shall be formed by a coping of rough-dressed stones projecting 3 inches beyond its upstream face. At the back of the wall shall be a layer of clean murum at least 1 foot thick, and narrow weep holes shall be left through the wall so as to discharge the drainage thus collected.

APPENDIX 18^A.

SPECIFICATIONS FOR THE WASTE WEIR AND OUTLET.1

(Vide Chapter V., paragraph 245.)

	INDEX	TY) SD		TCATI	ONS	, !			
1	General		<i>y</i> 61.	ECIP.	IOALI	OIN	•			358
4.	Contrai	•	•	•	•	•	•	•	•	000
	Town Johing Manual or	I.		THWO	RK.					358
	Foundation Trenches	•	•	•	•	•	•	•	•	359
	Foundations in Rock	•	•	•	•	•	•	•	•	
	Puddle Filling .	•	•	•	•	•	٠.	•	•	360
	Embankment .	•	•	•	•	•	•	•	•	360
6.	Pitching	•	•	•	•	•	•	•	•	360
	II. MA	TERI	ALS 1	ror C	ONSTR	UCTIC	N.			
	Portland Cement		•	•	•	•	•	•	•	361
8.	Hydraulic Lime .	•	•	•	•	•	•	•	•	362
	Sand	•	•	•	•	•	•	•	•	363
	Cement Mortar .	•	•		•	•		•	•	363
	Hydraulic Lime Mort	ar	•	•	•		•	•	•	364
	Gauged Mortar .		•	•	•		•	•	•	36 5
	Concrete Aggregate	•	•	•	•	•	•	•	•	365
14.	Stone	•		•			•	•	•	366
	Water		•		•	•	•	•	•	366
16.	Wooden Shutters	•	•	•	•	•	•	•	•	366
	III.	Con	CRETE	AND	MASO	NRY.				
17.	General	•	•							367
18.	Concrete		•		•	•	•	•	•	369
19.	Coursed Rubble Maso	nry	•		•	•				372
2 0.	Rough-coursed Rubbl	е М	asonr	у.						373
21.	Uncoursed Rubble Ma	soni	ry .		•					373
22 .	Ashlar-Rough-tooled	١.	•	•						374
23.	Block-in-Course Facin	g				•	•	•	•	375
24.	Copings, String Cours	68 , 8	ınd Q	uoins	•		•	•	•	376
	Block-in-Course Archi				•				•	376
26.	Head Wall in the Cen	tre	Line (of the	Dam		•		•	377
		ΙV	. Ja	ONWO	RK.					
27.	Sluice Gates, complete		•							379

¹ Extracted chiefly from Marryat's, "Specifications, Rates, and Notes on Work," with certain alterations and additions.

1. General.—The works are to consist of masonry structures as shown on the drawings, and are to be executed in strict accordance with the plans, estimates, and these specifications, except when written orders by the Engineer permit deviations from them to be made. Only the best materials and the soundest form of construction shall be permitted, and everything shall be executed in a thoroughly workmanlike way to the satisfaction of the Engineer, whose decision as to this shall be final. The rates tendered shall include payment for all materials, construction, and subsidiary work necessary for the execution of the different items specified.

I. EARTHWORK.

2. Foundation Trenches.

i. General.—These shall be taken out to the exact width of the lowest step of the footings: the sides shall be left plumb where the nature of the excavation permits this to be done; but they shall be sloped down or shored up carefully where the soil appears treacherous or likely to fall in; and, where necessary, they shall be stepped so that the filling in may rest everywhere on horizontal surfaces.

The foundation course shall be accurately set out in the bed of the trench, which shall first be passed by the Engineer.

- ii. Depth of Trenches.—All foundations exposed to the rush or overfall of water shall, if possible, be taken well into sound rock. If this cannot be met with at a reasonable depth, they shall be taken into sound incompressible soil, extending well below the footings, which will not deteriorate under the action of water. In such cases the foundations shall be specially designed to meet the conditions which exist. Wing walls, and works not liable to be affected by scour &c., shall have their foundations stepped up as designed; but, as a rule, the steps shall not exceed 2 feet in height.
- iii. Bottom of Trenches.—The bottom of the trenches shall be dressed level in cross-section, and, before any concrete or masonry is put in, shall be well watered and thoroughly rammed if of soil. No filling of soil shall be allowed in thus bringing the foundation bed to proper level throughout.
- iv. Refilling Trenches.—All foundation trenches shall be refilled to the original surface of the ground with approved material properly placed. If that is of soil, it shall be formed in regular layers not exceeding 6 inches in thickness, and these shall be well

watered and rammed. If that is of boulders, these shall be of the largest size practicable, and shall be fitted together and well packed with large chips so as to be immovable when struck by a heavy hammer.

- v. Spoil.—No material excavated from foundation trenches, of whatever kind it may be, shall be placed nearer than 4 feet from the outer edges of the excavation.
- vi. Excavation Rate.—If work is done by contract, the Contractor's rates shall include the cost of all shoring, pumping, bailing out or draining; and while the masonry is in progress the excavations shall be kept free of water in such manner as the Engineer may direct.

The rate paid shall include lifting and removing soil to any distance within 50 feet of the centre of the excavation. If the soil be removed to a greater distance, the extra schedule rate for increased lead shall be allowed. The rate shall also include filling in round foundation walls, ramming and securing in the ordinary manner. The measurement of the work shall be the exact length and width of the lowest step of the footing, according to the drawings or the instructions of the Engineer, and the depth shall be measured vertically.

vii. Difficult Foundations.—Difficult foundations, involving pumping arrangements, coffer-dams, &c., when required, shall form the subject of a special specification to be drawn up with distinct reference to the requirements of each particular case.

8. Foundations in Rock.

- i. Depth of Foundation.—The foundations shall be carried down to rock well able to bear the weight of the masonry, staunch enough not to leak under the pressure of the water impounded, and of a sound nature which will not deteriorate.
- ii. Foundation Plan.—A foundation plan shall be carefully prepared and maintained, and this shall show the reduced levels of the whole area of the foundations. For convenience of measurement the quantity of foundation constructional work shall be measured from assumed level planes, having as large and regular a superficial area as possible, and these shall be indicated on the foundation plan.
- iii. Blasting and Testing Foundations.—When the foundations have to be blasted care shall be taken, when nearing the foundation level, that the bed rock is shaken as little as possible, and that all shattered rock is removed with bars or heavy hammers

before the filling is commenced. Before construction work is begun the whole area of the foundations shall be tested by striking it with a sledge hammer, and any portions which shake under the blows shall be removed. At intervals of the prepared foundation, small trial pits, from 3 to 6 feet deep, shall be blasted to test that the rock is sound underneath it for those depths. If these indicate that it is not sound, the foundation shall be deepened accordingly.

- iv. Preparation of Foundations.—The general surface of the foundations shall be roughened to give a good foothold to the superstructure, and, if necessary, shall have trenches excavated in it parallel to the axis of the work, one of which shall be along its downstream toe, and these shall thereafter be filled with masonry or concrete as may be specified. Immediately before construction work is begun the surface of the foundations shall be cleaned with wire brushes, and shall be thoroughly washed. the rock is sound, not fissured, and not liable to weather, the surface need only be roughened to give the superstructure a hold. If, however, it is of such a character that it will not stand exposure, the foundation shall be carried well into the rock (from 3 to 6 feet in depth), and its bed at once protected by a covering of concrete or masonry 2 to 3 feet thick carried right over the excavated area. In the case of fissured rock, the fissures, if large, shall be cleared and filled with masonry or concrete, and, if small, shall be grouted with cement mortar until there is no danger of leakage under the base of the work.
- 4. Puddle Filling.—The excavation shall be executed of the width and depth shown on the drawings, or as may be ordered in writing, and shall be filled in general accordance with the specification given in Appendix 18, clauses 10 and 11.
- 5. Embankment.—Where this forms part of the main dam it shall be constructed in strict accordance with the specification given in Appendix 18, clauses 13, 14, 20 to 24. Where it forms flank or other embankments subsidiary to the main work it may be constructed of 6-inch layers, well rammed and carefully brought to the designed section. Special care shall be taken to consolidate the bank where it abuts on a masonry work so as to make it in perfect water-tight connection with that. Above high-flood consolidation may be less thoroughly done.
- 6. Pitching.—This shall be constructed in generated ir with the specification given in Appendix 18, clar these shall accordance with the specification given in Appendix 18, clar these 30 to 33.

II. MATERIALS FOR CONSTRUCTION.

7. Portland Cement.

- i. Description.—The cement shall be obtained from a maker approved by the Engineer. It shall be fresh, but thoroughly air-slaked, and of a grey or greenish-grey colour.
- ii. Tests.1—It shall be tested by such of the following tests as the Engineer may direct:—
- (a) Fineness of Grinding.—The cement shall be prepared only from thoroughly burnt clinker, without any admixtures of underburnt portions or other substances. Not more than 5 per cent. residue shall remain on a sieve of 5,600 meshes, nor more than 12 per cent. on a sieve of 14,400 meshes to the square inch.
- (b) Specific Gravity.—When freshly burnt the cement shall have a specific gravity of not less than 3·14 or more than 3·08 when weathered to 6 degrees.²
- (c) Chemical Analysis.—A sample shall not contain more than 1½ per cent. magnesia, 1¾ per cent. sulphuric acid, 1 per cent. carbonic acid, 1 per cent. insoluble residue, nor more than 62 per cent. nor less than 58 per cent. lime.
- (d) Tensile Tests.—Test blocks not less than 1 square inch in cross-section shall be made with 20 per cent. water after the cement has weathered. The mixture shall be placed in moulds without ramming, and kept 1 day in a moist atmosphere of temperature not less than 50° F., and afterwards shall be placed in water of not less than 50° F. Some blocks shall be of neat cement, and some of 1 cement to 3 by weight of standard dry sand; the latter to be mixed with only 10 per cent. of water.

Neat cement blocks to bear per square inch:-

400 lbs. after 7 days; 500 lbs. after 14 days; and 600 lbs. after 28 days.

Cement and sand blocks to bear per square inch:-

100 lbs. after 7 days; 150 lbs. after 14 days; and 200 lbs. after 28 days.

Slabs or cakes shall be made of neat cement with 20 per cent. water, shall be kept in air for 24 hours, and afterwards shall be

¹ Extracted from *The Builder*, December 28th, 1901. Specification proposed at a meeting of the Architectural Association as a standard specification for important works.

³ "Weathered to 6 degrees" means that when the cement is mixed for the heating test (clause (f) below) it will not show a rise in temperature of more than 6° F.

placed in cold water, which shall be raised to boiling heat, and maintained thereat for 3 hours. After this test the slabs shall not show any sign of warping, checking, or radial cracking. The cake with 20 per cent. water shall harden in not less than 3 hours or more than 7 hours. All cement shall show a uniform growth of strength.

- (e) Adhesive Test.—A pat of neat cement 3 inches diameter and 1 inch thick shall, after 7 days, adhere firmly to the natural surface of a Welsh slab. The slab shall be soaked in water before the application of the cement, and shall be kept moist during the interval.
- (f) Heating Test.—A sample of the cement made in a paste with water shall not show a rise of more than 6° F. during one hour after mixing. If it shows a greater rise, the cement is not ready for use or testing.

All cement shall be shot on a perfectly dry floor in a watertight shed near the site of the works to a depth not greater than 1 foot, shall remain there as long as the Engineer may direct, and shall be turned over from time to time as he may order.1

8. Hydraulic Lime.—Only true hydraulic lime shall be used on works for which the use of cement is not specified. Lime shall be

¹ NOTES.

cement; hot, quick-setting cements require somewhat more water than

slow-setting ones.

3. The fineness of grinding affects both weight and strength. Finelyground cements are lighter than coarse ground; they are weaker when tested neat, but give better results when mixed with sand.

4. Sieves of 5,600 mesh should be made of 40 B.W.G. wire, and sieves of

14,400 mesh of 43 B.W.G.

5. The section of the test blocks has a great influence on the 7-day tensile test—thus, for a test block 21 square inches in cross-section, a test of 306 lbs. per square inch is equal to one of 448 lbs. per square inch for a block of I square inch in cross-section.

6. The strength of gauged Portland cement increases with age up to a certain time; good cement never deteriorates. The strength of cement decreases rapidly with the proportion of sand mixed with it; its strength appears to increase alightly when the cement is mixed with salt water.

7. Standard sand should be such as will pass through a sieve of 400 meshes to the square inch, and be retained by one of 900 meshes. The old test of a striked bushel is now being gradually abandoned, as the method of filling varies, and the test is thus a misleading one: the specific gravity test has taken its place.

^{1.} The quantity of water used in mixing cement has a great effect on its tensile strength; consequently the proportions prescribed must be carefully adhered to. The method of filling also largely affects the strength; the cement should therefore be pressed, not rammed, into the moulds.

2. The amount of water required depends somewhat on the quality of the

considered hydraulic when it sets under water within 7 days as tested by Vicat's needle.

The lime shall be burnt from such hydraulic limestone as the Engineer may approve. It shall be broken into pieces which can pass through a ring 11 inch in diameter, and particles with a maximum dimension of less than 1 inch shall be screened out before burning. It shall be carefully freed from earth and impurities and particles containing much sand, and shall be burnt at the site of the works with a sufficiency of good charcoal. coal, or such other fuel as the Engineer may direct.

As soon as the burnt lime has cooled in the kilns it shall be slaked with clean water in such quantities as may at once be required and with the minimum amount of water. It shall thereafter be screened through a sieve having at least 36 meshes 1 to the square inch for ordinary work, or through one having at least 64 meshes to the square inch if required for ashlar or fine work. It shall then be freed from all overburnt, unburnt and unslaked particles and other impurities, and none but the lime thus purified and reduced to powder shall be used.

The lime shall be used as fresh as possible, and, as soon as it is prepared, shall be stacked in heaps under cover to diminish air slaking, and shall be preserved perfectly dry. Any portions that may become wet and partially set or hardened from any cause shall be rejected and removed from the works.

- 9. Sand.—The sand used in mortar and concrete shall be coarse in texture, clean, sharp, and gritty to the touch, and shall consist only of hard, durable particles. It shall be freed by screening and washing from saltpetre, earth and other impurities, and soft particles which will crush under the mortar mill. Fine drift sand, or such as may be mixed with salt, earth, or organic matter, shall on no account be used.2
 - 10. Cement Mortar. Unless otherwise specified, this shall

¹ The finer the lime is ground, the stronger will be the mortar made from it.

² It is of the utmost importance that the sand used for mortar shall be perfectly clean and free from clay or other impurities which might prevent perfectly clean and free from casy of other impurities which might prevent the lime from adhering to it. It is therefore advisable that the sand should be thoroughly washed just before it is required for use. Very fine sand is objectionable for mortar, as that makes the mortar "short" and diminishes its strength. When, however, very thin joints have

to be made, finer sand than what is ordinarily required will have to be used.

Mortar of this description should be used where a quick-setting mortar is required, either for foundations with springs or where the work will be subjected early to the action of water.

consist of 3 parts by volume of sand to 1 part by volume of cement. These materials shall be carefully measured in boxes of standard size, and shall be intimately mixed together while dry. They shall then be sprinkled with only a sufficiency of water, and shall be thoroughly incorporated together. The mortar shall be used within three hours of its preparation, and any not then used shall be rejected and removed from the works or destroyed.

11. Hydraulic Lime Mortar.—Unless otherwise specified, this shall consist of 1 part by volume of fresh-slaked lime powder to 1½ parts by volume of sand for masonry, and 2 parts by volume of sand for concrete: these materials shall be carefully measured in boxes of standard size. Unless otherwise specified, they shall then be placed dry in an edge mill, which if of stone shall be about 3 feet 6 inches in diameter and about 11 inches in width, and the mill track about 13 feet in radius.

The freshly-slaked lime shall first be placed in the mill track and ground by itself for 25 revolutions; then dry sand shall be added and the two ground together for 25 revolutions. Thereafter they shall be wetted with only a sufficiency of water to convert them into stiff paste, and shall be thoroughly ground together for 5 hours or 150 revolutions in the edge mill, water being gradually added as the mortar becomes stiff.

All mortar removed from the mill shall be kept moist and in the shade. It shall not be used until 3 hours have elapsed from the completion of the grinding, nor shall it be used after 36 hours have elapsed from that time. None that has become dry or partially set shall be used in the work. Rejected mortar shall be removed from the works or destroyed, unless the Engineer in writing permits it to be re-ground and used for less important work.

The mortar shall be made into briquettes of 2-inch or 3-inch cube, which shall be kept damp in the moulds for 24 hours, and shall then be taken out and covered up with sand kept wet for 24 hours, after which they shall be placed in water. If they maintain their shape and continue to set, the lime will be passed as good hydraulic.

Passed briquettes shall be kept in water for specified periods, and shall then be tested for compressive strength. Briquettes made with 2 of sand to 1 of lime shall bear a pressure of not less than 75 lbs. to the square inch at the end of 10 days, of 150 lbs. after 1 month, of 300 lbs. after 3 months, and of 500 lbs. after 6 months,

12. Gauged Mortar.—When hydraulic lime mortar will at once be exposed to the action of water which will prevent its setting, it shall be gauged (or mixed) in the proportion of 1 volume of cement to 5 volumes of lime, or as may be specified, the former replacing an equal volume of the latter. The cement shall be added half an hour before the completion of the grinding, and the gauged mortar shall at once be used.¹

13. Concrete Aggregate.

The metal shall be broken from clean, sound, hard and durable stones, free from earthy matter and all soft surface-scale, and shall pass through a ring 2 inches in diameter.

The gravel shall be of clean, sound, hard and durable, unbroken stone, free from earthy matter and all soft surface-scale, and shall pass through a ring 2 inches in diameter.

Small aggregate consisting of fine chips, small gravel, pebbles and large sand, all of which are sound, hard, durable, and perfectly clean, shall be provided in sufficient quantity to lessen the voids in the large aggregate.

The proportions of the mortar and of the various aggregates shall be determined experimentally,² so that all interstices in the latter shall be filled by not more than 50 per cent. of the former.

Stones and boulders shall be embedded only in the concrete of thick walls, and shall be of the largest size which can easily be handled. They shall be of fairly regular shape and of hard and durable material, free from soft surface-scale and earthy matter, shall be clean and well wetted just before they are laid, and shall be embedded solidly in mortar with their broadest ends downwards. They shall project beyond the upper surface of the layer on which they are laid, so as to bond that layer with the one above it.

¹ Mortar should be used as stiff as it can be spread; the joints should always be completely filled by it.

Grout is a very thin liquid mortar, sometimes poured over courses of masonry or concrete, &c., in order that it may penetrate into empty joints left in consequence of bad workmanship. It may also be necessary to use it for deep and narrow joints between large stones, or for filling in fissures in rock foundations. It is deficient in strength, and should therefore not be used where it can be avoided.

² The quantity of these interstices should be ascertained by first thoroughly wetting the aggregate, and then placing it in a water-tight box and noting the quantity of water required to fill the box. It is necessary that the matrix shall be in quantity rather more than is sufficient to fill the interstices in the aggregate. Generally, the interstices amount to from ½ to ½ of the aggregate, if that is all of one size, but this may be considerably reduced by using an aggregate composed of stones of varying sizes: in the specification the actual proportions of each size should therefore be clearly stated.

They shall be placed at sufficient intervals apart so as to permit of the concrete being well rammed all round them, and shall first be coated with mortar to make them unite with the concrete. They shall be spaced so as to break joint uniformly in the different layers, and in bulk shall form from $\frac{1}{6}$ to $\frac{1}{6}$ of the whole mass of the concrete.

- 14. Stone.—The stone used shall be heavy, clean, hard, durable, tough, solid, and free from flaws, cracks, soft scale and weathered material, and shall be obtained from quarries approved by the Engineer. Each stone shall be laid on its natural quarry bed.
- 15. Water.—The water used shall be clean and free from salt and organic matter. All stone and aggregate shall be thoroughly wetted before it is embedded in mortar.1 The work shall be kept properly wet while it is in progress, and until the mortar is properly set. The watering shall at first be done carefully by watering cans fitted with roses, so as not to wash the lime or cement out of the mortar while it is "green." After the mortar has set, it shall be watered more liberally by buckets, &c., and, finally, the upper surface of unfinished courses, when work thereon is not in progress, and the completed work shall be kept flooded with water for as long as possible up to one month after the work was laid. On Sundays and other holidays the work shall be kept watered as above specified, and special labourers shall be employed for this purpose. Should the mortar perish through neglect of watering, the work damaged thus shall be pulled down and rebuilt at the Contractor's expense. Should the Contractor fail to water the work to the satisfaction of the Engineer, the latter shall supply the men required to water the work properly and charge the cost thereof to the Contractor.
- 16. Wooden Shutters.—The planks shall be of the dimensions specified, and shall be cut from timber the source and kind of which shall be approved by the Engineer. That timber shall be of the best quality capable of withstanding wet, well seasoned,

¹ In using hydraulic limes and cements, it should be remembered that the presence of moisture favours the continuance of the formation of the silicates as commenced in the kiln, and that the setting action of mortars so composed is prematurely stopped if they are allowed to dry too quickly. It is therefore of the utmost importance, especially in hot climates, that the stones embedded in mortar should be thoroughly suaked, so that they cannot absorb moisture from it. Thorough watering further renders the stones clean, and thus permits the mortar to adhere properly to them.

felled for not less than two years before use, and free from large or loose knots and from shakes or defects of any kind: heart or sap wood shall be rejected. The edges of the planks shall be planed true and square to form properly water-tight joints, and the planks shall be closely fitted together to form the shutter; when that is passed it shall be tarred two coats or as may be directed.

III. CONCRETE AND MASONRY.

17. General.

- i. Uniformity of Construction.—Where practicable, the whole of the concrete and masonry shall be carried up at one uniform level throughout, but where breaks are unavoidable the junctions shall be made in good long steps so as to prevent the formation of cracks between the old and the new work. All junctions of walls shall be formed at the time the walls are being built, and cross walls shall be carefully bonded into the main walls.
- ii. Battered Walls.—In all battering, retaining, and breast walls, the beds of the stones and the plane of the courses shall be at right angles to the batter.
- iii. Face Stones and Joints.—Face stones shall have joints of the specified widths for the specified distance from the face.¹

The backs of the face stones shall not be in one line, so that the hearting may bond as much as possible. Face stones shall not be less than 9 inches deep in the work.

For face joints the mortar shall just fill the spaces between the adjacent stones, and shall not be smeared over these stones, nor shall false joints be made. As soon as the mortar has begun to set, the joint shall be rubbed smooth and hard with a special trowel.² Unless distinctly specified, the work shall not be pointed, nor shall the joints be lined with the trowel, nor project beyond the face of the masonry.

¹ Masons sometimes chip off only the edges of the stones to the specified widths of the joint, and do not dress the joint to its full depth: this should be prohibited.

When the joint is thus rubbed, the lime works out to its surface, combines slightly with the iron, and when set forms a very hard skin, having a continuous union with the interior of the joint.

It is desirable to keep the mortar of the top of the course half an inch

It is desirable to keep the mortar of the top of the course half an inch below the top of the stone, and to level it up with mortar when the upper course is being laid. This will keep the lower surface of the joint clean, and will help to key the two courses together.

For wide interior joints mortar shall be economised, and the weight of the work increased, by wedging in vertically the largest-sized chips which will nearly fill the joint, and these shall be well wetted before they are inserted. Not more than one such chip shall be placed in any one joint.

- iv. Backing.—The backing of thick walls shall be made of fairsized stones, which shall bond together as much as possible, and especially with the facing. Each stone shall be firmly and thoroughly bedded in the mortar without any vacuities being left.
- v. Through Stones and Headers.—These shall be provided of the specified dimensions, and shall be spaced at the specified intervals. Their ends tailing into the work shall not be greatly less in dimensions than their faces. The stones adjacent to them shall be laid carefully to bond with them in the hearting. The headers in the different courses shall be spaced to break joint well with each other.
- vi. Levelling up Courses.—This shall not be effected by means of chips, but where the top of a face stone is irregular, it may be levelled up with fine concrete or coarse mortar just before the laying of the course on top. The tops of the hearting courses shall be made by the tops of the stones forming them, and these shall be fairly level. The beds of the stones of the upper course shall fit fairly into the interstices of the lower course.

vii. Thin Walls.—In such walls the face stones of the two faces shall bond together as much as possible, and the faces shall be bonded together by through stones. The filling between the faces shall not consist of chips and small stones, but shall be of fair-sized stones, breaking joint with the face stones, or of fine concrete 1 (or coarse mortar) well worked into and consolidated between the facings.

viii. Dressing.—All stones shall be dressed off the work. Further dressing shall not be allowed after they have been

¹ This fine concrete hearting is particularly useful when a thin wall, such as of an outlet tower, has to be made water-tight. The mortar should consist of 1½ parts of sand to 1 of lime, and can be rendered still more impervious by gauging it with cement. The aggregate should pass through a ½-in. ring and should be of fine chips, large sand, &c. The concrete should be laid in 4-in. layers, lightly rammed and formed quickly one on top of the other to make the course of the required thickness. That course should be kept below the top of the masonry facing, so that there may be a break of joint between the two in order to render the work more staunch.

laid in the work; if it is required, the stones shall be taken off the work, dressed, and then relaid.

- ix. Setting.—All stones shall be set full in mortar, and shall be laid solidly on their beds and close to each other, and large stones shall for this purpose be well malletted on to their beds and next to each other.
- z. Pointing.1—Pointing shall be avoided as much as possible: it is often an indication of bad or slovenly work. When it is ordered in writing or is specified, it shall, if possible, be done while the mortar in the joints is fresh. The old mortar shall be raked out of the joints at least 14 inches deep; the dust shall then be brushed out of the joints and the work well wetted or washed with water. The mortar for the pointing shall consist of equal volumes of lime or cement, as may be ordered, and fine sand thoroughly incorporated together. It shall be used quite fresh, and shall be carefully worked in so as to fill the joints completely and no more. After it has begun to set, it shall be rubbed smooth and hard with a special trowel. No false joints shall be made, nor shall the joints be raised beyond the surface of the adjacent stones unless this is specified. The work shall be kept wet for at least three days after the pointing is complete and until it is quite set.

18. Concrete.

- i. Definition.—The concrete shall consist of an aggregate (vide Specification 13), joined together by a matrix of mortar made of either cement or hydraulic lime mixed with sand (vide Specifications 10 or 11).
- ii. Proportions of Materials.—The concrete shall be made in such proportions as shall be specified by the Engineer, due regard being had to the purpose for which the concrete is to be used.²
- iii. Mixing.—The concrete shall be mixed by hand on the work or on a special platform formed with planks, concrete, bricks, or sheet iron, &c., so as to keep the material clean, or, when specified, by a concrete mixer.

¹ The best form of pointing consists in laying the superior face-mortar at the same time as, and backing it up with, the inferior hearting-mortar, just before the stone is set on the two. The two classes of mortar will thus unite thoroughly together, and will not subsequently separate from each other.

³ On the large Dhupdal weir the following were the proportions used, the materials being measured out in open-topped boxes. This weir is about a mile long, and has an average height of about 25 feet and an average mean

When mixed by hand the dry aggregate shall be placed in heaps not exceeding 3 cubic feet in size, and shall be thoroughly mixed dry. It shall then be well watered and to it the mortar shall be added, and the two shall be thoroughly incorporated together by shovels until each particle of aggregate is completely coated with mortar, and the mortar is uniformly distributed throughout the mass. As little water as possible shall be used, and the concrete shall be as stiff as practicable. No more concrete shall be mixed than can at once be laid in place, and when Portland cement is used it shall be mixed only just before the concrete is laid, as the cement begins to set very quickly.

iv. Laying.—The concrete shall be carefully deposited on its place, not thrown thereon, in layers not exceeding, when

thickness of about 16 feet; it was constructed with masonry facings and concrete hearting, of which latter nearly 1½ million cubic feet were laid.

	Box Meass	ure.	
Materials.	Internal dimensions. Inches.	Capacity. Cubic feet.	Parts by volume.
I. Hydraulic Mortar Concrete.			
(a) Aggregate (b) Mortar (2 of sand to of	24 × 16 × 12	2.66	100
lime)	16 × 16 × 81	1.55	46
II. GAUGED MORTAR CONCRETE.			
(c) Cement (replacing an equal bulk of lime in the mortar) (a) and (b) Otherwise as in I.	9 × 8 × 2·8	0.13	4 1
III. PORTLAND CEMENT CONCRETE.			
(a) Aggregate (b) Sand (c) Cement	24 × 16 × 12 16 × 16 × 12 12 × 94 × 6	2.66 1.77	100 (or 7) 66.8 (or 4.66)
	^ 9 !	0.40	15 (or 1)

In the Chatham Dockyard Extension Works, the volume of the cement used in thick walls was only one-twelfth that of the walls.

¹ The back strokes of the shovel are particularly useful in forcing the aggregate into the mortar.

consolidated, 6 inches in depth, and preferably in ones of 4 inches in depth, which shall be constructed one on top of the other to form a single course of as great a thickness as practicable but not exceeding 2 feet. Whenever possible, the top of the concrete course shall be formed half a course below that of the masonry against which it abuts so as to break joint with it in order to secure better bond and greater water-tightness. Each layer shall at once be well rammed with heavy iron or wooden rammers for as short a time as possible. The ramming shall not cease until the whole mass is thoroughly consolidated, free from voids throughout and on its surface, but shall on no account be continued after the mortar creams up to the surface or the concrete has begun to set. The concrete shall be a perfectly homogeneous, water-tight mass, and shall adhere firmly and solidly to all surfaces against which it abuts, which should for this purpose be cleaned, washed, and plastered with mortar just before the concrete is placed against them. Any portions of the concrete which may become dry or partially set before it is laid or consolidated shall be rejected.

After every course is completed the concrete shall be kept damp and perfectly clean. If more than two days clapse before the next course is laid, the surface of the old one shall be slightly picked up to secure bond, watered, and then grouted. All interstices on the surface and sides of the old course shall be grouted with mortar just before the new course is laid on it, and wherever interstices are found unavoidable in the new course, a little additional mortar shall at once be worked in and the whole properly consolidated. Every endeavour shall be made to obtain a perfectly sound, water-tight mass. At vertical intervals of from 3 to 5 feet the concrete shall be allowed to set partially, and shall then be flooded with water for at least one day, care being taken that the flooding is delayed or restricted in amount so as not to wash out the lime.

v. Work included in the Rate.—Unless otherwise specified, the rates entered on the schedule shall include the cost of mixing, lifting, placing, ramming and watering, and the provision of wheeling planks, barrows, tools and all appliances required to complete the concrete in position.

¹ From time to time small trial pits should be excavated in the concrete to test that it has been properly formed and consolidated, and is properly setting.

19. Coursed Rubble Masonry.1

- i. Height of Courses.—The stones shall be laid in horizontal courses not less than 7 inches in height, and all courses of the same height unless otherwise specified, in which case no course shall be thicker than any course beneath it.
- ii. Dressing.—The face stones shall be squared on all joints and beds. The beds shall be hammer or chisel dressed, true and square, for at least 3 inches back from the face, and the joints for at least 1½ inches. The face of the stones shall be hammer dressed, and "bushing" shall not project more than 1 inch from the face.
- iii. Joints.—No pinnings shall be allowed on the face. All side joints shall be vertical and beds horizontal, and no joint shall be more than $\frac{3}{4}$ inch in thickness.
- iv. Size of Stones.—No face stone shall be less in breadth than its height, nor shall tail into the work to a length less than its height, and at least one-third of the stones shall tail into the work at least twice their height, or in thick walls, three times their height.
- v. Through Stones.—Through stones shall be inserted from 5 to 6 feet apart in the clear in every course, and shall run right through the wall when it is not more than 2 feet thick. When the wall is thicker, a line of two or more headers or stones shall be laid from face to back and shall overlap each other at least 6 inches.
- vi. Break of Joint.—Stones shall break joint at least half the height of the course.
- vii. Quoins.—The quoins shall be of the same height as the course in which they occur, and shall be formed of header stones at least $1\frac{1}{2}$ feet long, laid lengthwise alternately along each face. They shall be laid square on their beds, which shall be fairly dressed to a depth of at least 4 inches.
- viii. Interior of Wall.—The interior of the wall shall consist of flat-bedded atones carefully laid on their proper beds and solidly bedded in mortar. Wetted spauls shall be wedged in vertically wherever necessary, care being taken that no dry work or hollow spaces shall be left anywhere in the masonry. The face work and backing shall not be levelled up at each course by the use of chips.

¹ This class of work is suitable for small weir walls, outlet head walls, lining walls, and for the toe wall and crest wall of the dam embankment.

ix. Interior Face.—The work on the interior face shall be precisely the same as on the exterior face, unless the former is not exposed to view, in which case the side joints need not be vertical.

20. Rough-coursed Rubble Masonry.1

This description of masonry shall be similar to coursed rubble masonry (vide Specification 19) except that the face stones shall be built in roughly level courses and not in exactly level ones,

21. Uncoursed Rubble Masonry.2

- i. Dressing.—The stones shall be set in the work as received from the quarry, and without further dressing of any sort than that of knocking off weak corners and edges with the mason's hammer.
- ii. Bond and Laying.—The stones shall be carefully laid so as to break joint as much as possible, and shall be solidly bedded with close joints, none of which shall exceed \(\frac{3}{4} \) of an inch in thickness. Spauls shall be wedged into the work as may be necessary to avoid thick, vertical joints of mortar and to increase the weight of the work. No dry work or hollow spaces shall be allowed anywhere; every stone, whether large or small, shall be set flush in mortar, smaller stones in the filling being carefully selected to fit roughly the interstices between the larger ones.
- iii. Hearling Stones.—A fair proportion of the stones used in the hearting shall be of large size. Thirty per cent. of them shall exceed three-quarters of a cubic foot in content.
- iv. Face Stones.—The face stones shall be laid, as far as possible, without pinnings in front, and they shall be selected from the mass of quarry stone for greater size, good beds, and uniform colour. They shall be laid so that they shall tail back and bond well into the work, and shall not be of greater height than either their breadth or face, or length of tail in the work. Fifty per cent. of these stones shall be of 1 cubic foot in content, and 25 per cent. shall be headers tailing into the work at least 15 inches.
 - v. Through Stones.—One through stone shall be provided for

¹ This class of work is suitable for smaller and cheaper works than those constructed of coursed rubble, and for the upstream casing of the head wall in the centre line of the dam (*vide* Specification 26 (v.)).

in the centre line of the dam (ride Specification 26 (v.)).

This class of work is suitabl: for low, unimportant walls which have to be constructed cheaply, for the filling of spandrels of arches, and for the hearting of the head wall in the centre line of the dam (ride Specification 26 (vi.) of this Appendix).

every square yard of facing. It shall be at least half a square foot in area of face, and shall run back into the work at least 2 feet, or be the full depth of the work if that is less than 2 feet. If the wall be over 2 feet thick, a line of headers overlapping each other 6 inches shall be laid right through the wall.

vi. Quoins.—The quoins, unless otherwise specified, shall be of selected stone, neatly dressed with the hammer or chisel to form the required angle, and laid header and stretcher alternately. No quoin stone shall be less than 1 cubic foot in content.

22. Ashlar—Rough-tooled.1

- i. Dressing.—The faces exposed to view shall have a fine dressed chisel draft $\frac{3}{4}$ of an inch wide all round the edges, and be rough-tooled between the drafts and on all beds and joints, full, true and out of winding, if the surfaces are plane, or to uniform curves or twists if required by the design. The course lines shall be truly horizontal and the side joints vertical throughout.
- ii. Joints.—The joints shall be set in ordinary or gauged mortar as may be specified, the beds and joints being in no case more than inch in thickness, and all visible edges shall be quite free from unsightly chippings. Each stone when laid shall be struck with a maul to bring it to a solid bearing both as to bed and joint.
- iii. Size of Stones.—The stones shall be laid in regular courses not less than 12 inches in height, and all courses shall be of the same height, unless otherwise specified, in which case no course shall be thicker than any course below it. No stone shall be less in breadth than in height, nor less in length than twice its height.
- iv. Bond.—The face stones shall be laid header and stretcher alternately, unless otherwise ordered, the headers being arranged to come as nearly as possible in the middle of the stretchers above and below. The stones shall break joint on the face for at least half the height of the course, and the bond shall be carefully maintained throughout the wall.
- v. Through Stones.—In walls $2\frac{1}{2}$ feet thick and under the headers shall run right through the wall; for thicker walls a line of headers shall be laid from face to back and these shall overlap each other at least 6 inches.
 - vi. Flat Pavements of Outlet Culverts .- For these the largest

¹ This class of work is suitable for the sills, lintels, and cut-water caps of large sluices, and for the flat pavement of outlet culverts (vide Chap. IV., paragraph 202(d)).

stones easily procurable shall be used and shall be of the depth specified. They shall be set in cement mortar and shall break joint as much as practicable. They shall be laid with their length parallel to the axis of the culvert, with a longitudinal fall, as specified or shown in the drawings, and the side stones shall be well keyed under the arch ring.

23. Block-in-Course Facing.1

- i. Dressing.—The face of the stones shall be left rough (but no projection shall exceed $1\frac{1}{4}$ inches) without chisel draft, except at quoins, where a $\frac{3}{4}$ -inch draft shall be given. The interior of the beds and joints shall be rough-tooled without projections and the backs of the stones may be left rough as they come from the quarry.
- ii. Joints.—The joints and beds of all stones shall be truly vertical and horizontal. The joints shall be rough-tooled true and square for at least 4 inches, and the beds for at least 6 inches, from the face, and for these distances the joints shall not exceed 1/2 inch in thickness. Each stone shall be set full in ordinary mortar and shall be well malletted to bring it to a solid bearing both as to bed and joint.
- iii. Size of Stones.²—The height of the courses shall not be less than 7 inches, and all courses shall be of the same height, unless otherwise specified, in which case no course shall be thicker than any course below it. No stone shall be less in breadth than in height, nor less in length than twice its height, unless otherwise specified.
- iv. Break of Joint.—Stones shall break joint at least half the height of the course.
- v. Headers.—These shall be spaced 5 feet apart clear, and in each course each shall be spaced one third of this interval apart from the header below it in the lower course, so that in every fourth course the headers shall be vertically over those of the third course below them. The headers shall run quite through the backing in walls 2½ feet thick and under and in thicker walls

¹ This class of work is suitable for the facing of important weirs and outlet head walls.

² On the Dhupdál weir the height of the courses was uniformly 9 ins., the length of the stone on the face 12 ins., and its depth in the work 16 ins.; at 5 feet apart clear were headers 2 ft. 4 ins. long. The joints were ½ in. wide for 3 ins. and the beds for 5 ins. from the face. The minimum break of joint was 5 ins. Concrete was filled in between the masonry facings which were only one stone thick.

a line of headers shall be laid from back to face, and shall overlap each other at least 6 inches. The backing, if of masonry, shall be carried up simultaneously with the face work.

24. Copings, String Courses and Quoins.

- i. Copings.—These shall be in as long stones as are easily obtainable, but not less than 18 inches in length, and shall break joint with the stones in the course below.
- ii. String Courses.—These shall tail into the work to such depth as the Engineer shall direct. The projecting portion only shall be paid for as special work.
- iii. Quoins.—These shall be laid header and stretcher in alternate courses. They shall ordinarily be of the full height of one course, but if so ordered by the Engineer, may be of the height of two courses.
- iv. General.—All these classes of work shall be fine-tooled, rustic-faced, or as may be directed by the Engineer, and shall be dressed exactly to template. The stones shall be dressed on all beds, joints and faces full, true and out of winding, if the surfaces are plain, or to uniform curves or twists if required by the design. They shall be set in fine mortar, which shall, if directed, be gauged with cement; the beds and joints shall in no case exceed 1 inch in thickness, and all visible edges shall be quite free from unsightly chippings.

Each stone when laid shall be struck with a maul to bring it to a solid bearing both as to bed and joint.

All mouldings shall be worked to templates cut out of sheet zinc or tin.

All copings shall, if ordered by the Engineer, be joined together by dowels or cramps, which shall be of the hardest and toughest stone procurable, or of copper, and shall be set in pure cement. Iron cramps shall not be used.

25. Block-in-Course Arching.1

i. Arch Stones.—These shall in all cases be of the entire thickness of the arch, and shall be carefully and accurately wrought to give the proper radiating joints, that is, the arch stones shall be dressed full and true to their proper shapes, with the necessary summering, twist or winding, and shall be carefully set in good fine mortar.

¹ This class of work is suitable for the arches of the weir sluices, and for the ring of the outlet culvert.

- ii. Dressing Beds.—The intrados, joints and beds shall be fair-tooled and left full; the last or keying course shall be accurately fitted and driven into its place with heavy wooden beaters.
- iii. Face Stones.—The face stones shall be tooled, or rock-faced, with or without chamfers or mouldings, as may be specified or shown on the drawings.
- iv. Size of Stones.—The arch stones shall not be less than 7 inches on their least dimension, and shall break joint at least 7 inches. In arches up to 2 feet in thickness the stones shall all be of the full thickness of the ring. In arches from 2 feet to 3 feet in thickness, the stones shall be laid header and stretcher alternately, all the headers being of the full depth of the ring and not more than two stretchers going to make up the thickness of the ring. Exact uniformity will be required in the thickness of each course of arch stones.
- v. Joints.—The bed joint shall be perpendicular to the tangent of the curve of the arch at each point, the side joint shall be at right angles to the face and bed joints, and the thickness of the joints shall not exceed ? inch.
- vi. Centres.—Arches shall be built on proper centres approved by the Engineer, and no centres shall be eased or struck without his permission. During the progress of the work care shall be taken to distribute the load on the centres in order to obtain a true curve at the completion of the work. The rate for arch work shall include the provision of proper centres and their setting up, easing and removal.
- vii. Removal of Bad Work.—If any arch settles unduly, or becomes unsightly through carelessness, bad workmanship, or bad material, it shall be removed and rebuilt at the Contractor's expense.
- viii. Pointing.—The mortar of the joints on the face or soffit of the arch shall be raked out as soon as the centering is removed and shall be neatly pointed with good mortar or cement. (Vide Specification 17 (x.)).
- ix. Measurement.—The measurement of the arch work shall be the mean of the lengths of the extrados and intrados, the full breadth of the arch and the full thickness of the stone put into the arch.
 - 26. Head Wall in the Centre Line of the Dam.1
 - i. General Construction.—The masonry shall consist of heavy,

¹ This specification is suitable for large masonry dams.

sound, hard and tough stone of a durable nature, thoroughly bedded in mortar, consisting of hydraulic lime or cement and clean sharp sand, and shall be of the following classes:—

- (a) Downstream casing of block-in-course facing, backed with coursed rubble masonry; or it may consist of coursed rubble masonry throughout.
- (b) Upstream casing of coursed or rough-coursed rubble masonry.
 - (c) Hearting of uncoursed rubble masonry or concrete.
- ii. Face Casings.—The downstream casing shall average 1 foot to 3 feet in thickness, and shall consist of a facing of block-incourse masonry (vide Specification 23), laid at right angles to the plane of the face, and a backing of coursed rubble masonry (vide Specification 19), or shall be entirely of coursed rubble masonry as may be specified. The height of the courses shall not be less than 7 inches, and no stone shall be less in length or breadth than 1 foot, or less in breadth than 1½ times its depth.

The upstream casing shall be of coursed rubble masonry backed by rough-coursed rubble masonry, or shall be entirely of rough-coursed masonry (vide Specification 20).

Both the upstream and downstream casings shall be laid carefully to profile and shall be of especially selected stones, carefully fitted together without pinnings on the face.

- iii. Joints and Beds in Face Casings.—The joints of all stones in the facings shall be truly vertical, and if not of rough-coursed masonry, the beds shall be truly normal to the plane of the face, and shall be rough-tooled true and square for at least the same distance in from the face as the thickness of the course in which they occur, but the face and back of the stones may be left rough. All stones shall be bedded and set full in mortar, and each shall be securely driven on to the bed and adjacent stone by a heavy wooden maul.
- iv. Break of Joint.—The stones in alternate layers shall break joint and bond in every direction, the break of joint on the face being equal at least to half the height of the course.
- v. Coursed or Rough-coursed Rubble Backing.—The facings shall bond well with the coursed or rough-coursed rubble backing, as the case may be, each stone of which shall be the full depth of the course and shall have parallel beds: the side joints may be of any form. The stones of the backing shall be fitted together as closely as is possible without much dressing. All stones shall be

well wetted just before they are laid in mortar, and shall then be driven with a light mallet down on to and into contact with the adjacent stones. The bulk of the rubble backing shall be left rough so that the stones may bond into the hearting of the wall.

vi. Hearting of Uncoursed Rubble Masonry.—Where the interior of the wall may be subjected to a pressure of more than 60 lbs. to the square inch, the hearting shall be of uncoursed rubble masonry (vide Specification 21), which shall consist of flat-bedded stones carefully laid on their proper beds and bedded full in mortar. Chips and spauls shall not be put under the stones, but shall be wedged vertically into the side joints. The surface of the rubble shall not be brought to a uniform level, but shall be left rough and uneven, and the stones shall be bedded and driven down on to each other with a light mallet. The hearting shall be laid and bonded closely into the casings as soon as possible after the latter are built, and shall extend horizontally between the inner edges of the casings.

vii. Hearting of Concrete.—Where the interior of the wall will not be subjected to a pressure exceeding 60 lbs. to the square inch, the hearting may be of concrete (vide Specification 18), and as many large stones (vide Specification 13) as possible shall be properly embedded in it to increase its weight and to improve its bond. Its bottom layer shall extend horizontally across the whole width of the wall between the casings, i.e., the base of the concrete hearting shall not be a truncated wedge in cross section following the line of the limit of pressure permissible.

viii. Watering.—All stones used in the work shall be well cleaned and soaked in water before being laid, and all masonry and concrete work shall be kept wet for at least a month or until the next course is laid on it (vide Specification 15).

IV. IRONWORK.

27. Sluice Gates, complete.1

i. Extent of Contract.—The contract includes the provision of the whole of the finished material, in accordance with the detailed plans and following specifications, for 10 sluice gates with lifting rods and gear complete, and for its conveyance by rail and road to the site of the works and for its erection complete in place.

 $^{^1}$ Specification for the 7 ft. \times 4 ft. 6 ins. sluice gates for the Dhupdal Storage Reservoir (ride Plate II.): this is given as a type specification to be modified according to the actual conditions of the work concerned.

ii. Sluice Openings.—The sluice openings are 7 feet by 4 feet 6 inches in the clear and the bottom of the sluice vents is 36 feet below the level of the top of the head wall on which the screw gear bears. The maximum depth of water above the sills of the sluices is 29 feet.

iii. Sluice Gate Frames.—The frames on which the sluice gates will work are to be of cast-iron as shown on the detailed plan: they are to be 15 feet 2 inches long and generally 5 feet 8 inches wide, and are to be arranged to allow of a vertical travel of the gates of 7 feet 3½ inches from the lowest position. The frame castings are each to be in one piece, and before the gun-metal faces are pinned on are to be planed for their whole length and width over which the gates will bear when closed or slide when opened. If on account of their length the frame castings should not be sufficiently straight when cast to take a firm bearing on the masonry at the back, they are also to be planed at the back to ensure such bearing.

iv. Sluice Guides.—The sluice guides are to be of cast-iron and are to be 12 inches shorter at the top and 6 inches shorter at the bottom than the sluice gate frames. They are to have a planed face for their whole length where they bear upon those frames to which they will be bolted by bolts countersunk at the back as shown on the drawings. They are also to be planed on the face projecting over the gates so as to allow a clearance of only $\frac{1}{6}$ inch to the gate.

v. Fixing Sluice Gate Frames.—Each frame with its guides is to be secured in position on to the masonry by 8 steel wedges (4 on each side of the gate) and by 4 holding-in bolts 1½ inches diameter (2 on each side of the gate) with anchor plates as shown on the plan.

vi. Gun-metal Sliding Faces.—The frames are to be fitted the full length longitudinally at both sides and transversely at the top and bottom of the opening with gun-metal faces $3\frac{1}{2}$ inches wide by $\frac{5}{16}$ inch finished thickness which are to be pinned on to the previously planed cast iron faces by gun-metal pins $\frac{5}{16}$ inch diameter spaced longitudinally $1\frac{1}{2}$ inches apart zig-zag as shown on the plan. After they have been pinned on, the gun-metal faces are to be finished true by being planed again and then filed and scraped.

vii. Sluice Gates.—The sluice gates are to be of the best cast iron 7 feet 7 inches long by 5 feet 1 inch wide, and are to be of a buckled form stiffened inside by vertical and horizontal ribs.

The general thickness of the body of the gates is to be 1 inch with bearing faces thickened as shown on the plan. The bearing faces of the gates are first to be planed and then to be fitted with gunmetal faces as described for the frames. The gates are to be tried for water-tightness by placing each on its own frame and the faces in sliding contact are to be scraped perfectly true. The back of each gate is to be cast with a cored pillar, as shown on the plan, so as to take the lower end of the lifting rod to which the gate is attached. The core is to be slightly oval in section in order to give play in a direction at right angles to the working plane of the gate, so that the water pressure may assist in keeping the gate tight, but there is not to be any appreciable play in a direction parallel to the working plane of the gate—that is to say, the lifting rod will nearly fit the core in that direction.

viii. Lifting Rods.—The lifting rods will be in two lengths each of which will be of the best mild steel. The lower length is to be 18 feet 3 inches over all by $3\frac{1}{8}$ inches diameter; it is to have a collar forged solid to bear at the top of the gate, and at the bottom is to be screwed and fitted with a round nut through which a pin is to be passed so as to secure the rod tightly to the gate. The top end will be swelled to $4\frac{1}{2}$ inches diameter and will be turned and planed to the form shown on the plan for the joint with the upper length.

The upper length is to be 21 feet $5\frac{1}{2}$ inches over all, of which the lower 9 feet $11\frac{1}{2}$ inches is to be made 3 inches square and to have its bottom end swelled and machined to form the joint with the lower length. The upper 11 feet 6 inches is to be made $3\frac{1}{6}$ inches outside diameter and for a length of 8 feet 9 inches from the top is to have cut in it a square thread screw of $\frac{3}{4}$ inch pitch.

ix. Joint of the Lifting Rod.—The upper and lower lengths of each lifting rod are to be connected by a joint, as detailed on the plan, on which they are shown with their ends swelled to $4\frac{1}{2}$ inches diameter, and planed to allow of them being half-lapped over each other. The ends thus fitted together are to be covered by a cast iron collar 1 foot $6\frac{1}{2}$ inches long and 8 inches external diameter, which is to be bored to fit the turned ends of the rod and to be secured to them by 5 turned bolts of $1\frac{1}{8}$ inch diameter driven into holes bored through the collar and ends of the rod at one operation. The joint has been calculated to give to each rod a slightly greater area through any section of it than its ordinary diameter

of $3\frac{1}{8}$ inches, and the number and size of the bolts have been calculated on the same basis.

x. Rod Guides.—Two cast iron guides, 11 feet 3 inches apart centres, are to be provided for each lifting rod to keep it in a vertical plane. They are each to be bolted by 4 holding-in bolts 2 feet 3 inches long and 1 inch diameter to a block of stone smoothly dressed and accurately set in position. The lower guide is to be bored to 3½ inches diameter, and its hole will thus be ½ inch wider than the rod which passes through it. The upper guide is to have a planed hole 3½ inches square to guide the rod and to prevent any torsion from its screw being taken by the rod below this guide.

xi. Lifting Gear.—The lifting gear of each gate is to consist of a cast iron standard bolted to a base plate, both being machined at the joint, with holding-down bolts running right through the masonry to the intrados of the arch below. There are to be four of these bolts each 8 feet 4½ inches long and 1½ inches in diameter, with jibs at the lower ends driven up to two washer plates, each 2 feet 8 inches by 9 inches by ½ inch, abutting against the intrados, one on each side of the lifting rod, and the bolts are to have nuts at their upper screwed ends.

The standard is to be turned and bored at the top to receive a gun-metal nut machined all over. The nut is to have a single thrust collar 2 inches thick, and is to be secured to the standard by a cast iron cap turned and bored to fit and bolted to the standard. One of the bolts is to be specially forged with an eye, through which a chain can be passed and padlocked to prevent the movement when not desired of the four-armed wrought iron spanner, having a radius of 3 feet 9 inches, which is to be supplied to actuate the nut. The gate is to be raised or lowered by manual power applied to this spanner and transmitted through the gun-metal nut to the lifting rod and gate.

- xii. Tests.—The following tests are to be made by the Contractor at his own expense:—
- (a) Each gate is to be tested by dropping on to it a weight of 1 cwt. three times through a vertical fall of 5 feet on to an area of 16 square inches. The gate is to be supported only on its longitudinal bearing faces when thus tested, and the weight may be dropped on any part of its area clear of the bearing.
- (b) Each gate when supported only on its longitudinal bearing faces is to be subjected to a load of 15 tons, which is to be applied

on the longitudinal centre line of the back of the gate by means of levers, and will thus in effect be equal to a uniformly distributed load of 30 tons.

- (c) Each gate is to move evenly on its own frame and is to be tested before despatch to see that it does this.
- (d) Two sets of rods completely fitted together are to be tested with a compressive stress 50 per cent. in excess of the pressure which could be put on them by eight men turning the four-armed spanner of 3 feet 9 inches radius and nut previously described. If any part of the two sets of rods thus tested proves unsatisfactory, all the remaining rods are to be similarly tested, and any defective lengths there may be shall be rejected and replaced by ones which will stand the test. If, however, the first two tests are satisfactory in every way, the remainder of the rods need not be tested.

xiii. Erection.—Erection is to include the provision of all tackle of every kind required, and all labour, including the services of a European foreman, and the complete gates are to be handed over in thoroughly satisfactory working order. The masonry work in connection with them will be constructed separately from this contract by the Engineer.

1.R.

APPENDIX 19.

TABLES OF THE CROSS-SECTIONAL AREAS OF PUDDLE TRENCHES.

(Vide Chapter II., paragraph 92.)

Formula A = (B + SD)D.

Where A = the cross-sectional area in square feet;

B = the bottom-width in feet;

S = the ratio of the side-slopes to unity;

D = the depth in feet.

TABLE I.

Pottom-width = 10 feet; Side-slopes = $\frac{1}{4}$ to 1. A = (10 + 0.25 D) D sq. ft.

SQUARE FEET.

Depth					Decin	ıals.				
in Feet.	0.0	0,1	0.3	0.3	0.4	0.2	o•6	0.2	o.8	0.0
•	0.000	1,005	2,010	3.032	4.040	5'062	6.000	7,155	8.160	9,303
1	10-260	11.302	12.360	13-422	14-490	15-562	16-640	17-792	18-810	19-902
2	21,000	22 103	23'210	24'322	25'440	26.562	27.690	28.622	29.060	31,105
8	32-250	88-402	84-860	35-722	36-890	38-062	39-240	40-422	41-610	42-602
4	44 000	45 202	46,410	47.622	48.840	50.065	51,500	52.255	53.460	22,003
š	56-250	87-502	58-760	60-022	61-290	62-562	63-840	65-122	66-£10	67-702
6	60.000	70'302	71.610	72,055	74.540	75.262	76.890	78.222	79.260	8c 902
7	82-250	88-602	84-960	86-322	87-690	89-063	90-440	91-822	98-210	94-602
ė	c6.000	97'402	98 810	100'222	101.640	103.005	104,460	105 922	107'360	108.803
9	110-250	111-702	113-160	114-622	116-090	117-562	119-040	130-522	122-010	123-502
10	125'000	126,205	128.010	129.222	131,040	132,265	134 090	135.622	137'160	138.200
11	140-250	141-802	143-360	144-922	146-490	148 062	149-610	181-223	192-810	154-402
12	156.000	157'602	159'210	160.822	162'440	164,065	165 690	167'322	168.960	170.602
13	179-250	173-902	175-560	177-222	178-890	180-562	182-240	183-922	185-610	187-302
14	180,000	190'702	192'410	194 122	195'840	197.562	199,500	301,033	202,260	204 502
15	206-250	208-002	209-760	211-522	218-290	215-062	216-840	218-622	220-410	222-202
16	224 '000	225 802	227.610	229,422	231 240	233.065	234.890	236.223	238,260	240 402
17	242-250	244-102	245-960	247-822	249-690	261-562	253-440	255-322	257-210	259-102
18	261,000	262 902	264.810	266.222	268.640	270'562	272,490	274,422	276.360	278 302
19	280-250	282-202	284-160	286-122	288-090	290-062	292-040	291-022	296-010	296-002
20	300,000	302,005	304'010	306,055	308.010	310,065	312,000	314 122	316,160	318,303
21	320-250	322-302	324-360	326-422	328-490	880-562	832-640	884-723	336-810	338-002
22	341 '000	343,105	345,510	347'322	349,440	351.262	353.60	355 822	357'960	360,105
28	362-250	364-402	366-560	368-722	370-890	373 062	875-240	377-422	379-610	381-802
24	184 0:0	386 202	388.410	390.622	392 840	395,065	397.290	399.222	401 760	404 002
26	406-250	408-502	410-760	413-022	415-290	417-562	419-840	422-128	494-410	426-702
26	420,000	431'302	433'610	435 922	438'240	440'562	442.860	445 222	447 560	449 '902
27	452-260	484-602	456-960	459-322	461-690	464-062	466-440	468-822	471-210	473-608
28	476 oco	478'402	480 810	483.222	485.640	488 062	490,490	492'922	495 360	497.802
20	500-250	502-702	505-160	507-622	510-090	512-562	515-040	517-522	520-010	522-502
30	525 ℃0	527 502	530,010	532 522	535'040	537 562	540.000	542.622	545 160	547.702
81	550-250	552-802	555-360	557-922	560-490	563-062	565-640	568-222	870-810	573-402
32	576.000	578.602	581,510	583.822	586*440	589.062	591 690	594,355	596°960	200.602
83	602-250	604-902	607-560	610-222	612-890	615-562	618-240	630-932	623 610	636-302
34	629 '000	631 702	634*410	637 122	639.840	642.562	645.200	648.022	650.460	653 502
85	656-250	659-002	661-760	664-522	667-290	670-062	672-840	678-622	678-410	661-202
36	684 '000	686 802	689.610	692,422	695,540	698 062	7co 890	703'722	706.260	709'402
87	712-250	715-102	717-960	720-822	723-690	726-562	729-440	782-322	735-210	738-102
38	741'000	743'902	746.810	749 722	752'640	755'562	758.490	761 422	764 360	767 302
89	770-250	778-202	776-160	779-122	782-000	785-062	788-040	791-022	794-010	797-802
40	800,000	803'002	805.010	809,033	812 040	815.062	818.000	821,155	824.160	827 202

Note.—For bottom-widths differing from 10 feet, multiply the difference in bottom-width by the depth, and add or subtract the product, as the case may be, to or from the tabular quantities.

Table II. Bottom-width = 10 feet; Side-slopes = $\frac{1}{2}$ to 1. A = (10 + 0.5 D) D sq. ft.

SQUARE FRET.

Depth in					Deci	mals.				
Feet.	0.0	0,1	0'2	0.3	0'4	0.2	0.6	0.4	0.8	0.0
•	0,000	1 '005	2.020	3'045	4.080	5'125	6'180	7.245	8 320	9.40
1	10 500		12-720	18-848						
2	22,000		24'420	25'645						33'20
8	34-500		37-120	83-445	39-780	41-128			45-220	46-60
4	48.000			52.345				58'045	59'520	61'00
8	62-500		65-520	67-048	68-580	70.125	71-680	78-245	74-890	76-40
6	78.000		81.330	82.845	84'480			89'445	91,150	92.80
7	94-800	96-205	97-920	99-645	101-380	103-125	104-880	106-645		
8	113,000	113'805	115.620	117'445	119,580	121,152	122,080	124 845	126.720	
9	130-500	132-406	184-320	136-245	138-180	140-128	142-080			
10	150,000	152'005	154 020	156*045	158.080	160'125	163,180	164*245		
11	170-500		174-720	176-845					187-630	
12	192,000	194,502	196,430	198.645		203'125	205,380			
13	214-500	216-805	219-120	221-445	223-780	226-125	228-480			235-60
14	238.000			245 245		, , ,	252.280			
18	262-500	265-005	267-520	270-045	272-580	275-125	277-680	280-245	282-820	265-40
16	288 000		293,550	295.845		301,132	303.480		300,150	311.80
17	314-500	817-205	819-920	322 645	325-380	338-125	330-880	333-645	336-E20	339-20
18	342,000		347'620	350'445			358 980	361 ·845	364 720	367.60
19	870-500	373-405	876-320	379-245	382-180	385-125	388-080	391-045	391-020	397 00
20	400,000		406.020	409 045		415'125	418.180	421.245	424 320	427.40
21	430-500	433-665	436-720	430-845	442 980	446-125	449-280	482-445	487'920	458-60
22	462,000		468.420	471 645	474 880	478'125	481,380	484 645	821-220	491'20
23	#94-500	197 805	501 120	504·445 538·245	507*780 541 680	511-125	814-480	517-845		594-60
24	528'000	531,402	534.820			545'125	548.280	552'045	555*520 500-830	259°00
25	562-500 598 000	566-005 601-605	569-520 605-220	578-045 608-845	576-580 612-480	580-125 616-125	583-680 619-780	587-245	627'120	630.80
26	634-500	638-208	641-920	645-645	649-380	663-125	656-880	623'445 680'648	664-420	666-20
27 28	672'000	675'805	670,650	683'445	687.280	601,152	694'980	698.845	702 720	706.60
20	710-500	714-405	718-326	722-245	726-180	730-125	734-080	738:045	742-000	746-00
	750'000	754 005	758 020	762 045	766 080	770'125	774 180	778 245	782'320	786'40
30 81	790-500	794-605	798-720	802 845	806-980	811-125	815-280	819-445	822-620	827-60
32	835,000	836.502	840,430	844 645	848.880	853,152	857 380	861.642	865.030	870.30
83	874-500	878-805	883-120	887-448	891.780	896-128	900-480	904-848	909-220	918-60
34	018,000	922,402	926.820	931 245	935.680	040'125	944 580	949 045	953'520	958 00
35	962-500	967-008	971-520	976-048	980-580	985-125	969 680	994-948	998-820	1,003-40
36	1,008,000		1,017 220	1,021 845	1,026'480	1,031 125	1,035.780	1,040 445	1,045 120	1,049 80
37	1.084-500	1.059-205	1.063-930	1.068-645	1.073-380	1.078-125	1,082 880	1.087-645	1.092-420	1.097-200
38	1,102'000		1,111.620	1,116'445	1,121 280	1,126 125	1,130'980	1,135.845	1,140'720	1,145 60
30	1.150-500	1.156-406	1.160-320	1.168-245	1.070 180	1.175-125	1.180-080	1.185-045	1,190-020	1,195.00
40	1,200 000		1,210,050	1,215'045	1,220.080	1,225'125	1,230'180	1,235'245	1,240'320	1,245'40

Norm.—For bottom-widths differing from 10 feet, multiply the difference in bottom-width by the depth, and add or subtract the product, as the case may be, to or from the tabular quantities.

APPENDIX 19.

TABLES OF THE CROSS-SECTIONAL AREAS OF PUDDLE TRENCHES.

(Vide Chapter II., paragraph 92.)

Formula A = (B + SD)D.

Where A = the cross-sectional area in square feet;

B =the bottom-width in feet;

S = the ratio of the side-slopes to unity;

D = the depth in feet.

TABLE I.

Bottom-width = 10 feet; Side-slopes = $\frac{1}{4}$ to 1. A = (10 + 0.25 D) D sq. ft.

SQUARE FEET.

Depth					Decin	als.	•			
in Feet.	o .o	0,1	0'2	0.3	0'4	0.2	0.6	0.2	018	0.0
0	0,000	1'002	2,010	3,055	4,040	5'062	6.c90	7'122	8-160	ð.30 2
1	10-260	11.302	12-360	13-422	14-490	15-562	16-640	17.732	18-610	19-903
2	21.000	22,103	23'210	24'322	25'440	26.265	27.690	58.653	29,960	31,103
8	22-250	23-402	34-560	35-722	36-890	38-062	39-240	40-422	41-610	42-003
4	44'000	45 202	46'410	47.622	48.840	50.065	21,300	52.25	53 760	22,005
Š	56-250	87-502	58-760	60-022	61-290	62-562	63-840	65-122	66-410	67-701
6	69'000	70 302	71.610	72.922	74.540	75 562	76.890	78.555	79.560	8c cos
7	82-250	83-602	84-960	36-322	87-690	89-063	90-440	91-822	93-210	96-983 108 802
8	66.000	97'402	98 810	100,355	101.640	103,005	104 450	105,033	107.360	198-882
9	110-250	111-702	113-160	114-622	116-090	117-562	119-040	130-822	122-010	138.205
10	125'000	126.203	128,010	129.222	131,040	132.262	134,000	135.622	137 160	196-00
11	140-250	141-802	143-860	144-923	146-490	148 062	149-610	181-222	182-810	
12	156.000	157.602	159'210	160.822	162'440	164'62	165.690	167'322	168.960	170 602 187-302
13	172-250	173-902	175-560	177-222	178-890	180-862	182-240	183-922	185-610 202 760	
14	189,000	190.402	192,410	194,155	195.840	197'562	199,500	201,023		204,203
15	206-250	208-002	209-760	211-522	218-290	215-062	216-840	218-622	238 560	240'401
16	224 '000	225.802	227 610	229,422	231 240	233.062	234.890	236.722		220-162
17	242-250	244-102	245-960	247-822	249-690	261-562	253-440	255-332	257-210 276 360	278 30:
18	261.0co	262 902	264.810	266.222	268.640	270.263	272,490	274 422		290-001
19	280-250	282-202	284-160	286-122	288-090	290-062	292-040	294-022	316.160	318.300
20	3co.000	305,005	304.010	300.055	308.040	310'062	312 000	314'122 334'722	336-810	310 200
21	320-250	322-302	324-360	326-422	328-490	830-562	332-640	355 822	357 960	360,105
22	341,000	343 102	345 210	347'322	349 440	351.262	353.650 378-240	377-422	379-610	301-800
23	362-250	364-402	366-560	368-722	370-890	373-062		390 522	401.400	404 002
24	384 0.00	386.303	388.410	390.622	392.840	395.062	397 290	422-122	494-410	4206-782
25	406-250	406-502	410·760	418-022	415.290	417-562	419-840 442-850	445 222	447.200	449 902
26	429,000	431,305	433.610	435'922	438.240	440.262	442 050	468-822	471-210	473-662
27	452-260	454-602	456-960	459-322	461-690	464-062	490 490	492,053	495'360	497.502
28	476'000	478.402	480 810	483.555	485.640	488 062		517-522	520-010	532-862
29	500-250	502-702	505-160	507-622	510-090	512-562	515-010 540 000	542 622	545 160	547.702
30	525 ℃0	527.502	530'010	532 522	535'040	537 562 568 062	565-640	568-222	570-810	573-104
31	850-250	552-802	555-360	557-922	860-490	589.062	201,000	594 322	596,060	599 60≥
32	576.000	578.602	581,510	583.822	586'440	615-662	618-240	620-922	623 610	636-303
83	602-250	604-902	607-560	610-222	612-890		645'290	648.055	650.460	653.502
34	629 000	631.402	634,410	637.122	639.840	642'562 670'062	672-840	678-622	678-410	053 3C
35	686-280	689-002	661-760	664-522	667-290	608.003	200.800	703 722	700,200	200,403
36	684 000	686.802	689.610	692,422	695,540	726-562	729-440	732-323	735-210	739-100
87	712-250	715-102	717-960	720-822	752.640	755 562	758 490	761 422	764,360	267.303
38	741'000	743'902	746.810	749 722	752 040 782-090	785-062	788-040	791-022	794-010	797-088
89	770-250	778-202	776-160	779-122	813,040	815 062	818.000	831,133	824 160	827 32
40	800,000	803.003	802.010	809,055	912 040	015 002	010 000			1,
	l	l	<u> </u>	<u> </u>	<u>' </u>		<u>'</u>	<u>'</u>		<u> </u>

Note.—For bottom-widths differing from to feet, multiply the difference in bottom-width by the depth, and add or subtract the product, as the case may be, to or from the tabular quantities.

TABLE II.

Bottom-width = 10 feet; Side-slopes = $\frac{1}{2}$ to 1. A = (10 + 0.5 D) D sq. ft.

SQUARE FEET.

Depth					Deci	mals.			•	
in Feet.	0.0	0,1	0,3	0,3	0.4	0.2	0.6	0'7	0.8	0,0
	0,000	1 '005	2'020	3'045	4'080	5,152	6.180	7*245	8.330	9'405
1	10 500	11-606	12-720	13-848	14-960	16-125	17-280	18-445	19-620	20 800
2	23,000	23.502	24,420	25.645	26.880	28.122	29.380	30'645	31 920	33,502
8	34-500	35-805	87-120	38-445	39-780	41-125	42-480	43-845	45-220	46-600
4	48.000	49.405	50.820	52 245	53.680	55,152	56.280	58*045	59,220	61.005
5	62-500	64-006	65-520	67-045	68-580	70.125	71-680	73-245	74-820	76-406
6	78.000	79.605	81,350	82.845	84.480	86.122	87.780	89*445	91'120	92.805
7	94-500	\$6-205	97-920	99-645	101-380	103-125	104-880	106-648	108-420	110-205 128-605
8	112,000	113.802	115.620	117'445	119,580	121 125	122'980	124 845	146-020	148-006
9	130-500	182-405	134-320	136-245	138-180	140-125	142-680	144-045	166,350	168'405
10	150,000	152'005	154 020	156 045	158 080	160 125	165,180	164.542	187-630	180-806
11	170-500	172-605	174-720	176-845	178-980	181-125	183-280	188 445	200,030	212,302
12	192 000	191,502	196.420	198.645	200.680	203'125	205,380	207 645	233-220	286-006
18	214-500	216-805	219-120	221-445	223-780	226-125	228:480	230-845	257'520	260 005
14	238.000	240'405	242.820	245 245	247'680	250'125	252,280	255'045	282-820	268-106
15	262-500	265-005	267-520	270-015	272-580	275-125	277-680	290-245	300,130	311,802
16	288.000	290'6 05	293'220	295.845	298.480	301,152	303,480	306 445	336-430	339-206
17	814· 50 0	817-205	319-920	322 648	325-380	328-125	330-880	361 845	364 720	367 605
18	342'000	344 805	347'620	350 445	353.580	356,152	358.080	301 045 391-045	394-020	297 005
19	870-500	873-408	876-320	379-248	382-180	385-135	418,180	421'245	424'320	427 405
20	400,000	403 005	406,050	409 045	412'080	415'125	449-280	482-445	485-620	488-805
21	430-500	433-665	436-790	439-845 471-645	442 980 474 880	446·125	481,380	484 645	487 920	491'205
22	462,000	465 205	468.420				514·480	517·845	521-220	824-606
23	494-500	497 - 805	501-120	504·445 538·245	541 680	511-125	548.280	552'045	555'520	559'005
24	528.000	531 405	534.820		541 000 576-580	545°125 880-125	583-680	587-248	590-820	994-408
25	562-500	566-008	569-520	573-045 608-845	612,480	616,152	619.480	623'445	627.130	630.805
26	598,000	601.602	655'220	645-648	649-380	663-125	656-880	660-645	664-420	668-205
87	634-500	638-205		683'445	687.280	601,152	694,080	698.845	702'720	706.602
28	672.000	675.805	679'620 718-326	722-248	726-180	730-125	734-080	738-045	742-020	748-005
29	710 500	714-405		762 045	766 080	770 125	774'180	778 245	782'320	786.405
30	750,000	754 005	758'020 798'720	902 045 802 845	806-980	811-125	815-280	819-445	828-620	827-808
31	790-500	794-605		844.645	848.880	853,152	857.380	861.645	865 920	870'205
32	832 000	836.502	840'420	887·448	891.780	896-125	900-480	904-845	909-220	912-605
33	874-800	878-805	983-120 926-820	931 245	935.680	040'125	944'580	949'045	953.250	958 005
34	018,000	922,402	971-520	931 245 976-048	935 000	988-125	989 680	994-948	908-890	1.003-406
85	962-500	967-005	1,017,530	1,021 845	1,026,480	1,031 125			1,045'120	1,049 805
36	1,008.000	1,012 605	1.063-920	1,068-645	1.073-380	1.078-125	1,062 880	1,087-645	1.092-420	1.007-205
87	1,084-500	1,069-206 1,106,805	1,111 620	1,116.445	1,121,380	1,126 125			1,140'720	1,145 605
38	1,102'000		1.160-320	1,165-245	1.070-180	1,178-125	1.180-080	1.185-045	1,190-020	1,195-005
39	1,150-500	1,155-405	1,100-020	1,215'045	1,220'080	1,225'125	1,230'180		1,240'320	1,245'405
40	1,200'000	1,205,005	1,210 020	.,215 045	.,	-,33	1 -,=30 -00	-,-35 -45	, . , . ,	٠.٠.٠

经过过过过过过过过

2 34.

1 34

Note.—For bottom-widths differing from 10 feet, multiply the difference in bottom-width by the depth, and add or subtract the product, as the case may be, to or from the tabular quantities.

APPENDIX 20.

TABLES OF THE CROSS-SECTIONAL AREAS OF DAM EMBANKMENTS.

(Vide Chapter II., paragraph 73.)

$$Formula:-A = \left\{T + H\left(\frac{S_1 + S_2}{2}\right)\right\} H.$$

Where A = the area of the section in square feet;

T = the top-width of the dam in feet;

 S_1 , S_2 = the ratios to unity of the side-slopes of the dam;

H = the height of the dam in feet, measured from the cleared foundation to the top of the dam and including the allowance for settlement.

TABLE I.

Top-width, 6 feet; Upstream slope, 2 to 1; Downstream slope, $1\frac{1}{2}$ to 1. A = (6 + 1.75 H) H sq. ft.

SQUARE FEET.

Height in	Decimals.												
Feet.	0.0	0'1	0.3	0.3	0.4	0.2	o•6	0'7	0.8	0.0			
•	0,000	0.614	1.520	1.957	2.680	3'437	4.530	5'057	5'920	6-817			
1 2	7.780	8.717		10-757	11.830	12-937	14-080	15-257 28-957	16-470	17.717			
2	19 000 38-750	20'317 35 417		23'057 38-857	24'480 40'630	25 937 42 487	27'430 44 :280	46-187	30°520 48°070	32 117 80-017			
4	52 000	54'017		58.157	60.580	62 437	64.630	66.857	69,150	71.417			
5	78-750	76-117	78-520	89-987	83-430	86-937	88-480	91-067	98-070	96-317			
6	99,000	101'717	104'470	107 257	110,080	112'937	115.830	118.422	121.430	124 717			
7 8	127-750		133-920	137-057	140-230	143-437	146-680	149-987	163-270	156-617			
8	160,000	163'417	166.870	170'357	173 880	177 437	181.030	184.657	188,330	192'017			
9	195-750	199-517	203-320	207-157	211-030	214-937	218-880	222-857	226-870	230-917			
10.	235'000	239 117	243 270	247'457	251 680	255'937	260,330	264 557	268.050	273'317			
11	277-750	282-217	286-720	291-257	295-830	300-437	306-080	309-757	314-470	319-217			
12	324 000	328.817	333'670	338.557	343,480	348.437	353,430	358.457	363,250	368.617			
18	378-750	878-917	384-120	389-357	394-630	399-937	406-280	410-687	416-070	491-817			
14	427 000	432'517	438'070	443'657	449'280	454 937	460 630	466*357	472'120	477 917			
15	483-750	489-617	495-820	501-487	507·480	513-437	519-480	525-557	531-670	887-817			

Note.—For top-widths differing from 6 feet, multiply the difference in top-width by the height, and add or subtract the product, as the case may be, to or from the tabular quantities.

APPENDIX 20.

TABLE II.

Top-width, 6 feet; Upstream slope, $2\frac{1}{2}$ to 1; Downstream slope, 2 to 1. A = (6 + 2.25 H) H sq. ft.

SQUARE FEET.

Height in		Decimals.												
Feet.	0,0	0,1	0'2	0.3	0'4	0,2	0.6	0'7	0.8	0.0				
•	0,000	0.633	1,300	\$,003	2'760	3'562	4'410	5'302	6'240	7.555				
1	8-250	9-322	10-440	11-602	12-810	14-062	15-360	16-702	18-090	19-522				
2	31,000	22,235	24,000	25'702	27.360	29.062	30.810	32 602	34,440	36.333				
8	38-250	40-222	42-240	44-302	46-410	48-562	50-760	53-002	55-290	57-622				
4	60.000	62,433	64*890	67.402	69.950	72.262	75.310	77'902	80.640	83,422				
8	86-250	89-122	92-040	95-002	98-010	101-062	104-160	107-302	110-490	118-729				
6	117'000	120,355	123'690	127'102	130,260	134 062	137610	141'202	144.840	148.22				
7	152-250	156-022	159-840	163-702	167-610	171-562	175-560	179-802	183-090	187-833				
8	192,000	196,555	200,400	204 802	500,100	213.262	318,010	222,203	227.040	231 622				
9	236-250	240-922	245-640	250-402	258-210	260-062	264-960	269-902	274-890	279-922				
10	285,000	290,155	295,500	300,203	305.760	311,005	316,410	331.803	327 240	332,435				
11	338-250	343-822	349-440	355-102	360-810	366-562	372-360	378-202	384-090	390-922				
12	396,000	402'022	408*090	414,505	420*360	426.263	433.810	439 102	445 440	451 822				
18	458-250	464-722	471-240	477-802	484-410	491-062	497-760	504-502	511 -290	518-125				
14	252,000	531,055	538.890	545 902	552.960	560.062	567.210	574'402	581.640	588.055				
18	596-260	603-622	611-040	618-502	626-010	683-562	641-160	648-802	686-190	664-221				
16	672,000	679.822	687'690	695.602	703°560	711.262	719.610	727.702	735.840	744 082				
17	782-250	760-522	768-840	777-202	785-610	794-062	802-560	811-102	819-600	836-322				
18	837'000	845'722	854,490	863,305	872.160	881 062	800,010	800,003	908,040	917'122				
19	926-250	935-422	944-640	953-902	963-210	972-562	961-960	991-402	1,000-890	1,010-433				
20	1,020,000	1,029 622	1,039,530	1,049 002	1,058.760	1,068.562		1,038.302	1,098 240	1,108.222				
21	1,118-250	1,128-322	1,138-440	1,148-602	1,158-810	1,169-062	1,179-360	1,189-702	1,200-090	1,210-522				
22	1,221 000	1,231,222	1,242'090	1,252,702	1,263'360	1,274 062	1,284 810	1,295.602	1,306,440	1,317'322				
23	1,328-250	1,339-222	1,850-240	1,361-302	1,872-410	1,383-562	1,394.760	1,406-602	1,417-260	1,428-622				
24	1,440,000	1,451 422	1,462 890	1,474'402	1,485 960	1,497'562	1,509 210	1,520'902	1,532 640	1,544,422				
25	1,556-250	1,568-122	1,580-040	1,592-002	1,604-010	1,616-062	1,626-160	1,640-302	1,652-490	1,064-725				

Note.—For top-widths differing from 6 feet, multiply the difference in top-width by the height, and add or subtract the product, as the case may be, to or from the tabular quantities.

TABLE III.

Top-width, 8 feet; Upstream slope, 3 to 1; Downstream slope, 2 to 1. $\mathbf{A} = (8 + 2.5 \text{ H}) \text{ H sq. ft.}$

SQUARE FEET.

Height					Deci	mals.				
in Feet.	0,0	0,1	0.3	0,3	0.4	0.2	0.6	0'7	o 8	0.0
0	0,000	o'825 11 -825	1'700 13-200	2*625 1 4*626	3.6co	4'625 1 7:625	5'7∞ 19 -200	6.825 20.825	8.000 22-200	9°225 24°225
2	26'000	27.825	29'700	31.625	33.600	35.625	37'700	39.825	42'000	44'225
8	46-500	48-825	51·200	53-625	56-100	58-625	61-200	63-826	66-500	69-225
4	72,000	74.825	77 700	80.625	83.600	86 625	89,200	92 825	96 000	99.325
5	102-500	105-825	109-200	112-625	116-100	119-625	123-200	126-825	130-500	134-285
6 7	138'000 178:500	141.825 182.825	145.700 187-200	149 625	153.600 196.100	157.625 200-628	161.700	165 825 209 825	170'000 214-500	174 225
8	224 '000	228.825	233'700	191.625 238.625	243'600	248.625	253 700	258.825	264,000	219-225 269-225
9	274-500	279-825	285-200	290-628	296-100	801-628	807-200	312-825	318-500	394·225
10	330,000	335'825	341.700	347.625	353 600	359.625	365.200	371 825	378'000	384 225
11	890-500	396-825	403-200	409-625	416-100	422-625	429-200	435-825	442-500	449-225
12	456.000	462.825	469.700	476.625	483.600	490*625	497'700	504.825	512,000	519 225
18	526-500	533-825	541-200	548-625	856-100	563-625	571·200	578-825	586-500	594-225
14	602'000	609.825	617.700	625.625	633.600	641.625	649.700	657.825	666,000	674.335
15	682-500	690-825	699-200	707-625	716-100	724-625	733-200	741-825	750-500	759-225
16 17	768.000 888.200	776.825	785,400	794 625	803.600	812.625 905.625	821.700 915.200	830*825 924-825	840,000	849'225
18	954,000	963.825	877-200 973-700	986-625 983-625	993.600	1,003'625	1,013'700	1,023.825	934-500 1,034-000	944-225
19	1.084.800	1.064-825	1.078-200	1.085-625	1.096-100	1.106-625	1.117-200	1.127-828	1.138-500	1,044 225
20	1,160,000	1,170'825	1,181 700	1,102'625	1,203 600	1,214 625	1,225 700	1,236.825	1,248'000	1,259'225
21	1,270-500	1,281-825	1,293-200	1.304-625	1,316-100	1,327-625	1,339-200	1,350-825	1,362-500	1,374-225
22	1,386 000	1,397.825	1,409 700	1,421.625	1,433'600	1,445'625	1,457'700	1,469.825	1,482 000	1,494 225
28	1,506-500	1,518-825	1,531-200	1,543-625	1,556-100	1,568-625	1,581-200	1,893-825	1,606-500	1,619-225
24	1,632,000	1,644.825	1,657.700	1,670.625	1,683 600	1,696.625	1,709'700	1,722.825	1,736,000	1,749 225
25	1,762-500	1,775-825	1,789-200	1,802-625	1,816-100	1,829-625	1,843-200	1,856-825	1,870-500	1,884-225
26 27	1,898.000 2.038.500	1,911'825 2.052-825	1,925'700 2.067-200	1,939.625 2.081.625	1,953 6∞ 2.096•100	1,967.625 2,110.628	1,981.700	1,995 825 2.139-826	2,010'000	2,024*225
28	2,184,000	2,108.825	2,213'700	2,228.625	2,243'600	2,258.625	2,120-200	2,288 825	2,304,000	2,169-225 2,319-225
20	2.334-500	2.349-825	2,865-200	2.380 625	2,396-100	2.411-625	2.427-200	2,442-825	2.458-500	2.474-225
30	2,400'000	2,505 825	2,521'700	2,537'625	2,553 600	2,569'625	2,585 700	2,601.825	2,618 000	2,634 225
81	2,650-500	2,666-825	2,683-200	2,699-625	2,716-100	2,732-625	2,749-200	2,765-825	2,782-500	2,799-225
32	2,816'000	2,832 825	2,849 700	2,866 625	2,883 600	2,900 625	2,917.700	2,934 825	2,952,000	2,969 225
33	2,986-500	8,003-825	8,021-200	3,038-625	3,056-100	3,073-625	3,091-200	3,108-825	3,126-500	8,144-225
34	3,162,000	3,179 825	3,197.700	3,215 625	3,233.600	3,251.625	3,269,700	3,287.825	3,306,000	3,324 225
35	8,842-500	3,360-825	8,879-200	3,397-625 3,584 625	3,416.100	3,434-625	3,453-200	3,471.825 3,660.825	3,680.000	3,809-225
36 87	3,528°000 3.718°500	3 546 825 3.737 825	3,565 700 3,757 200	3,504 025 3,776·625	3,603.600 3,796.100	3,622 625 3.815 625	3,641°700 3,835°200	3,854.825	3.874-500	3,699°225 3,894°225
38	3,014 000	3,933 825	3,953'700	3,973.625	3,003 600	4,013.625	4,033'700	4,053 825	4,074'000	4,094,552
39	4.114-500	4.134-825	4.156-200	4.175-625	4.196-100	4.216-625	4.237-200	4.257-825	4.278-500	4,299-225
40	4,320,000	4,340.825	4,361.700	4,382 625	4,403 600	4,424 625	4,445 700	4,466 825	4,488 000	4,509'225
41	4,530-500	4,551.825	4,573-200	4,594-625	4,616-100	4,637-625	4,659-200	4,680-825	4,702-800	4,724-225
42 .	4,746.000	4,767.825	4,789.700	4,811 625	4,833.600	4,855 625	4,877.700	4,899'825	4,922,000	4,944 225
48	4,966-500	4,988-825	5,011-200	5,033 625	5,056-100	5,078-625	8,101-200	5,123-825	5,146-500	5,160-225
44	5,192'000	5,214'825	5,237'700	5,260*625	5,283.600	5,306*625	5,329,700	5,352 825	5,376'000	5.399 225
46	5,422·500 5,658·000	5,445.825 5,681.825	5,469·200 5,705°700	5,492.625 5,720.625	5,753.600	5,539.625 5,777.625	5,801 700	5,825.825	5,850,000	5,634-225
47	5.898-500	5,922-825	8.947·200	5.729 025 5.971.625	B.996·100	6.020-625	6.045-200	6.069-825	6.094-800	5,874°225 6,119-226
48	6,144'000	6,168.825	6,193'700	6,218.625	6,243.600	6,268,625	6,293.700	6,318.825	6,344 000	6,360,325
49	6.394-500	6.419-825	6.445-200	6.470-628	6,496-100	6,521-625	6.547-200	6.572-825	6,598-500	6.624-225
50	6,650.000		6,701.700	6,727.625					6,858.000	5,884 225
			<u> </u>	l	1	(<u> </u>	· · · · ·	_	

Note.—For top-widths differing from 8 feet, multiply the difference in top-width by the height, and add or subtract the product, as the case may be, to or from the tabular quantities.

APPENDIX 20.

TABLE IV.

Top-width, 10 feet ; Upstream slope, 3 to 1 ; Downstream slope, 2 to 1. A = (10 + 2.5 H) H sq. 1.

SQUARE FEET.

Height					Decir	nals.				
in Feet.	0,0	0,1	0.5	0.3	0'4	0'5	60	0.4	o*8	0,0
•	0,000	1,032	2,100	3,552	4'400	5'625	6,000	8'225	0.600	11,022
1	12-500	14-025	15-600	17-225	18-900	20-625	22-400	24-225	26-100	28 025
2	30,000	32.022	34,100	36.552	38.400	40.625	42'900	45'225	47.600	50'025
3	82-800 80'000	56-025	57-600 86 100	60-225	62-900	65-625	68-400	71-225	74 100	77-025
4	112-500	83°025 11 6-025	119-600	89°225 123°225	92'400 1 26-900	95.625 1 30.625	981900 1341400	102 225 138 225	142:100	109 025 146 028
6	150,000	154 025	158.100	162.552	166.400	170 625	174 900	179 225	183.600	188.032
7	192-800	197-026	201-600	206-225	210-960	215-626	220-400	226-225	230.100	228-025
8	240'000	245'025	250'100	255'225	260'400	265 625	270*900	276'225	281.600	287*025
9	292-500	206-025	303-600	300-225	314-900	320-625	326-400	332-226	338-100	344 025
10	350,000	356.025	362,100	368.222	374 400	380.625	386,000	393'225	399.600	406'025
11	412-500	419-025 487'025	494 100	432-225	438-900	445-625	452-400	459 225	486-100	478-025
13	480'000 889-800	560-025	#94 100 #67·600	501 225 875-226	508°400 582°900	515 625 590-625	522'900 598 400	530°225	537.600 614-100	545°025 622°025
14	630,000	638 025	646,100	654*225	662'400	670 625	678 900	687 225	695.600	704'025
16	712-800	721-025	729-600	738-225	746-900	756-625	764-400	773-225	782 100	791-028
16	800,000	809 025	818.100	827.225	836.400	845.625	854,000	864 225	873.600	883 025
17	892-500	902-025	911-600	921-225	930-900	940-625	980-400	960-225	970-100	980 025
18	990,000	1,000 025	1,010'100	1,020'225	1,030'400	1,040,625	1,050'900	1,061 225	1,071.600	1,082*025
19	1,092-500	1,103-025	1,113-500	1,124-225	1,134.900	1,145-625	1,186-400	1,167-225	1,178 100	1,189-025
20 21	1,200'000	1,211 025	1,222,100	1,233 ²²⁵	1,244'400	1,255 625 1,370-625	1,266 900 1,382-400	1,278°225 1. 394°225	1,289'600	1,301°025
22	1,430,000	1,442 025	1,454 100	1,466 225	1,478'400	1,400 625	1,502'070	1,515'225	1,406-100	1,540 025
23	1,582-800	1.565-025	1.577-600	1.590-225	1,602-900	1.615 625	1,628-400	1,641-225	1,684-100	1,667-025
24	1,680 000	1,693'025	1,706'100	1,719'225	1,732 400	1,745'625	1,758 900	1,772'225	1,785 600	1,799 025
25	1,812-500	1,826-025	1,839-600	1,853-225	1,866-900	1,880-625	1,894-400	1,908-225	1,922 100	1,936-025
26	1,950 000	1,964 025	1,978.1∞	1,992,525	2, 06 400	2,020 625	2,034 900	2,049 225	2,063 600	2,078.025
27	2,092-500	2,107-025	2,121-600	2,136-225	2,180-200	2,165-625	2,180-400	2,195-225	2,210-100	2,225-025
28 20	2,240'000	2,255°025 2,406°025	2,270°100 2,423°600	2,285°225 2,439°225	2,300'400 2,454'900	2,315'625	2,330°900 2,486°400	2,346*225	2,361.600	2,377'025
30	2,292-500	2,566 025	2,582 100	2,598'225	2,514,400	2,470-625 2,630-625	2,646°9:0	2,502-225 2,663 225	2,818·100 2,679·630	2,534 025 2,696 025
81	2.712-500	2.729-025	2,745-600	2,762-226	2,778-900	2,796-625	2,812-400	2.829-225	2,846-100	2.863-025
32	2,880,000	2,897 025	2,914,100	2,931,552	2,948.400	2,965.625	2,982 900	3,000'225	3,017.600	3,035 025
38	3,962-500	8,070-025	8,087-600	8,108-225	8,122-900	3,140-625	8,158-400	3,176-225	8,194-100	8,212-025
34	3,230 000	3,248.025	3,266 100	3,284 225	3,302,400	3,320.625	3,338.000	3,357.225	3,375 600	3,394 025
35	8,412-500	8,431-025	8,449-600	3,468-225	3,486-900	8,505-625	8,524 400	8,543-225	8,562-100	8,581.025
36 87	3,600,000	3,619 025 8,812 025	3,638'100 3.831-600	3,657 225 3,851-225	3,676'400 3,870-900	3,695.625 3,890.625	3,714 900 8,910 400	3,734 225	3,753 600 3,950 100	3,773 025 3,970-028
38	3,792-500 3,990 000	4,010'025	4.030 100	4,050'225	4,073'400	4,090 625	4,110'900	3,930 225 4,131 225	4,151'600	4,172 025
30	4.192-500	4.213-025	4.233-600	4.254-225	4.274 900	4.295 625	4,816-400	4.837-225	4.858-100	4,379-025
40	4,400,000	4,421 025	4.442 100	4,463'225	4,484,400	4,505.625	4,526'900	4,548 225	4.569.600	4,591 025
41	4,612-500	4,634-335	4,685-600	4,677-225	4,698-900	4,720-625	4,742 400	4,764-225	4,786-100	4,806-025
42	4,830,000	4,852,025	4,874 100	4,896 225	4.918.400	4,940 625	4,962 900	4,985 225	5,007.630	5,030'025
43	8,092-500	5,075-025	8,097-600	5,120-225	5,142-900	5,165-625	5,188-400	8,211-225	5,234-100	5,257-025
44 45	5,280'000 8,81 2-800	5,303 025 5,536-025	5,326'100 5,589-600	5.349 225 5.583 225	5,372'400 5,606'900	5,395'625 5,630-625	5,418'900 5,684'400	5,442 225 5,678 225	5,465'600 5,702'100	5,489°025 8.726°02 5
46	5,750,000	5,774 025	5,798'100	5,822 225	5,846.400	5,870.625	5,894 900	5,919 225	5,943 600	5,968 025
47	5.992-500	6.017-028	6,041-600	6,066-225	6,090-900	6,115-625	6,140-400	6,165-225	6,190-100	6,215.025
48	6,240 000	6,265'025	6,290'100	6,315'225	6,340'400	6,365 625	6,390,000	6,416'225	6,441 600	6,467 025
49	6,292-500	6 518-025	6,543-600	6,569-225	6,594-900	6,620-625	6,616-400	6,672-225	6,698-100	6,724-025
50	6,750 000	6,776 025	6,802,100	6,828.225	6,854.400	6,880.625	6,906'900	6,933 225	6,959 600	6,986'025
51	7,012-500	7,039-025	7,065-600	7,092-225	7,118-200	7,148-625	7,172-400	7,199-225	7,926-100	7,258-026
52	7,280°000 7,552°500	7,307 025 7,580 025	7,334'100 7,607:600	7,361 225 7.635-225	7,388'400	7,415 625 7,690-625	7,442 9co	7,470°225 7,746°225	7,497.600	7,525 025
58 54	7,830 000	7,858 025	7,886.100	7,914 225	7,942 400	7,970'625	7,998'900	8,027.225	8,055 600	8,084 025
54	7,030 000	7,030 023	/,555 155	7,9-43	/1972 400	/,9/0 003	7,990 900	0,02, 223	1 -,055 000	0,004 02

APPENDIX 20.

TABLE IV.—continued.

SQUARE FEET.

Height in		Decimals.												
Feet.	0,0	0,1	0'2	0,3	0'4	0'5	0.6	0'7	8°o	oʻ9				
55	8,112-500	8,141-026	8,160-600	8,198-225	8,226-900	8,255-625	8,284-400	8,313-225	8,342-100	8,371-02				
56	8,400,000	8,429 025	8,458 100	8,487 225	8,516 400	8,545 625	8,574 900	8,604 225	8,633 600	8,663 02				
57	8,692-500	8,722-025	8,751-600	8,781-225	8,810-900	8,840-625	8,870-400	8,900-225	8,930-100	8,900-02				
58	8,990 000	9,020 025	9,050 100	9,080 225	9,110 400	9,140 625	9,170'900	9,201 225	9,231 600	9,262 02				
50	9,292-500	9,323-025	9,853-600	9,384-225	9,414-900	9,445-626	9,476-400	9,507-225	9,538-100	9,500-02				
60	9,600 000	9,631 025	9,662 100	9,693 225	9,724 400	9,755 625	9,786 900	9,818.225	9,849 600	9,881.02				
61	9.912-500	9.944-026	9.975-600	10.007-225	10,038-900	10,070-625	10,102-400	10,134-226	10,166-100	10,198-02				
62	10,230 000	10,262,025	10,294 100	10,326 225	10,358.400	10,390 625	10,422 900	10,455 225	10,487 600	10,520 02				
63	10,582-500	10,585-025	10,617-600	10,650-225	10,682-900	10,715-626	10,748-400	10,781-225	10,814-100	10,847-02				
64	10,880 000	10,913 025	10,946 100	10,979 225	11,012 400	11,045 625	11,078 900	11,112'225	11,145 600	11,179 02				
65	11,212-500	11,246 025	11,279-600	11,313-225	11,846-900	11,380 625	11,414-400	11,448-225	11,482-100	11,516-02				
66	11,550 000	11,584 025	11,618 100	11,652 225	11,686 400	:1,720'625	11,754 900	11,789 225	11,823 600	11,858 02				
67	11,892-500	11,927-025	11.961-600	11,996-225	12,030-900	12,065-625	12,100-400	12,135-225	12,170-100	12,305-02				
68	12,240'000	12,275 025	12,310'100	12,345 225	12,380 400	12,415 625	12,450 900	12,486 225	12,521 600	12,557 02				
69	12,592-500	12,628-025	12.663-090	12,600-225	12,734-900	12,770-625	12,806-400	12,842-225	12,878-100	12,914-02				
70	12,950 000	12,986 025	13,022 100	13,058 225	13,004 400	13,130.625	13,166 900	13,203 225	13,239 600	13,276 02				
71	13,812-500	13,349-025	13,385-600	13,422-225	13,458-900	13,495-625	13,532-400	13,569-225	18,606-100	13,663-02				
72	13,680 000	13,717 025	13,754 100	13,791 225	13,828 400	13,865'625	13,902,000	13,940*225	13,977 600	14,015 02				
78	14,082-500	14,090-025	14,127-600	14,165-225	14,202-900	14,240-625	14,278-400	14,316-225	14,354-100	14,392-02				
74	14,430 000	14,468 025	74,506 100	14,544 225	14,582.400	14,620 625	14,658 900	14,697'225	14,735 600	14,774 02				
75	14,812-500	14,851-025	14.889-600	14,928-225	14,966-906	15,008-628	15,044-400	15,083-225	15,122-100	15,161-02				
76	15,200 000	15,239 025	15,278'100	15,317'225	15,356 400	15,395 625	15,434 900	15,474 225	15,513,600	15,553'02				
77	15,592-500	15,632-025	15,671-600	15,711-225	18,780-900	15,790-625	15,830-400	15,870 225	15,910-100	18,980-02				
78	15,990 000	16,030'025	16,070'100	16,110,322	16,150.400	16,190 625	16,230 900	16,271 225	16,311600	16,352 02				
79	16,392-500	16,433-025	16,473-600	16,514-225	16,55 4 -960	16,595-625	16,636-400	18,677-225	16,718-100	16,759-02				
80	16,8co coo	16,841 025	16.882 100	16,023 225	16,964'400	17,005'625	17,046 900	17,088 225	17,129 600	17,171 02				

Nors.—For top-widths differing from 10 feet, multiply the difference in top width by the height, and add or subtract the product, as the case may be, to or from the tabular quantities.

FORM OF MEASUREMENT SHEET FOR THE ESTIMATE OF THE EMBANKMENT OF A DAM.

	I	2	3	4	5	6	7	8	9	10
_	Point on Section.	Height of Dam as per Section.	Depth allowed for Clearance.	Total (2) + (3).	Allowance for Settlement, 3b × Col. 4-	Grand total height (4) + (5).	Cross-sectional Area corresponding to (6).	Mean Cross sec- tional Area.	Length between Points on Section.	Quantity between Points on Section, (8) × (9).
	ſt.	ft.	ft.	ft.	ſt.	ft.	sq. ft.	sq. ft.	ft.	cub. ft.

APPENDIX 21.

TABLES OF THE CROSS-SECTIONAL LENGTHS OF PITCHING.

(Vide Chapter II., paragraph 152.)

Formula:—L = S H.

Where L is the cross-sectional length in feet; and .

S, the ratio of the length of the slope to

H, the vertical height.

Table I. Upstream slope = $1\frac{1}{2}$ to 1; S = 1.803; L = 1.803 H ft. Feet.

Height in	.				Deci	mals.				
Feet.	0,0	0°1	0.3	0.3	0.4	0,2	0.6	0'7	0.8	0.0
•	0,000	0,180	0.361	0'541	0'721	0,001	1,085	1.563	1'442	1.62
1	1-903	2-963	2-164	2-844	2-524	2-704	2-885	3-068	3-245	3-49
2	3.606	3.486	3'967	4'147	4'327	4'507	4.688	4.868	5'048	2,53
8	5-409	5-589	8-770	8-980	6.130	6.310	6-491	6-671	6-851	7-08
4	7'212	7:392	7'573	7.753	7.933	8.113	8 294	8.474	8.654	8.83
8	9-015	9-195	9-376	9-556	9-736	9-916	10-097	10-277	10-487	10-63
6	10.818	10,008	11'179	11.320	11.239	11.419	11,000	12.080	12'260	12 44
7	12-621	12-801	12-082	13-162	18-342	18-522	13.703	13-863	14-063	14.34
8	14'424	14.604	14'785	14'965	15'145	15.325	15,200	15.686	15 866	16.04
9	16-227	16-407	16-588	16-768	16-948	17-128	17-309	17-489	17-660	17-88
10	18,030	18'210	18.301	18.21	18.751	18.931	10,115	10,505	19'472	19.65

 $\begin{array}{c} \text{Table II.} \\ \text{Upstream slope} = 2 \text{ to 1} \; ; \; S = 2 \cdot 236 \; ; \; L = 2 \cdot 236 \; H \; \text{ft.} \\ \text{Feet.} \end{array}$

Height in Feet.	Decimals.									
	0,0	0,1	0'2	0,3	0'4	0.2	0.6	0.2	0.8	'o.ð
	0,000	0,334	0'447	0'671	0.894	1,118	1'342	1'565	z '789	2,013
. 1	2-236	2.480 4.696	2-683 4 919	2-907	8-130 5'366	3-354	3·578 5·814	3:601 6:037	4-028 6'261	4-248 6-484
2	4'472 6-708	6.933	7.158	5 143 7 379	7.602	5 590 7 836	8.050	8-273	8-497	8-720
•	8.944	0.168	9.391	9.615	9.838	10.063	10.586	10.200	10'733	10.026
ĭ	11-180	11-404	11.627	11.851	12-074	12-225	12-822	12-745	12-969	13-192
6	13'416	13'640	13 863	14'087	14'310	14 534	14.758	14'981	15'205	15.428
7	15-662	15-876	16-009	16-323	16-546	16-770	16-994	17-217	17-441	17-664
7 8	17.888	18,115	18.332	18.259	18.782	119.000	19.530	19'453	19.677	19,000
9	20-124	20-348	20-571	20-795	21-018	21.242	21-466	21-689	21-918	22-135
10	22,360	22.284	22.807	23,031	23.524	123 478	23'702	23.022	24 149	24'372
11	24-506	24·830	25-043	25-267	25-490	25.714	25-938	26-161	26.386	26-606
12	26 832	27.056	27.279	27.503	27.726	27.950	28.174	28:397	28.631	28 844
18	29-068	30-303	29-515	29-739	29-962	30·186-	80-410	30-633	30-857	81-080
14	31,304	31.258	31.421	31 975	32,108	32,422	32.646	32.860	33 093	33.316
18	33-540	33-764	88-967	34·211	34·434	34-658	34-883	36-105	35-329	36-582

Table III. Upstream slope = $2\frac{1}{2}$ to 1; S = 2.693; L = 2.693 H ft. Feet.

Height in Feet.	Decimals.									
	0,0	0,1	0,5	0,3	0'4	0.2	9.0	0.1	0.8	0.0
o	0,000	0'269	0.230	0.808	1.077	1'346	1.010	1.882	2'154	2.42
1	2-693	2-962	3-232	3-501	8.770	4-039	4-309	4-578	4.847	5-11
2	£ 386	5.655	5'925	6.194	6'463	6.433	7.002	7.271	7.240	7.810
8	8-079	8-348	8.618	8-887	9-156	9-425	9-695	9-964	10-233	10.50
4	10.773	11'041	11.311	11.280	11.849	12,118	12.388	12.657	12'926	13,10
5	13-465	18-734	14-004	14-273	14-542	14.811	15-061	15.350	15-619	15-88
6	16.128	16.427	16.697	16.966	17.235	17'504	17'774	18'043	18.312	18.28
7	18-851	19-120	19-390	19-659	19-928	20.197	20-467	20-736	21 005	21-27
8	21 544	21.813	22.083	22,325	22.621	22.890	23'160	23,420	23 698	23.06
9	24-237	24·506	24.776	25-045	25.314	25.583	25-863	26-122	26-391	26-66
10	26.930	27.199	27.469	27.738	28.007	28.276	28.246	28.815	29 084	29,32
11	29-623	29-892	30-162	30-431	30-700	30-969	81-239	31.508	81-777	32-04
12	32,319	32.282	32.855	33'124	33 393	33'662	33,635	34 201	34 470	34 74
13	35-009	35-278	35-548	38.817	36-086	36-355	76·625	36-894	37·163	37-48
14	37'702	37.971	38.541	38.210	38.779	39 048	30,318	39.284	39*856	40'12
15	40-395	40-664	40-934	41.203	41-472	41.741	42-011	42-280	42-549	42-81
16	43'088	43*357	43.627	43 896	44 165	44 434	44 704	44'973	45 242	45 51
17	45.781	46-080	46.320	46.589	46.868	47-127	47.397	47-666	47-935	48-20
18	48 474	48 743	49.013	49 282	49.221	49.820	50 000	50,320	50 628	50.89
19	51-167	51-436	51.706	51-975	52-244	52-513	52.783	53-052	53-321	53-50
20	53 86o	54 129	54'399	54 668	54 937	55'206	55.476	55 745	56°014	55.58
21	56-853	56-822	57-092	57:361	57-630	57.899	58-169	58-438	58-707	58-97
22	59.246	59.212	59.785	60'054	60 323	60 592	60.862	61,131	61,400	61.67
23	61-939	62-208	62-478	62 747	63-016	63-286	63-555	63-824	64-093	64-36
24	64 632	64'901	65.171	65'440	65'709	65.978	66.248	66 517	66.486	67 050
25	67-325	67-594	67:864	68 · 133	68-402	68-671	68-941	69-210	69-479	69-74

Table 1V. Upstream slope = 3 to 1 ; S = 3.162 ; L = 3.162 H ft. Feet.

Height in Feet.	Decimals.									
	0,0	0,1	0.5	0,3	0.4	0.2	0.6	0.2	0.8	6.0
0	0,000	0.316	0.632	0.949	1.265	1.281	1.807	2,513	2.230	2.846
1	8-162	8-478	3.794	4.111	4-427	4-748	5-059	5-375	5-692	6-006
2	6.324	6.640	6.956	7.273	7.589	7'905	8.551	8.532	8.854	9,170
8	9-486	9-802	10-118	10-435	10-751	11-067	11.383	11-699	12-016	12-332
4	12.648	12'964	13.580	13.202	13.013	14 229	14'545	14.861	15'178	15'494
5	15-810	16-126	16-442	16-759	17.075	17:391	17.707	18-028	18-340	18-666
6	18.972	19.588	19.604	19'921	20.232	20.223	20.860	21.182	21'502	21 818
7 8	22-134	22-450	22.766	23-063	23-399	23.715	24-031	24:347	24-664	34-980
	25.296	25.612	25.928	26 245	26.261	26.877	27.193	27.509	27.826	28'142
9	28-458	28.774	29-090	29-407	29.723	30-039	80-355	80-671	30 988	81-304
10	31.620	31.936	32'252	32.269	32 885	33'201	33 517	33.833	34'150	34 466
11	34-782	35-098	85-414	35.731	36-047	36-363	36-679	36-996	37-312	37-625
12	37 944	3 8.50 0	38°5 76	38.893	39.200	39.225	39.841	40'157	40'474	40 790
18	41-106	41-422	41.738	42-055	42.371	42.687	43-003	43-819	43-636	43-952
14	44*268	44'584	44'900	45'217	45'533	45'849	46'165	46'481	46.798	47'114
15	47-430	47.746	48-062	48-379	48-695	49-011	49.327	49-648	49-960	80-276
16	50.2	50.028	51.224	51 541	51.857	52,143	52 489	52.805	53.122	53,438
17	83-784	54-070	54-386	54.703	55-019	55-335	55-681	55-967	56-284	86-600
18	56.016	57'232	57 548	57.865	28.181	58.497	58.813	59'129	59.446	59.762

APPENDIX 21.

Table IV.—continued. FEET.

Height in	Decimals.										
Feet.	0,0	0,1	0,3	0.3	0.4	0.2	60	0.4	o.8	0,0	
19	00-078	60-394	60-710	61-027	61-348	61-659	61-975	62-291	62-606	63-92	
20 21	63°240 66°402	63.226	63 ^{.8} 72	64°189 67°35 1	64 '505 67 667	64 821 67 983	65°137	65°453 68°615	65'770 68'932	66°08	
22	69.564	66-718 69-880	70'196	70'513	70.820	71'145	71 461	71.777	72'094	72 41	
23	72-726	78-042	73-368	73-675	73-991	74-307	74-623	74-939	78-256	78-57	
24	75 888	76.304	76.20	76 ^{.8} 37	77°153	77.469	77.785	78°101	78.418	78.73	
25	79-050	79-366	79-682	79-999	80-315	80-631	80-947	81-263	81.580	81.89	
26	82 212 85 874	82°528	82 ·844 86 · 006	83'161 86'323	83°477 86°639	83 *7 93	84'109 87'27 1	84 425 87 887	84'742 87:994	85°05	
27 28	88 536	88.852	89'168	89.485	80.801	90'117	90 433	90'749	01.000	01.38	
29	91-696	92-014	92-330	92-647	92-983	93-279	93-595	93-911	94-228	94.94	
30	94.860	95.176	95 492	95.809	96.152	96'441	96'757	97.073	97'390	97.70	
31	98-022	98-338	98-654	98-971	99-287	99-603	99-919	100-235	100-552	100-86	
32	101.184	101,200	101.819	102,133	102 449	102'765 105'927	103.081	103 397	103.714	104 03	
88	104·346 107·508	104-662	104-978 108-140	105-295 108-457	105-611 103-773	100,080	106-248 109-405	106-559	106-876 110-038	107-19	
34 36	110-670	110-986	111.302	111-619	111-935	112-251	112-567	112-883	113-200	110'35 11 3-5 1	
36	113.835	114'148	114'464	114 781	115'097	115'413	115'729	116'045	116.365	110.01	
37	116-994	117-310	117-626	117-948	118-289	118-575	118-891	119-207	119-524	119-84	
38	120'156	120 472	120.488	121,102	121,421	121,434	122.023	133,360	122.686	123'00	
30	123-318	128-634	123-950	194-267	124-583	124-809 128'061	128·215	128.693	125.848 129.010	126-16	
40 41	126 480 129 642	126 796 1 29 988	127'112 130-274	127'429 1 30:59 1	127'745 130-907	131-223	181.539	131.855	132-172	129 32 132-48	
42	132 804	133,150	133,436	133'753	134 069	134.382	134 701	135'017	135 334	135'65	
48	135-966	136-282	136-598	136-915	137-231	137-547	137-863	138-179	138-496	136-81	
44	139,158	139'444	139'760	140'077	140*393	140,203	141 025	141 341	141 658	141 97	
48	142-290	142-606	142-922	143-239	143-555	143-871	144-187	144 503	144-820	145-18	
46 4 7	145'452 1 48-614	145'768 1 48-930	146°084 1 49°246	146'401 1 49:563	146 717 149-879	147 033 180-195	147'349 1 50:5 11	147.665 1 80.827	147 982 181 144	148'29	
48	151,220	152 002	152 408	152'725	153'041	153 357	153 673	123.080	154 306	154.62	
49	154-938	155-254	158-570	155-887	156-203	156-519	156-635	157-151	157-468	187-78	
50	128,100	158.416	158 732	159'049	159'365	159.681	159'997	160,313	160.630	160.04	
51	161-262	161-878	161-804	162-211	162-527	162-843	163-150	163-475	163-792	164-10	
52	154'424	164'740	165 056	165'373	165.689	166'005 169'167	166'321 169'483	166 637 1 69 799	166'954	167.27	
53	1 67·586 1 7 0·748	167-902	168-218 171-380	168-535	168-851 172 013	172'329	172 645	172'961	170-116	170-42	
54 88	178-910	174-226	174-542	174-859	178-178	175-491	178-807	176-123	176-440	173 59	
56	177'072	177'388	177'704	178'021	178.337	178.653	178'969	179 285	179'602	179'91	
57	180-234	180-550	180-866	181-183	181-499	181-815	182-131	182-447	182.764	183-06	
58	183,300	183.212	184.028	184 345	184 661	184'977	185,503	185.600	185.026	186.34	
59	186-558	186-874 190-036	187-190	187·507	187-823 190-985	191'301	188-455	1 88·771	189-068 192-250	189-40	
60 61	189°720 1 92°882	193-196	190'352 193-514	193-831	194-147	194-463	194-779	198-095	198-412	192'56	
62	196'044	196'360	196.676	196 993	197'309	197'625	197'941	198.257	198.574	198.80	
63	199-206	199-522	199-838	200-155	200·471	200-787	201-103	201-419	201-736	202-0	
64	203,368	202.684	203'000	203 317	203'633	203'949	204,502	204 581	204.898	205 21	
65 66	205·530 208 602	200,008	206-169	206·479 209·641	206°795 209'957	207·111 210·273	207-427 210'589	210'905	208-068 211-222	206-37	
67	211.884	212-170	212-486	212-803	213-119	213-435	218-751	214-067	214-384	211'53 214.70	
68	215'016	312,335	215 648	215.965	316.581	216.202	216,013	217.520	217'546	217.80	
89	218-178	218-494	218-810	219-127	219-443	219-759	220-075	220-391	220-708	221-0	
70	221 340	221 656	221,022	222,580	222.602	222,031	223 237	223.253	223.870	224 1	
71	224-502	224.818	225-134	228.613	225·767 228·929	226:083 220:245	226·399 229·561	226 715 229 877	227-032 230'194	227.8	
72 73	227'664 230'836	227 980 231 142	228*296 231*458	231.775	232-091	232-407	232-723	233-039	233-356	230'5: 233-6'	
78 74	233.088	234 304	234 620	234'937	235,523	235 569	235.885	236'201	236.218	236.8	
75	237-150	237-466	237-782	238-099	238-415	238-731	239-047	239-363	239-680	239-9	
76	240'312	240.628	240'944	241 261	241.222	241.893	242 209	242,225	242.842	243'1	
77	243-474	243-790	244-106	244-423	244.739	248'217	248 533	248.849	249°166	246-8	
78	246.636 249.798	246'952 280-114	247 268 250-430	247°585 250°747	247'901 281-063	251.379	251·698	252-011	249 100	249'4 252-6	
79	252,000	253,524	1000.000	253'909	254'225	254'541	254.857	255 173	255'490	APA O	

APPENDIX 22.

NOTES ON THE ARRANGEMENTS FOR AND MANAGEMENT OF LARGE WORKS.

(Vide Chapter II., paragraph 126 (c).)

INDEX TO PARAGRAPHS.

1.	Work	Arrangements.
----	------	---------------

Para.

- 1. General Arrangements for Works.
- 2. Setting-out Marks.
- 3. Side-widths and Levels.
- 4. Bench Marks.
- 5. Setting-out Pillars.
- 6. Foundation Plan.
- 7. Foundation Courses.
- 8. Setting-out Platforms.
- 9. Progress Sections.
- 10. Programme of Work.
- 11. Temporary Works.
- 12. Rapid Completion of Small Works.
- 13. Works Roads.
- 14. Tidying up Works.
- 15. Water.
- 16. Bailing.
- 17. Reserve Work.
- 18. Preparation for the Monsoon.
- 19. Works Order-book.
- 20. Maistries' Order-book.
- 21. Maistries' Appliances.
- 22. Hand Sketches.
- 23. Supervision of Construction.
- 24. Boundaries of Acquired Land.

Para

- 25. Survey Marks affected by Works.
- 26. Excavating for Materials in Land temporarily acquired.
- 27. Native Holidays.
- 28. Works Postal Arrangements.

2. Miscellaneous.

- 29. Sanitation.
- 30. Blasting.
- 31. Serious Accidents.

3. Materials.

- 32. Material Requirements.
- 33. Materials at Site.
- 34. Collection of Materials.
- 35. Stacking of Materials.
- 36. Selection of Materials.
- 37. Issue of Materials.
- 38. Balances of Materials at Site.
- 39. Protection of Materials.
- 40. Lime-burning Account.
- 41. Gelatine and Dynamite, &c., Cartridges.
- 42. Powder.
 - 4. Stores and Tools.
- 43. Stores and Workshops.
- 44. The Store.

Para.

- 45. Stamping Tools.
- 46. Register of Tools.
- 47. Issue of Tools to Contractors.
- 48. Issue of Plant to Contractors.
- 49. Issue of Tools to Departmental Gangs.
- 50. Returning Tools, &c., out of use.
- 51. Broken Articles.
- 52. Watering Pots.
- 53. Rammers.
- 54. Miscellaneous Articles.
- 55. Setting-out Materials.
- 56. Indent for Following Day's Requirements.
- 57. Register of Expenditure of "Sundries."
- 58. Receipts and Issues.

5. Plant.

- 59. Rules to be observed in the Use of Tram Plant.
- 60. Supervision of Pumping and other Engines.
- 61. Pumping Engines and Special Plant.
- 62. Pumps.
- 63. Boat.
- 64. Stacking Woodwork.
- 65. Removal of Plant and Material before Monsoon.

6. Establishment.

- 66. Sub-division of Works.
- 67. Duties of Establishment.
- 68. Appointment of Work Establishment.
- 69. Appointments on Works.

Para

- 70. Muccadums' Pay.
- 71. Muccadums' Badges.
- 72. Independence of Maistries and Karkuns.
- 73. Authority of Office Establishment on Works.
- 74. Daily Inspections.

7. Labour.

- 75. Working Hours.
- 76. Off Time.
- 77. Rates and Numbers of Labourers.
- 78. Tasking Work.
- 79. Distribution of Work.

8. Petty Contractors.

- 80. Agreements with Petty Contractors and Suppliers.
- 81. Petty Supply Contract.
- 82. Rates of Supply by Petty Contractors.
- 83. Supervision of Petty Contractors' Work, &c.
- 84. Number of Petty Contractors'
 Labourers.
- 85. Fining Contractors' Work-people.

9. Office Arrangements.

- 86. Sub-divisional Office Duties.
- 87. Sub-divisional Returns.
- 88. Final Measurements.
- 89. Bills and Measurement Books.
- 90. Daily Measurements of Work.
- 91. Final Measurements of Work and Supplies.
- 92. Daily Report.
- 93. Weekly Report.

I. WORK ARRANGEMENTS.

1. General Arrangements for Works.—Before the works are commenced, a large scale plan should be made, and on this should be shown how the different offices, temporary works (such as kilns and mortar mills), in connection with manufacturing departments, and stores of materials are to be arranged most conveniently for the whole of the works. A liberal amount of space should be allotted to each.

The main office, the storeyard, workshop and establishment quarters should be together in a central situation remote from the village, &c.

The material stacking-ground should be arranged so that the rough materials should be furthest from and the finished ones nearest to the works. Thus for the preparation of mortar the order would be: Sand, kankar, fuel, kilns, and mortar mills. The stacking-ground should be divided into two main parts, one from which supplies are being drawn, and the other on to which they are being delivered. The former should be quite cleared before fresh supplies are brought on to it.

All should be set out so as not to interfere with the works from their commencement up to their completion.

- 2. Setting-out Marks.—At the ends of all principal lines of the works should be erected small masonry pillars, each having a slab, on the top of which the centre line and reduced level should be engraved. Distance marks should be fixed at right angles and opposite to the end of each chain at a specified distance from the centre line, and their chainage should be engraved on them. As far as possible all such marks should be fixed permanently and out of the way during construction. The toe-lines of all embankments and the centre lines of all works should be lockspitted before the works are begun.
- 3. Side-widths and Levels.—Tables of these for each part of the work should be prepared, and copies of them should be given to all who have to set out the work.
- 4. Bench Marks.—These should be of a permanent nature and should be set up as frequently as possible, so that intermediate readings need never be necessary. A list of them should be kept by all levellers at the beginning of their note books.

Permanent marks on the works should be cut reversed-V shape in section and leaded.

- 5. Setting-out Pillars.—These should be constructed similarly, so as to be of permanent utility.
- 6. Foundation Plan.—A large scale plan of the foundations should be prepared, and all levels should be carefully recorded on it. It will

be best to divide the area into small rectangular compartments, to take the mean level of each, and to note any sudden changes and the quantity of filling required to make up the work to the top or to any assumed level.

- 7. Foundation Courses.—Particular care is necessary to set these out to the correct widths and levels. On no account should one course be erroneously run into another. On each should be painted its reference level. Teak battens should be fixed parallel to the face of the work as profiles, and references to the proper position from them of the top edges of the courses should be marked on them.
- 8. Setting-out Platforms.—Archrings should be set out full size on plastered platforms, each voussoir being drawn thereon. Similarly, curved profiles, cut-water courses, caps, &c., should be drawn out full size.

It will assist the workmen if full-sized models, in mud masonry, &c., of difficult parts of the work are made.

- 9. Progress Sections.—A longitudinal section and cross sections of progress effected should be maintained. The top of the work as completed each month should be carefully levelled and plotted thereon, and each month's work should be indicated by distinctive colour. On the cross sections levels should be recorded. Separate sections should be maintained for excavation and filling.
- 10. Programme of Work.—As soon as the works are fairly started, a programme of anticipated progress should be made. This should take into account the times by which certain stages must be completed, and must allow liberally for all contingencies. The actual progress of the work should be kept in advance of it, to allow for possible future delays.
- 11. Temporary Works.—These should invariably be set out neatly to proper lines and levels. Profiles of these works should be erected in advance whenever possible, so that their future positions and sizes may be seen at a glance.
- 12. Rapid Completion of Small Works.—Small works, repairs, &c., specially ordered by the Officer, should be completed within three days of his order, so that further reference to them will be unnecessary. They should take precedence of the general routine work, and additional labourers (carpenter, blacksmith, &c.) should be engaged, if necessary, to complete them.
- 13. Works Roads.—All roads should be set out outside the permanent works, and should be arranged to be carried up with them as they rise. They should, as a rule, be executed departmentally, and not

by contractors. No materials should be stacked on them. If practicable, they should be arranged so as to be permanently useful after the completion of the works.

- 14. Tidying up Works.—The works must always be left in a tidy state at night, e.g., all mortar should be used up or stacked; all concrete thoroughly rammed; and watering cans, rammers, &c., returned to store. The Sub-Divisional Officer must himself see to this. Rubbish, loose stones, &c., should not be allowed on the works or works roads; these can be cleared off by children.
- 15. Water.—Arrangements should be made for water to be cheaply available at all parts of the work by means of pipes, pumps and hose, cisterns, bhistees, &c. It is essential that ample water is procurable throughout the fair season, and, if necessary, small storage reservoirs should be formed immediately at the end of the monsoon by damming nullas, &c.
- 16. Bailing.—For lifts up to 3 feet, and where there is plenty of room for working, the basket "sup" is the best means of bailing. It can also be used with double shifts up to 6 feet. Beyond that height, large or small pumps should be used. Bailing need not be done, as a rule, where the water level is below that of the blast holes.
- 17. Reserve Work.—Certain work should be reserved for execution during rainy days or when the wetness of the ground will prevent the continuance of the main work. Preparation of concrete metal is a good work for this purpose.
- 18. Preparation for the Monsoon.—All plant and material liable to be submerged should be removed to places of safety in ample time. All burnt kankar should be slaked and the lime screened and stored. All arrangements should be made beforehand for moving material to where it will be required, as this can be done most cheaply and cleanly in the fair weather.
- 19. Works Order-book.—A book should be opened in which all important orders are to be recorded. Each order should be numbered for reference and dated, and the orders should be separated into distinctive sections. In a marginal column should be entered the date of completion of the order and any additions to or modifications of it found necessary. These latter should be made in red ink, so as to catch the eye. A copy of the book should be kept by each Subordinate, who should send it daily to the office at 2 p.m. to have new entries made in it.

The orders given in this book should have all the force of those separately and specially communicated by letters, and they must be

carried out as quickly as possible. Any information respecting the method of completion of an order, &c., which can be concisely given should be noted below the order.

- 20. Maistries' Order-book.—A rough note-book should be given to each Maistry, and in it extracts from the general works order-book which apply to his charge should be posted by the Subordinate in vernacular. Blank pages should be left for the Officer to write his orders on the spot; these should be shown at once by the Maistry to the Subordinate, and should be translated by him. Important orders should be given in writing, not verbally, otherwise they are liable to misinterpretation. Verbal orders should not be accepted as authority for any change in the work.
- 21. Maistries' Appliances.—Each Maistry should be provided with setting-out appliances, i.e., one 50-feet tape (common), mason's level, plumb-line, foot-rule, string, chalk, &c. A small boy may be told off to each Maistry to hold these, to run messages, &c. Muccadums may be given string, chalk and pegs, &c.
- 22. Hand Sketches.—Dimensioned hand sketches should always be given to those directly in charge of any minor work, and these should be kept on it for ready reference.
- 23. Supervision of Construction.—Unless in exceptional circumstances all constructional work should be under the direct supervision of a Maistry, and should not be left to a Muccadum alone.
- 24. Boundaries of Acquired Land.—These should be permanently marked, and as soon as it is settled to acquire the land.
- 26. Survey Marks affected by Works.—A list of these should be sent at once to the Revenue authorities, with a view to the correction of their records, and their action in respect to the removal and replacement of the survey marks awaited as long as possible.

Off-sets to fixed points should be taken from each, so that if their removal is urgent their original positions may be determined at any time.

- 26. Excavating for Materials in Land temporarily acquired.

 When land has to be returned to the owners, the top soil should be carefully removed and stacked separately, so that, after the required material (such as kankar) has been removed, this soil may be replaced so as to permit of the cultivation of the area. For the same reason the area should be left levelled, tidy and free from stones, rubbish, &c.
- 27. Native Holidays.—One week's notice should be given to the Officer of all holidays which are likely to interfere with the progress of the work, so that due arrangements during them may be made in advance.

28. Works Postal Arrangements.—Each Subordinate and Maistry should be accompanied on the works by a small boy who can take messages. In addition there should be a man who can take and deliver all official papers, &c., in a leather bag or tin case to all sections of the work.

2. MISCELLANGOUS.

- 29. Sanitation.—(a) No one should be allowed to go for relief or to wash clothes, bathe, eat, &c., above, or at, the source of water-supply.
- (b) No one should resort for relief to within 100 feet of nulla and river beds.
- (c) If the people will make use of trenches, these should be dug in neat lines and filled with earth each day, and fresh ones should be prepared in advance by the sweepers.
- (d) If the labourers will not use the trenches, specified squatting areas, some for men and others for women, should be marked out by yellow flags at reasonable and convenient distances from the work, where they are not likely to produce nuisance.
- (e) Piecework gangs and all who camp on the works must keep clean their surroundings for 200 yards, or be made to live further off.
- (f) Sanitary guards, with numbered yellow belts, should be appointed to see that these orders are carried out. Also, a few sweepers should in any case be engaged.
- (g) Specified watering-places, or wells, for each caste should be arranged for; it will save waste of time if cylinders of water are kept for them under guard on the works themselves. One or more buckets should be specially reserved for each watering-place, and others should not be used.
- (h) A separate set of water guards, with numbered blue belts, should be appointed.
- (k) A responsible karkun, &c., should be appointed to superintend the sanitary guards and he should report the names of all offenders against the rules.
 - 30. Blasting.—Every precaution should be taken to avoid accidents.
 - (a) A responsible man should be put in charge.
- (b) Blasting, as a rule, should take place at fixed times only, e.g., at the mid-day meal and at sunset.
- (c) Only copper tamping bars and needles should be used, and they should be kept bright for the easy recognition of their material.
- (d) A cordon of watchmen with red flags should be formed around the area of the blasts, and 300 feet from them. The flags should be shown

two minutes before blasting begins and until the last blast has gone off. In case all the blasts do not explode, the flags should not be lowered until ten minutes after the last explosion. The holes of miss-fires should then be well wetted and their charges should be carefully removed after an interval of an hour.

- (e) The number of blasts at one time and place should be limited to six, and these should be counted and recorded by the man-in-charge.
- (f) Fresh blasting should not be carried out without the orders of the man-in-charge.
- (g) Fuzes must be cut to the proper length before the holes are filled with powder and tamped.
- 31. Serious Accidents.—The sufferers should at once be taken to the works hospital, and the medical man summoned. The Officer and his Subordinates should be informed as soon as possible.

3. MATERIALS.

- 32. Material Requirements.—The quantities of materials required for a given amount of work should be estimated from time to time, so that stocks of different classes may be regulated to requirements.
- 83. Materials at Site.—Sufficient material of all descriptions should be collected and kept available so as to last at least for one month, and preferably for two months. This will prevent strikes for higher rates among suppliers and the stoppage of any work from deficiency of supply.
- 34. Collection of Materials.—A special man, not under the rank of Sub-overseer, should be told off to superintend the suppliers of materials, many of whom will be working some distance from the works. He should see that the material is up to specification and is being supplied according to ordered quantities. He should separate rejected materials from the rest before measurements are taken, and should, as far as possible, prevent them from being brought to site. He should meet the Officer once every second day to keep him informed of what is being done. Lists of special requirements should be given to him from time to time.
- 35. Stacking of Materiais.—Materials such as sand, slaked lime kankar, charcoal and metal should be stacked under departmental supervision in heaps of specified height, so as to obtain fair measure. Rubble stones should be bought in heaps of specified dimensions, and a specified deduction made therefrom to allow for vacuities. The method of stacking should be carefully watched to prevent fraud.
- 36. Selection of Materiais.—A special and well-qualified man should be kept to see that all stones, metal, and other materials are of the

specified size, quality, &c., before they are stacked for measurement. Those which are considered to be not up to specification, should be marked at once with a distinctive temporary mark, stacked separately for inspection, and removed from the works, or marked permanently as soon as they have been finally rejected by the Officer or Subordinate.

- 37. Issue of Materials.—No material should be issued to anyone except by the Maistry in charge, who should account for the issues to the Subordinate daily.
- 38. Balances of Materials at Site.—These should be actually measured by the close of the works month, as on them the proper calculation of the cost of the work depends. They should be reported on the second day of the new month by the Subordinate in charge of materials to the Officer. To facilitate this measurement, all paid-for heaps should have on top flat reference stones, with their cubic capacity painted thereon. All these stones should be in place before the original measurements are taken. The quantity of stock in hand can thus be readily ascertained at any time.
- 39. Protection of Materials.—Due precautions should invariably be taken to shelter all materials requiring protection from sun and rain, and to guard carefully all costly and readily saleable material. All wooden articles should be stacked on stones off the ground.
- 40. Lime-burning Account.—Accounts of the cost of manufacture and the amount used on the works should be carefully kept. Also, the out-turn of each kiln should be recorded in a register.

Where cement is used, a register of the issue of barrels should be kept, and the empty ones returned at once to store.

- 41. Gelatine and Dynamite, &c., Cartridges.—These cartridges should be kept in a separate locked under-ground magazine away from the works. Their detonators and fuze should be kept under lock in the store. The cartridges should be issued twice a day in time to allow of their being primed, and, until handed over to the blasters, must be in the charge of a responsible man. The junction of the fuze and the detonator should, when necessary, be made water-tight with wax, tarred over. A careful register of issues, blasts, and returned cartridges should be kept. All unexploded cartridges should at once be returned to the magazine after the primers have been removed.
- 42. Powder.—Blasting powder should be stored in wooden casks buried under ground.
 - 4. STORES AND TOOLS.
- 43. Stores and Workshops.—A special sub-charge should be made of these. In regard to stores, the different sub-divisional officers should

frame monthly indents on the chief Storekeeper so as to replenish their own stores, and these indents should be sanctioned by the head of the works.

Large repairs should be sent to the workshop, and small ones effected by the sub-divisional staff on the works themselves.

- 44. The Store.—Each class of store should be kept separate from the rest, and all outside stores should be raised from the ground.
- 45. Stamping Tools.—All tools in use should be stamped. The stamping of each letter should cost from two to three annas per hundred tools.
- 46. Register of Tools.—In this one or more pages should be devoted to each kind of tool in ordinary, general use. In it the dated issues (in black) to, and returns (in red) by, each petty Contractor and subdivision should be shown by the Storekeeper, so that he can readily ascertain and check his balance at any time.
- 47. Issue of Tools to Contractors.—A register of all issues and receipts should be kept, with a separate page, or pages, for each Contractor. Persons supplied should sign each entry, and afterwards the Subordinate should ascertain from them that they have received the full number entered against their names, and should also initial the entry. Each entry should give the number, size, weight, condition, &c., of the articles issued.
- 48. Issue of Plant to Contractors.—Where there are several petty Contractors on a work, a register of small plant, such as trucks, measures for concrete, &c., ladders and screens, &c., should be maintained, and the articles should be marked temporarily with the Contractors' initials.
- 49. Issue of Tools to Departmental Gangs.—Tools may be similarly issued to Muccadums of gangs, and may be kept with them, provided that on the days on which musters are closed all such tools are counted by one of the staff. The value of missing tools should be recovered from the defaulters at the time of payment of the musters.
- 50. Returning Tools, &c., out of use.—All tools and articles of plant when no longer required on the work should at once be returned to store.
- 61. Broken Articles.—All such as cannot be mended on the works themselves should at once be sent to the workshop, and should be repaired immediately. If unrepairable, they should at once be weeded out and kept separately in the main store for final disposal.
- 52. Watering Pots.—Galvanised watering pots, being costly, should be issued only to special men, who should be held responsible for their

damage or loss. Common ones made of old kerosine tins should be generally employed. For masonry work the roses should be soldered on to prevent their loss. Roses are necessary only for watering metal to be mixed for concrete, and for concrete and masonry less than two days old; other watering should be done plentifully by buckets.

- 53. Rammers.—Wooden rammers should be made of "babhul," or hard wood, 7 inches to 8 inches diameter at base, 5 inches to 6 inches diameter at top, and 8 inches high. The handles of these and other tools are best made of "babhul," or tough wood; their ends should be split, and they should be wedged up tight.
- 64. Miscellaneous Articles.—A sufficient stock of all miscellaneous articles required on the works, e.g., mortar mill poles and centre posts, mortar millstones, scrapers, roller poles, ladders, boning rods, handles, rammers, wooden lime rakes, templates, tramway fittings, lime, cement, and metal measures, &c., should always be kept ready. A list of the stock required should be made out and kept for guidance in the workshop.

A list of fittings and bolts, showing the amount of stock required to be maintained, balance on works and supplies to be procured, should be submitted monthly. As soon as any stock article is issued another should be made to replace it.

Similarly, a month's supply of all petty stores should be kept by the Storekeeper, and should be replenished by means of monthly indents on the dealers.

- 55. Setting-out Materials.—These should invariably be kept in readiness in the sub-divisional store. They comprise bamboos, pegs (large and small), string, coir, rope, chalk, white, black and red paint, tar, brushes, plumb-bobs, mason's squares, mason's levels, teak templates, &c.
- 56. Indent for Following Day's Requirements.—Each Subordinate should prepare this by 2 p.m., and get the Officer's sanction, so that it may be issued from the store in time. Dimensions of articles and sketches should be given when necessary, and the indent should be arranged under heads in accordance with the separate minor works for which the articles are required, so that their cost may be charged to those works.
- 57. Register of Expenditure of "Sundries."—This should be kept regularly and posted daily, each entry being initialled by the Officer in charge to see that expenditure is properly controlled and debited to the works concerned.
- 58. Receipts and Issues.—All articles and materials sent from one part of the works to another should by accompanied by vouchers, or

acknowledgments, which should be obtained and recorded so as to prevent mistakes occurring in debiting the charges incorrectly.

5. PLANT.

- 59. Rules to be observed in the Use of Tram Plant.—(a) Immediately a truck is in need of repair it should be taken off the rails and placed neatly on one side until it is repaired.
- (b) Truck men should not run with their trucks, but should proceed quietly.
 - (c) Trucks should not be loaded above their tops.
- (d) If a loaded truck leaves the rails, it should be emptied before it is lifted on. Bars should never be used for levering trucks on to the rails.
- (e) All axles should be regularly oiled and a piece of oiled waste kept in the pedestal.
- (f) The tram line should be laid in regular lines and curves, with as few ups and downs as possible. It should be maintained well ballasted, and all ties and joints, &c., should be constantly kept in repair. All switches and points should be kept free of sand, dirt, &c. Where field drainage is crossed, the line should be laid on single stone sleeper piers.
- (g) All trucks and carriages should be numbered. They should be examined each evening in the presence of their users near the subdivisional office; all missing parts should be noted, and they should be replaced at the cost of the users. The moving parts of trucks should then be oiled ready for next day's work.
- (h) A special gang should be kept for tram laying, &c. When the line has once been well laid, a very small number of men will suffice for this purpose.
 - (k) All repairs should be done by skilled blacksmiths.
- (l) To avoid confusion, trucks should go in "trains," i.e., a number together.
- (m) All loose parts of the tramway and trucks should be neatly stacked near the workshop or store.
- (n) All trucks should be examined once a week by the Sub-divisional Officer himself.
- (o) A standard gauge for rail laying should be made and given to the rail layers.
- (p) The number of serviceable trucks should be noted in the weekly report.
- (r) As a rule trams should not be used at night, or when there is not departmental supervision.
 - 60. Supervision of Pumping and other Engines.—These must

invariably be placed under the charge of a thoroughly competent and certificated man. He should be supplied with the best materials and appliances, including special dubbin for belts. He should be held solely responsible for everything under his charge. All engines should be thoroughly cleaned up, washed out and repaired once a week.

- 61. Pumping Engines and Special Plant.—These should be carefully and thoroughly inspected once a week by the Subordinate in charge of the workshop. Petty repairs should be done by skilled men only, and all materials used should be of the best quality. Such plant should be protected from the weather, and should be cleaned and painted before the rains.
- 62. Pumps.—All valve leathers should continuously be kept soft. All valves should be maintained in a state of repair. Hose should be repaired as soon as this becomes necessary; should be carefully coiled when out of use; and should be lifted, not dragged, over rough ground. Suction hose should be wrapped round with thin coir rope to protect it from abrasion and the action of light.
- 63. Boat.—This should be kept under cover as much as possible, and should be loaded when it is out of use, so as to keep under water all planks liable to be submerged when it is in use, and thus to prevent their cracking. The lower sides of gratings should be tarred and the upper sides oiled. All unpainted wood should be oiled and brass work kept bright. The leather buttons on the oars should be greased with fat, and the oars stacked on level planks to prevent them warping. The inside of the boat should be kept dry. Coir rope fenders should be provided to protect the sides of the boat from injury.

In reservoirs, boats should be anchored thus: An old millstone, or other heavy weight, should be placed on the reservoir bed, and to it should be fastened a chain which is attached at the other end to a buoy, to which the boat itself should be fastened.

- 64. Stacking Woodwork.—All wood and wooden articles out of use should be neatly stacked under shade and raised from the ground on stones.
- 65. Removal of Plant and Material before Monsoon.—All plant and material liable to be submerged, or to be carried away, should be removed to places of safety by May 15th. No fresh material should thereafter be stacked where it is liable to suffer damage.

6. ESTABLISHMENT.

66. Sub-division of Works.—On a large work each Upper Subordinate should have a definite charge, and should have special establishment and a small store allotted to him.

- 67. Duties of Establishment.—The duties of each member should be laid down in writing, and each should be held wholly and solely responsible for his definite charge.
- 68. Appointment of Work Establishment.—This should be done according to some scale thus:—
 - 1 Maistry to 50 masons;
 - 1 Karkun to 200 labourers;
 - 1 Muccadum to 50 labourers.

These are in addition to the general supervising staff.

- 69. Appointments on Works.—All appointments should be made by the Officer of highest rank on the work, or be sanctioned in writing by him. Also, all changes in pay and classification should be similarly sanctioned.
- 70. Muccadums' Pay.—The pay of these men should bear some relation to the number of people they bring on to the works. They should be held responsible for keeping up the strength of their gangs, and for giving early information about those who intend to leave or have left the works.
- 71. Muccadums' Badges.—These should consist of red cloth, 3 inches in diameter, on which distinctive numbers, about 2 inches high, should be printed in black, so that the men can be identified at any time. The badges should be sewn on to their left sleeves.
- 72. Independence of Maistries and Karkuns.—Maistries should not have control over Karkuns, and vice versâ. Each should be quite independent of the other.
- 73. Authority of Office Establishment on Works.—Clerks and peons should not have authority on works, and coolies and materials should not be given to them without written orders.
- 74. Daily Inspections.—The Maistries should accompany the Officer when he commences his inspection, and the Subordinate, on his return journey. All orders for work and complaints should be disposed of by the Officer with the latter at the time, and labourers should thus be informed.

7. LABOUR.

- 75. Working Hours.—The commencement and end of the working day should be announced by the blowing of a horn. Half an hour after sunrise and sunset itself may be fixed for these limits. Mustering should begin at once, and late arrivals should be kept separate, so that they may be dealt with afterwards.
 - 76. Off Time.—Specified times should be fixed for meals, and no one

should be allowed to eat at other times. The commencement and end of "off time" should be announced by a horn, and a flag should be kept hoisted in a conspicuous place during its continuance. In cases where rapid progress is necessary, continuous work should be arranged for by employing special gangs when the ordinary ones are off the work.

77. Rates and Numbers of Labourers.—A scale of the maximum and the minimum rates of labour should be laid down. Thereafter the Subordinate in charge may be authorised to fix the rates in individual cases. Similarly, he should fix the number required for any particular work.

Although Maistries and Karkuns may be consulted in such matters, they must not be allowed to fix rates and settle numbers.

- 78. Tasking Work.—Rates should be fixed for all classes of work, and the labourers kept up to their allotted tasks and paid accordingly. Due notice of their work should be given to them and its extent clearly explained to them. For certain classes of work the ticket system may be used, but quantities of work done should be checked by tape measurements periodically.
- 79. Distribution of Work.—By 5 p.m. every one should know what and where is to be his work for the following day, so that then he may at once proceed to it. The Officer should give his orders to the Subordinates, these to the Maistries, and these to the gang Muccadums.

8. PETTY CONTRACTORS.

- 80. Agreements with Petty Contractors and Suppliers.—These should be recorded in a book, each being signed or attested by the supplier, &c. They should state shortly:—
 - (a) The nature, specification, and quantity of supply, &c.;
 - (b) The rate;
- (c) The time by which quantities of supply, &c., are to be effected and measurements to be taken;
- (d) The penalties to be enforced for late, short, or inferior supplies, and for inattention to orders.

It is best to have agreements with single men, and not with partners. All agreements should be subject to the approval of the final sanctioning authority.

81. Petty Supply Contract.—A contract to last for one year should be entered into with a respectable dealer to supply all miscellaneous articles required on the works. Monthly indents prepared by the Store-keeper on receipt of the sub-divisional indents should be sent to him, and he should be bound to supply all articles within a fixed time.

- 82. Rates of Supply by Petty Contractors.—As soon as rates are settled, a list of them should be made out and posted, so that all intending suppliers may know them. More liberal rates may be given at first to attract labour and material, and the dates up to which they will be in force should be intimated. After fair rates have once been settled, it is not advisable to make further alterations in them. Where the same materials have to be procured from different localities, a table of additional rates for carriage should be made out.
- 83. Supervision of Petty Contractors' Work, &c.—Reliable Muccadums should be told off to see that all such works are properly carried out.

Similarly, special men should be told off to superintend every departmental or other operation, such as lime burning, sand washing, mortar mixing, etc.

- 84. Number of Petty Contractors' Labourers.—Each Maistry should keep a tabular register of the numbers of such labourers on each work under him, so that in case of dispute about the fairness of rates the matter may be inquired into. The Subordinate should check these and abstract them daily in abook or register.
- 86. Fining Contractors' Workpeople.—A list of fines should be prepared monthly and the total recovered from the Contractor, either by deduction from his bill or by ready-money payment. The list should be sanctioned by the Officer in charge.

9. Office Arrangements.

86. Sub-divisional Office Duties.—The Sub-divisional Clerk should audit and check daily reports, muster rolls, bills, measurement books, and other cash vouchers and imprest accounts. He should prepare daily reports and other returns, day books, registers of works, and all account papers and returns exclusive of those given to the Cashier.

The Second Clerk should register, copy, despatch, and file all correspondence.

The Cashier should complete measurement books, prepare receipts, bills, and imprest accounts, and compare correspondence. He should bring cash from the treasury, effect all payments, and be responsible for all cash and cash transactions. He should initial all cheques in token of having examined and found them correct. When making payments of muster rolls, he should count out only a little more money than is required, and, when the payment is finished, he should check the balance with the rolls before returning it to the cash bags.

The Storekeeper should prepare store accounts and indents for store

supplies. He should maintain careful registers of all tools and plant and store issues. He should keep a sufficient balance of everything required on the works, and make timely indents for all supplies of which the store is short.

- 87. Sub-divisional Returns.—These should be posted directly the entries can be made, so as to avoid a rush of work at the end of the month.
- 88. Final Measurements.—Before these are taken, all side widths and slopes should be properly taken out, and, before the bills are made out, all "deadmen" should be removed and the foundation cleared. Cross and longitudinal sections of completed foundations should be taken as soon as they are ready, and the length to which the cross section applies should be noted carefully.
- 89. Bills and Measurement Books.—All persons connected with the preparation or audit of these should enter their dated initials to the transaction concerned.
- 90. Dally Measurements of Work.—These are to be taken each evening with such accuracy that they will not differ more than 5 per cent. from the month's final measurements.
- 91. Final Measurements of Work and Supplies.—These should be recorded in measurement books, each chain of work being separately entered and its totals carried forward, so that a comparison and a check with the estimate can be made at any time.

Similarly, the measurements of each class of material should be separately recorded.

92. Daily Report.—This should be submitted each day before 2 p.m. on a printed form having columns for:—

The numbers on each subwork of each principal class of labour, one being for establishment;

The approximate quantities of work done during the previous day; Remarks about any particular circumstance, reasons for increase or decrease of labourers, or out-turn, &c.

93. Weekly Report.—The daily reports should be abstracted into a printed weekly report, which should record the daily numbers of different classes of labourers and the approximate total amount of work done. On the back should be entered general remarks noting:—

The levels to which the work was completed;

The quantity of work completed;

Reasons for slow or quick progress;

Any particular occurrences during the week.

The weekly reports should thus give a complete and fairly accurate history of the works.

APPENDIX 23.

TABLE 1 OF TASK-WORK IN DIFFERENT SOILS.

EXPLANATORY NOTE.

The table has been drawn up for the purpose of determining and arranging in a systematic manner the quantities of work required as daily tasks from men, women, and children engaged upon the construction of earthwork, and has proved particularly useful where large bodies of workpeople, such as famine or extra-mural labour, have been employed.

The workpeople should be divided into gangs, each gang consisting of fifty people—men, women, and children—under one muccadum; six gangs being placed under one mustering karkun.

The following example illustrates the use of the Table :-

Assume a gang consisting of 20 men + 20 women + 10 children to be working with a lift varying from 6 to 10 feet, and a lead varying from 200 to 300 feet, in soft murum.

In the column including this lift and lead, the relative tasks for one man, one woman, and one child are 48, 32 and 16 cubic feet respectively:

Then
$$48 \times 20 = 960 = \text{task of } 20 \text{ men.}$$

 $32 \times 20 = 640 = \text{,, } 20 \text{ women.}$
 $16 \times 10 = 160 = \text{,, } 10 \text{ children.}$

1,760 cubic feet = total task

to be executed by the gang, if the material were black or red soil. As, however, the example refers to soft murum, the multiplier, 0.82 (see the footnote to the Table) must be used:

Total task = $1,760 \times 0.82 = 1,443.20$ cubic feet, and this is given to the muccadum in round numbers. Thus, in the case of a puddle trench 10 feet in width, the task would be given as follows:—

Length. Width. Depth. 140 feet × 10 feet × 1 foot.

¹ Extracted from Marryat's "Specifications, Rates and Notes on Work," 4th ed., pp. 444—448. (Drawn up by Mr. C. T. Burke, B.E., M. Inst. C. E.)

In the construction of a dam where the earth is put on in layers of uniform thickness, tasks should be measured on the dam.

For breaking lumps of earth, spreading and making the layers uniform, two men should be allowed for each gang—that is, one man for each twenty-five people employed.

In puddling, in layers of 1 foot in thickness, three men should complete, including cutting, treading and covering, a space of 25 feet \times 10 feet, or 250 cubic feet in one day.

In "ramming" with a rammer weighing 30 lbs., one man should complete 500 square feet per day.

The following Tables have reference more especially to earthwork in large dams and embankments:—

Table showing an Average Day's Work per Man, Woman, and Child under different "Lifts" and "Leads" in Black or Red Soil.

Lift, f	eet.	Lea	d, feet.	Average	Day's Work, cu	bic feet.
From	То	From	То	Man.	Woman.	Child
•••	5		50	76	51	25
inclus	ive.	50	100	70	47	23
		100	200	70 64	43	21
		200	300	59	39	20
		300	400	53	35	18
		400	500	53 48	32	16
	1	500	600	42	28	14
		600	700	36	24	12
		700	800	30	20	10
		800	900	24	16	8
		900	1,000	18	12	6
.5 ,	10	•••	100	56 52	37	19
inclus	sive.	100	200	52	35	17
	1	200	300	48.	32	16
		300	400	44	29	15
		400	500	40	27	13
		500	600	35	23	12
	į	600	700	31	21	10
		700	800	27	18	9
		800	900	22	15	7 6
	ŀ	900	1,000	17	11	6

TABLE—continued.

Lift, fe	et.	Lea	d, feet.	Averag	e Day's Work, c	ıbic feet.
From	То	From	То	Man.	Woman.	Child
10	15	•••	100	48	32	16
inclus	ive.	100	200	45	30	15
1		200	300	41	27	14
		300	400	38	25	13
		400	500	34	23	11
		500	600	30	20	10
		600	700	27	18	
	•	700	800	24	16	9 8
		800	900	20	13	7
		900	1,000	16	11	5
15	20	•••	100	42	28	14
inclus	ive.	100	200	39	26	13
İ		200	300	36	24	12
		300	400	33	22	11
1		400	500	30	20	10
		500	600	27	18	9 8
		600	700	24	16	8
ţ		700	800	21	14	7 6
		800	900	18	12	
		900	1,000	15	10	5
20	25	•••	100	37	25	12
inclus	ive.	100	200	35	23	12
		200	300	32	21	11
		300	400	30	20	10
		400	500	27	18	9 8
		500	600	25	17	
		600	700	22	15	7
		700	800	19	13	7 6 6
		800	900	17	11	
		900	1,000	14	9	5
25	30		100	33	22	11
inclus	ive.	100	200	31	21	10
		200	300	29	19	10
		300	400	27	18	9 8 8 7 6 5
		400	500	25	17	8
		500	600	23	15	8
		600	700	21	14	7
		700	800	19	13	0
		800	900	16	11	5
		900	1,000	13	9	1 4

TABLE -continued.

	1 100	1 ABLE—COM:		e Day's Work, cu	ıbic feet.
Lift, feet.	_	d, feet.			
From To	From	То	Man.	Woman.	Child.
30 35		100	30	20	10
inclusive.	100	200	28	19	9
1	200	300	26	17	9
	300	400	24	16	8
	400	500	22	15	7
	500	600	20	13	7
	600	700	18	12	6
1	700	800	16	t I	9 8 7 7 6 5 5
	800	900	14	9 8	5
	900	1,000	12	8	4
35 40		100	28	19	9
inclusive.	100	200	26	17	9 9 8 7 7 6 5 4 4
1	200	300	24	16	8
j	300	400	22	15	7
	400	500	20	. 13	7
ļ	500	600	18	12	0
.	600	700	16	11	5
	700	800	14	9	5
İ	800	900	13	9	4
	900	1,000	12	<u> </u>	4
40 45		100	26	17	9 8 8 7 7 6 6
inclusive.	100	200	24	16	8
i	200	300	23	15	8
1	300	400	21	14	7
	400	500	20	13	7
	500	600	18	12	0
	600	700	17	11	
İ	700	800	15	10	5 4
	800	900	13	9	4
	900	1,000	11	7	4
45 50 inclusive.	•••	100	24	16	8 8
inclusiv e.	100	200	23	15	
İ	200	300	21	14	7
	300	400	20	13	7
	400	500	18	12	6
	500	600	17	11	ر ا
	600	700	15	10	ا ع
	700	800	14	9) 3
	800	900	12 10	9 8 7	7 7 6 6 5 5 4 3
İ	900	1,000	10	/) 3

APPENDIX 23.

TABLE-continued.

Lift, i	ieet.	Lead	d, feet.	Average	e Day's Work, cubic feet.		
From	То	From	То	Man.	Woman.	Child.	
50	55		100	22	15	7	
inclus	sive.	100	200	21	14		
		200	300	20	13	7 7 6	
	;	300	400	18	12	6	
		400	500	16	11	5	
	i	500	600	15	10	5	
	1	600	700	14	9	5	
	1	700	800	13	9	4	
		800	900	12	8	4	
		900	1,000	10	7	5 5 5 4 4 3	
55	60		100	21	14	7	
inclus	sive.	100	200	20	13	7	
	1	200	300	18	12	7 7 6 6	
		300	400	17	11	6	
	i	400	5∞	15	10	5	
		500	600	14	9	5	
		600	700	13	9 9 8	5 5 4 4 3 3	
		700	800	12	8	4	
		800	900	10	7	3	
		900	1,000	9	7 6	3	

The above quantities m	ust be	multip	lied, fo	r:—	
Soft murum by	•••	•••	•••	(0.82)
Average murum by	•••	•••	•••	(0.64 Excavation.
Hard murum by		•••		(0.46)
Loose earth or sand by			•••]	1.25)
Loose murum by		•••	•••]	l·25) l·00∫ Spoil.

APPENDIX 24.

TABLES 1 FOR ASCERTAINING THE COST OF CARRIAGE BY COOLIES AND BY CARTS.

NOTE ON THE COST OF CARRIAGE.

When any quantity of materials of given weight or cubic content (L) has to be moved to any distance in feet (d) by a succession of trips of a number of units of conveyance, whose loads in lbs. or cubic feet is (1), then the cost of transport of (L) will depend:-

Firstly, on X, or the proportion of (L) to (l); that is, the number of unit-loads, or trips of a unit of conveyance, that will be necessary.

Secondly, on Y, or the fraction of a working day, taken by a unit to make one trip to (d) and back.

Thirdly, on Z, or the hire of a unit of conveyance for a working day. In fact, the cost of transport will = $X \times Y \times Z$.

Tables for all possible values of Z would have to be very numerous. The following Tables, however, give some useful values of Y for various

leads, also of $X \times Y$ for a few given values of X or $\frac{L}{I}$.

The calculation of Y requires the following data:-

M, the number of minutes in a working day.

t, the time in minutes taken to load and unload a unit.

*s, the average speed in feet per minute of a unit.

If, also, for convenience of notation,

T, represent the time in minutes taken for a unit to make one trip to (d) and back,

N, be the number of such trips made in a working day, then

$$T = \frac{2d}{s} + t$$
 (1)
 $N = \frac{M}{T} = \frac{M}{\frac{2d}{s} + t}$ (2)

$$Y = \frac{T}{M} = \frac{\frac{2d}{s} + t}{M} = \frac{1}{N} \quad \cdots \quad (3)$$

If T be observed as well as t, then from (1):—

$$s = \frac{2d}{T - t}$$
 (4

* Note.—s, the average speed, is the harmonic mean between the observed or known speeds s', s'', of the unit when loaded and unloaded respectively,

¹ Extracted from Marryat's "Specifications, Rates, and Notes on Work," 5th ed., pp. 2-4

TABLE I.

When the unit of conveyance = a Cooly Load, or $l=\frac{1}{2}$ cubic foot. Data: M = 500 minutes; $t=\frac{1}{2}$ minute; s=200 feet; d as per column 1. Formulæ; $T=\frac{2d}{s}+t$; $N=\frac{M}{T}$; $Y=\frac{T}{M}$; $X=\frac{L}{l}$; Z= daily hire of unit. Cost of transport of quantity L to $d=X\times Y\times Z$.

	11.	111.	Iv.	v.	I.	11.	111.	IV.	v.
			l		ļ				
Lead or distance in feet.	No. of trips to d and back in a day.	Time of a trip to dand back in minutes.	Fraction of a day taken to make one trip to d and back expressed in decimals.	When $l = \frac{1}{2}$ cft. and L = 100 cubic ft., X × Y = 200 Y.	Lead or distance in feet.	No. of trips to d and back in a day.	Time of a trip to d and back in minutes.	Fraction of a day taken to make one trip to d and back expressed in decimals.	When $l = \frac{1}{2}$ cft, and $L = 1 \infty$ cubic ft., $X \times Y = 2 \infty Y$.
d.	N.	T.	Y.	X × Y.	d.	'n.	T.	Y.	X×Y
20	714	0'70	'0014	0,38	475	95	5°25	*0105	2,10
30	625	0.80	.0016	0'32	500	91	2,20	,0110	3,30
40	556	0,00	,0018	o•36	525	87	5'75	'0115	5,30
50	500	1,00	°C020	0,40	550	83	6.00	,0130	2.40
60	455	1,10	10022	0'44	575	80	6-25	'0125	2'50
70	417	1'20	*0024	0*48	600	77	6.20	'013 0	2'60
8 o	385	1,30	°0026	0.23	625	72	6.72	*0135	2'70
90	357	1'40	*0028	0.26	650	71	7'00	*0140	2.80
100	333	1'50	°c030	0.60	675	69	7'25	*0145	2'90
125	286	1.75	.0032	0.40	700	67	7.20	*0150	3,00
150	250	3,00	*0040	0.80	750	63	8*co	.0160	3.30
175	222	2'25	*0045	0,00	800	59	8*50	*01 <i>7</i> 0	3'40
200	200	2.20	•co50	1,00	850	56	0,00	*o180	3.60
225	182	2'75	'0055	1,10	900	53	9.50	·0190	3.80
250	167	3,00	10060	1,50	950	50	10,00	'0200	4'00
275	154	3 25	10065	1.30	1,000	48	10.20	'0210	4'20
300	143	3.20	'0070	1'40	1,050	45	11,00	'0220	4 40
325	133	3'75	0075	1'50	1,100	43	11.50	*0230	4.60
350	125	4.00	•080	1.60	1,150	42	12'00	'0240	4.80
375	118	4'25	°oc85	1'70	1,200	40	12'50	'0250 '	2,00
400	111	4'50	.0000	1.80	1,250	38	13.00	0260	5'20
425	105	4.75	'0095	1,00	1,300	37	13'50	0270	5'40
450	100	5'00	'0100	2'00	1,320	36.2	13.75	0275	5,20
					,,,,,,,,	J- 3	-3/3	/3	

N.B. - Quantity carried in a day is N unit-loads.

Cost of carrying one cooly load to $d = Y \times \text{hire of cooly}$;

Cost of carrying 100 cubic feet of any materials is $X \times Y \times$ hire of cooly.

EXAMPLE.

What would be the cost of removing 100 cubic feet to 600 feet if coolies cost 3 annas a day ?—Ans. $2.6 \times 3 = 7.8$ annas.

TABLE II.

When the unit of conveyance = a Cart Load or l has the values in Columns V to XII.

DATA: M = 540 minutes; t = 10 minutes; s = 100 feet; d as per column I.

Formulæ; $T = \frac{2d}{s} + t$; $N = \frac{M}{T}$; $Y = \frac{T}{M}$; $X = \frac{L}{l}$; Z = daily hire of unit.

Cost of transport of quantity L to $d = X \times Y \times Z$.

		111.	IV.	v.	VI.	VII.	VIII.	IX.	X.	XI.	XII.
r dis-	ck .	trip sck	of a n to trip trip back I in is.	Х×	Y FOR T	HE UND	ERMENT	IONED '	VALUES	or L	ND I.
	of trips nd back a day.	ne of a trip and back minutes.	iction of a y taken to ke one trip f and back pressed in ecimals.		L = r	oo cubic	feet.		1	L = 1 to	n.
Lead or tance in	No. of trips to d and back in a day.	Time of ar	Fraction of a day taken to make one trip to d and back expressed in decimals.	l in cft.	l in cft.	l in cft.	l in cft.	l in cft.	l in	l in cwt.	l in cwt.
ď.	N.	T.	Y.	6	7	8	9	10	8	9	7●
400	30	18.0	0.0333	o*556	0'476	0'416	0'370	0,333	0'0825	0.0230	0.0666
431	29	18.6	0°0345	0.575	0 493	0'431	0.383	0 345	0.0863	0.0766	0.0680
482	28	19.6	0.0352	0.262	0,210	0'446	0,364	0.357	0.0862	0.0203	0'0714
500	27	20.0	0°03 70	0.612	0.23	0.463	0 411	0.370	0.0932	0.0830	0.0240
540	2 6	20.8	0'0384	0.640	0 549	0'480	0'427	c.384	0,0000	0.0823	0.0268
580	25	21.6	0,0405	0.666	0.572	0,200	0'444	0'400	0,1000	0.0889	0.0800
625	24	22.2	0,0410	c 693	0.594	0,20	C'462	0.416	0,1040	0.0922	0.0833
675	23	23 5	0'0435	0.724	0.621	0.244	0.483	0'435	0.1082	0.0966	0.0820
73°	22	24.5	0'0454	0.757	0.649	0.262	0,204	0'454	0,1132	0,1000	0.0008
785	21	25.7	0'0476	0.203	0.680	0.202	0 529	0'476	0,1503	0.1008	0.0923
850	20	27°0 28°4	0'0500	o.833	0.214	o*625 o*657	0.222	0,200	0.1220	0,1111	0.1000
921	19 18		0.0226	0.077	0.751		0.284		0,1312	0,1100	0 1052
1,000		30.0	o*o555 o*o588	0.080	o 840	0.694	0.623	o'555 o'588		0'1234	0,1111
1,188	17 16		0.0622	1'042	0.893	o.481	0.604	0 500	0'1470	0.1300	0'1176
		33.7 36.0	0.0022	1'111	0.023	0.833	0.240	0.666	0.1900	0'1480	0 1250
1,300	15	38.2	0.0214	1,100	1 020	0.803	0.793	0.214	0.1282	0.1200	0'1330
1,575	14 13	41.2	0.0769	1.383	1.000	0.001	0.824	0.769	0.1052	0.1210	0'1540
1,750	12	45'0	0.0833	1.389	1,130	1'042	0.030	0.833	0.2080	0.1820	0.1990
1,955	11	49.0	0.c3o3	1,212	1,500	1.130	1,010	0.000	0,5580	0,5050	0.1850
2,200	10	54.0	0,1000	1.666	1,450	1.50	1,111	1,000	0'2500	0,5550	0.3000
2,500	0.0	60.0	0,1111	1 852	1.282	1.380	1'234	1,111	0.5140	0'2470	0,5550
2,675	8.2	63.2	0,1126	1,000	1.680	1 470	1 307	1'176	0.3040	0.5010	0.5320
2,875	8.0	67.5	0,1320	2 083	1.486	1.263	1.389	1,520	0.3130	0.5220	0.3200
3,100	7.5	72.0	0,1333	3,333	1'904	1.666	1.481	1,333	0.3330	0.3000	0.3000
3,355	7.0	77.0	0'1428	2,383	2'040	1'784	1.282	1 428	0.3200	0'3170	0,5860
3,653	6.2	83 0	0'1538	2.263	2'197	1.022	1.700	1.238	0.3840	0.3410	0 3070
4,000	6.0	90.0	0,1666	2.777	3,381	2 083	1 852	1.666	0'4170	0.3700	0,3330
4,425	5.2	98.2	0'1818	3.030	2.297	2'273	2.050	1.818	0.4540	0'4030	0.3630
4,900	5.0	108.0	0,3000	3,333	2.857	2.200	2,333	2,000	0.2000	0'4450	0.4000
5,500	4'5	123'0	0,3333	3'703	3'174	2.777	2,400	2,555	0.5550	0.4940	0.4440
6,200	4'0	135.0	0'2500	4'166	3.221	3'125	2.777	2,200	0.6250	0.2200	0.3000
7,200	3.2	154'0	0*2857	4'762	4'082	3'573	3'174	2.857	0.2140	0.6340	0'5710
8,500	3.0	180.0	o'3333	5-555	4'762	4'167	3 704	3,333	0.8330	0.2410	0.6660
10,300	2.2	310.0	0,4000	6 666	5'714	5'000	4 444	4,000	1,000	0.8830	0.8000
13,000	2.0	270'0	0'5000	8.333	7 143	6.250	5.222	2,000	1,320	1,111	1,000
17,500	1.2	360.0	o [.] 6666	11,111	9'524	8.333	7'407	6.666	1.670	1,480	1,333
26,500	1.0	540'0	1,000	16.666	14.586	12,200	11,111	10,00	2,200	3,530	8,000
53,500	0.2	1,080.0	2,000	33,333	28.272	25,000	55,555	50,00	5000	4,440	4*000

EXAMPLE.

The cost of carrying 100 cubic feet of metal 2,200 feet, if a cart hired at 12 annas a day takes 8 cubic feet as its load,

= $1.25 \times \text{hire of cart per day} = 1.25 \times 12 = 15 \text{ annas.}$

APPENDIX 25.

USEFUL MEMORANDA.1

I. GENERAL.

```
1 cubic foot of water = 62.425 lbs. = 0.557 cwt. = 0.028 ton.
1 cubic inch of water = 0.03612 lb.
l gallon of water
                      = 10 \text{ lbs.} = 0.16 \text{ cubic foot.}
1 cubic foot of water = 6.24 gallons = say, 61 gallons.
1 cwt. of water
                      = 1.8 cubic foot = 11.2 gallons.
                       = 35.98 cubic feet = 224 gallons.
1 ton of water
Inches of rainfall \times 2,323,200 = cubic feet per square mile.
Inches of rainfall \times 141
                                 = millions of gallons per square mile.
Inches of rainfall \times 3,630
                                 = cubic feet per acre.
1 inch run-off per hour per square mile = 645.33 cubic feet per second;
                                         = say, one cubic foot per second
                                              per acre.
12 cubic feet per second = 1,036,800 cubic feet per day;
                           = say, 1 million cubic feet per day.
1 cubic foot per second = 31,536,000 cubic feet per year.
1 cubic foot per minute = 9,000 gallons a day.
1 cubic foot per second = 540,000 gallons a day.
                           = say, half a million gallons a day.
Number of seconds in 1 day = 86,400.
1 horse-power = 33,000 foot lbs. per min. = 550 foot lbs. per sec.
Horse - power = 62.4 \times \frac{\text{cubic feet falling per second}}{550} \times \left(\frac{\text{height of fall}}{\text{in feet}}\right)
                                     550
1 horse-power = approximately 8.814 cubic feet per second falling
     1 foot.
Square feet in 1 acre
                               = 43,560.
Square feet in 1 square mile = 27,878,400.
Acres in 1 square mile
                               = 640.
1 acre foot = quantity of water 1 foot deep on 1 acre = 43,560
     cubic feet.
1 million cubic feet = 22.9568, say, 23 acre feet.
Feet per second \times 0.68 = \text{miles per hour.}
```

¹ Extracted chiefly from Molesworth's "Pocket Book of Engineering Formulæ," and Marryat's "Specifications, Rates, and Notes on Work."

I^A. Table of the Discharge of the Run-off at One Inch an Hour from Catchment Areas, in Cubic Feet per Second.

Cubic Feet Per Second.

Square miles	۰	1	2	3	4	5	6	7	8	9
0 10 20 30 40 50 60 70 80	6,453 12,907 19,360 25,813 32,267 38,720 45,173 51,627	39,365 45,819 52,272	7,744 14,197 20,651 27,104 33,557 40,011 46,464 52,917	8,389 14,843 21,296 27,749 34,203 40,656 47,109 53,563	9,035 15,488 21,941 28,395 34,848 41,301 47,755 54,208	9,680 16,133 22,587 29,040 35,493 41,947 48,400 54,853	10,325 16,779 23,232 29,685 36,139 42,592 49,045 55,499	10,971 17,424 23,877 30,331 36,784 43,237 49,691 56,144	11,616 18,069 24,523 30,976 37,429 43,883 59,336 56,789	12,261 18,715 25,168 31,621 38,075 44,528 50,981 57,435
90 100	58,080 64,533	58,725	59.371	60,016	60,6€1 	61,307	61,952	62,597	63,243	63 ,888

18. Table of the Yield of the Run-off of One Inch from Catchment Areas, in Million Cubic Feet.

Million Cubic Feet.

Square miles-	0	1	2	3	•	5	6	7	8	9
0		2'323	4*646	6.970	9.593	11 616	13,030	16,565	18*586	20,000
10	23,535	25.555	27.878	30,303	32,222	34*848	37'171	39'494	41 818	44'141
20	46'464	48.787	51,110	53 434	55 757	58'080	60'403	62.726	65,020	67'373
30	69.696	72.019	74'342	76.666	76.989	81.315	83 635	85.958	88.585	90 605
40	92.928	95*251	97'574	99 898	102,551	104'544	106.862	100,100	111'514	113 837
50	116,160	118'483	130,800	123'130	125 453	127.776	130 099	132'422	134 746	137'069
60	139'392	141.715	:44.036	146.362	148 685	151 008	153'331	155 654	157 978	100,101
70	162.624	164 947	167.270	169'594	171'917	174 240	176.263	178 886	181.510	183.233
70 80	185.856	188 179	190 502	192 826	195 149	197'472	199,292	202 118	204'442	206.765
90	200 088	211'411	213'734	216.028	218.381	220'704	223 027	225'350	227 674	229 997
100	232,350		•••		•••					***

II. PRESSURE OF WATER.

P = Pressure in lbs. per square inch.

H = Head of water in feet.

 $\mathbf{P} = \mathbf{H} \times 0.4335.$

 $H = P \times 2.307.$

Pressure in lbs. per square foot = 62.4 H.

Pressure of Water at Different Heads.

H = Head in feet.

P = Pressure in cwts. per square foot = 0.5574 H.

p = Pressure in lbs. per square inch = 0.4335 H.

н	P	<i>p</i>	H	P	<i>p</i>	н	P	þ	Н	P	Þ
ı	0.26	0.43	7	3.90	3.03	18	10.03	7.80	50	27.87	21.67
2	1.11	0.87	8	4.46	3.47	20	11.12	8.67	бо	33.44	26.01
3	1.67	1.30	9	5.03	3.90	25	13'94	10.84	70	39.02	30.32
4	2.53	1.73	10	5.57	4'34	30	16.72	13.01	8o	44.29	34.68
5 6	2.79	2.17	12	6.69	5.50	35	19.21	15.18	90	50.17	39.02
6	3'34	2 .60	15	8.36	6.20	40	22.30	17:34	100	55 74	43'35

III. VELOCITY OF WATER.

V = Theoretical velocity in feet per second.

g = Force of gravity = 32.2 feet per second.

$$2g=64\cdot 4.$$

$$\sqrt{2}g = 8.025.$$

$$\frac{1}{2q} = 0.0155.$$

H = Head of water in feet.

$$\nabla = \sqrt{2g H} = 8.025 \sqrt{H}$$
.

$$H = \frac{V^2}{2g} = 0.0155 \text{ V}^2.$$

Theoretical Velocity due to Different Heads in Feet per Second.

Head in Feet.	•	1	2	3	4	5	6	7	8	9
o		8.025	11.35	13.90	16.02	17.94	19.66	21.53	22.69	24.08
10	25.38	26.62	27.80	28.93	30.00	31.08	32.10	33.00	34.02	34.08
20	35.89	36.77	37.64	38.48	39.31	40.13	40.03	41.40	42'40	43.21
30	43'95	44.68	45'40	46.10	46.79	47.47	48.15	48.82	49'47	50 11
40	50.75	51.39	52.01	52.62	53.53	53.83	54.43	55.02	55.60	56.18
50	56.74	57 [.] 3 ^I	57.87	58.42	58.97	59.21	60.05	60.20	61.11	61.64
60	62.16	62.68	63.19	63.69	64.30	64.70	65.19	65.69	66.18	66.66
70	67.14	67 62	68.09	68.57	69.03	69.50	69.96	70.42	70.87	71.33
8o	71.78	72.23	72.67	73.11	73.55	74.00	74.42	74.85	75.28	75 7
90	76.13	76.55	76.97	77'39	77.81	78.22	78.63	79.04	79'44	79.8
100	80.25	•••	•••	•••	•••	·	• • • •		•••	•••

IV. DISCHARGE OF WATER FROM SLUICES.

V = Theoretical velocity in feet per second (vide Table III.) due to the head of water (from surface of water upstream to that downstream);

A = Area of aperture in square feet;

Q = Discharge in cubic feet per second;

E = Velocity of efflux in feet per second;

K = Coefficient for different orifices;


$$\mathbf{E} = \mathbf{V} \mathbf{K}. \qquad \mathbf{Q} = \mathbf{E} \mathbf{A} = \mathbf{V} \mathbf{K} \mathbf{A}.$$

For large sluices with pointed piers ... K=0.95. For small sluices ... K=0.85.

For pipe sluices, bore = $\frac{1}{4}$ to $\frac{1}{24}$ length. K = 0.77 to 0.73.

V. AREAS OF OUTLET CULVERTS.1

(Proportion of Height to Extreme Width Inside 3 to 2.)

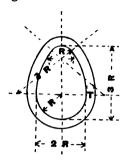

Size of Culvert in Inches.	Internal Area of Culvert in Square Feet.	Hydraulic Mean Depth, flowing full, in Feet. Size of Culvert in Inches.		Internal Area of Culvert in Square Feet.	Hydraulic Mean Depth, flowing full, in Feet.
36 × 54 38 × 57 40 × 60 42 × 63 44 × 66 46 × 69 48 × 72 50 × 75 52 × 78 54 × 81	10°337 11°517 12°761 14°069 15°410 16°877 18°376 19°939 21°566 23°257	0.869 0.917 0.966 1.014 1.062 1.111 1.159 1.207 1.255 1.304	56 × 84 58 × 87 60 × 90 62 × 93 64 × 96 66 × 99 68 × 102 70 × 105 72 × 108	25.012 26.830 28.713 30.665 32.668 34.742 36.880 39.081 41.346	1°352 1°400 1°449 1°497 1°545 1°593 1°642 1°690 1°738

THICKNESS OF MASONRY CULVERT RINGS.

For culverts under dams—	Culverts under 48" × 72"	Culverts 48" × 72" to 60" × 90"	Culverts 60" × 90" and over.
Less than 50 feet high	1′ 3″	1' 9"	2′ 0′′
More than 50 feet high	1′ 6″	2' 0"	2′ 3′′

¹ "Sanitary Engineering," by Baldwin Latham, 2nd ed., Table No. 30, p. 135.

APPENDIX 26.

STATISTICAL INFORMATION REQUIRED FOR A PROJECT.

(Vide Chapter V., paragraph 242 (a).)

Consecu- tive No.	Items.	Unit.	Amount
	A.—Engineering.		
	I. General.		
1	Area of catchment (enter actual or equi-		
	valent)	sq. miles	
2	Average annual monsoon rainfall	inches	
3	Estimated percentage of run-off to aver-		
	age monsoon rainfall	per cent.	
.4	Estimated depth of run-off from average		
_	monsoon rainfall (2) × (3)	inches	
5	Estimated average annual yield from catchment (1) \times (4) \div 12	mill, cub. ft.	
6	Percentage of average annual yield to	min. cub. 1t.	
•	gross available full - supply storage		
	capacity of reservoir (5) and (II. 5)	per cent.	
7	Percentage of number of years of ordi-	•	
,	nary minimum monsoon rainfall.	do.	
8	Ordinary minimum annual monsoon rain-	1	
	fall	inches	
9	Estimated percentage of run-off of (8) .	per cent.	
10	Estimated depth of run-off from ordinary		
	minimum monsoon rainfall (8) \times (9).	inches	
11	Estimated yield from ordinary minimum		
	monsoon rainfall (1) \times (10) \div 12	mill. cub. ft.	
12	Percentage of ordinary minimum yield to gross available full-supply storage		
	capacity of reservoir (11) and (II. 5)	per cent.	
13	Depth of run-off required to produce gross	per cent.	
- 3	available full-supply storage of reser-		
	$voir (II. 5) \div (1) \times 12$	inches	
14	Estimated average yield of feed channel		
•	during monsoon	mill. cub. ft.	l
15	Estimated average yield of feed channel		
_	during fair weather	do.	
16	Estimated amount of fair-weather flow	.	
	of impounded stream	do.	
17	Fall of river bed in reservoir full-supply		
	limits	ft. per mile.	

APPENDIX 26.

TABLE-continued.

Consecu- tive No.	Items.	Unit.	Amount.
	A.—Engineering—continued.		
	II. Reservoir.		
I	Area of reservoir at full-supply level	mill. sq. ft.	
2	Area of reservoir at outlet sill level.	do. do.	
3	Mean area of reservoir $\frac{1}{2}[(1) + (2)]$.	do. do.	
4	Total full-supply storage capacity	mill. cub. ft.	1
5	Gross available full-supply storage		i
•	capacity above outlet sill	do. do.	ł
6	Loss of storage by evaporation and	_	
	absorption (3) \times (9)	do. do.	1
7	Net full-supply storage available for		
•	irrigation $(5) - (6)$	do. do.	
8	Average depth of gross available full-		
	supply storage $(5) \div (3)$	feet	
9	Estimated depth lost by evaporation and		
,	absorption on mean area of reservoir (3)	do.	
10	Estimated average draw-off from reservoir		
		mill. cub. ft	
11	Estimated average balance in reservoir at		
	end of monsoon, including $\frac{1}{3}$ (6)	do. do.	
12	Total supply available for irrigation		
	$(vide\ VI.12) = (I.15 + 16) + (10) +$		
	(11) - (6). $(11) - (6)$	do. do.	
	III. Dam.		
I	Length of dam at top	feet	
2	Maximum height of dam above ground		
_	level	do.	
2	Top of dam	R.L.	
3	High-flood level	do.	
4 5 6	Full-supply level	do.	
6	Outlet sill level	do.	
7	Lowest ground level of dam	do. do.	
7 8	Top-width of dam	feet	
1	Upstream slope of dam	ratio	
9	Downstream slope of dam	do.	
11	Maximum depth of puddle trench	feet	
12	Bottom-width of puddle trench	do.	
	Side-slopes of puddle trench	ratio	
13	Top of pitching	R.L.	
14	Top or pitching	IX. L.	

APPENDIX 26.

TABLE—continued.

Consecu- tive No.	Items.	Unit.	Amount.
	A.—Enginbering—continued.		
	III. Dam—continued.		
15	Bottom of pitching	R. L.	
16	Thickness of pitching	feet	
17 18	Maximum depth of full-supply (5) - (7). Depth from full-supply to outlet sill	do.	
10	$\begin{array}{cccccccccccccccccccccccccccccccccccc$	do.	
	IV. Waste-Weir.		
I	Description of waste-weir (clear overfall,		
•	drowned or channel)		
2	Total length of waste-weir	feet	
3	Net length of overfall of weir crest	do.	
4	Under-sluices	No. and size	
5	Automatic gates	do. do.	
O	weir wall crest	feet	
7	Calculated high-flood discharge of waste-	1000	
-	weir wall crest	cusecs.	
8	Do. do. do. of under-sluices.	do.	
9	Do. do. do. of automatic gates	do.	
10	Do. do. do. of whole weir (7) + (8) + (9)	do.	
11	Estimated high-flood discharge from	uo.	
••	catchment	do.	
12	Calculated rate of run-off from catchment		
	of waste-weir high-flood discharge (10)	in. per hour	
13	Estimated rate of maximum run-off from	. د . د	
	catchment (11)	do. do.	
V. Outlet.			
1	Description of outlet (culvert under dam,	}	
	headwall, &c.)	L	
2	Sluices	No. and size.	
3	Discharging capacity of sluices at high- flood level	cusecs.	
4	Do. do. do. at full-supply	cusecs.	
4	level	do.	
5	Head required to give canal full-supply		
-	discharge (VI. 6)	feet	
	<u> </u>		

TABLE-continued.

Consecutive No.	Items.	Unit.	Amount.
	A.—Engineering—continued. VI. Canal and Irrigation.		
I	Description of headworks (reservoir outlet, weir, &c.)	_	
2	Distance of headworks from reservoir .	miles	l
3	Estimated loss in transit	per cent.	
4	Length of main canal	miles	
5	Length of distributaries	do.	
6	Initial full-supply discharge of canal .	cusecs.	
7 8	Do. full-supply depth . do	feet R.L.	!
	Do. bed-level do Do. bed-width do	feet	l
9 10	Estimated average area of irrigated	1661	1
10	crops—		i
	Perennial. Rabi. Hot weather, Monsoon.	Total acres.	
11	Estimated duty of water at canal head— Perennial. Rabi. Hot weather. Monsoon.	acres per cusec.	
12	Estimated supply required for irrigated crops (vide II. 12) and (10) and (11)— Perennial. Rabi. Hot weather. Monsoon.	Total mill. cub. ft.	
13	Estimated irrigation assessment rates per acre— Perennial. Rabi. Hot weather. Monsoon.		
		Rs.	
14	Estimated gross irrigation revenue (10) × (13)— Perennial. Rabi. Hot weather. Monsoon.		
		Total. Rs.	
15	Average acreage irrigated per mile of canal (10) ÷ (4)		
	VII. Land.	Const	Total.
1	Total area to be acquired in acres	Canal.	10tal.
2	Culturable area do. do.		
3	Percentage of (2) to (4)	per cent.	
4	Area irrigable by project in average years	acres	
5	Do. do. do. in years of minimum rainfall	do.	

TABLE—continued.

Consecutive No.	I tems.	Unit.	Amount.
	A.—Engineering—continued.		
	VII. Land—continued.		
6	Culturable area commanded by project .	acres	
	Percentage of (4) to (6)	per cent.	
7 8	Percentage of (5) to (6)	do.	İ
	B.—Financial.		
1	Estimated cost of dam	· Rs.	
2	Estimated cost of waste-weir	,,	
3	Estimated cost of outlet	,,	
4	Estimated cost of land compensation .	,,	
5	Estimated cost of buildings and miscel-		
_	laneous expenditure	"	
6	Total estimated cost of reservoir (1) to (5)	,,	
7	Estimated cost of feed channel	,,	
8	Estimated cost of canal	,,	
9	Total estimated cost of project for works		
	(6) to (8)	"	
10	Percentage cost of dam (1) to cost of		1
	reservoir (6)	per cent.	İ
11	Percentage cost of waste-weir (2) to cost		
	of reservoir (6)	• • • • • • • • • • • • • • • • • • • •	
12	Percentage cost of outlet (3) to cost of		ĺ
	reservoir (6)	**	
13	Percentage cost of land compensation (4)		
	to cost of reservoir (6)	"	
14			
	channel (7) to cost of project (9) Percentage cost of canal (8) to cost of	".	
15	. 0,		
16	Project (9)	"	
10	Establishment at 23 per cent. on (9) less cost of excluded items (Rs.).	Rs.	
17	Tools and plant at 1½ per cent. on (9)	172.	
- 1	less do. do		
18	Total direct charges (9) + (16) + (17)	,,	
19	Capitalisation of abatement of land	"	
-9	revenue		
20	Leave and pension allowances at 14 per	"	
	cent. on (16)	,,	
21	Total indirect charges (19) + (20) .	",	
		"	

TABLE—continued.

Consecutive No.	Items.	Unit.	Amount.
	B.—FINANCIAL—continued.		
22	Grand Total, direct and indirect charges (18) + (21)	Rs.	
23	Area irrigable (vide VI. 10)	acres	
24	Gross Revenue (vide VI. 14) plus miscella- neous receipts	Rs.	
25	Deduct working expenses at Rs. per acre	,,	
26	Net revenue (24)—(25)	,,	
27	Percentage return of (26) on (22)	per cent.	
28	Estimated rate of gross available full-supply storage (6) $+$ (7) \div (II. 5)	Rs. per) mill. cub. ft.	
29	Estimated rate of direct charges per acre irrigable by project (18) ÷ (23)	Rs.	
30	Estimated rate of direct and indirect charges per acre irrigable by project (22) ÷ (23)	"	
31	Normal value of work available for famine relief		
32	Relief labourers for whom employment can be found on works for 6 months.	" No.	

INDEX.

NOTE .- The figures refer to pages.

ABSORPTION and evaporation loss in canals, 29 Absorption and evaporation loss in reservoirs, 24-29 Absorptive capacity, flood-, necessary, Acquisition of land, early advisable, 41 extent of, 40 "Acre foot," explanation of term, 35 Addition to height of dams, 145 Adhesion and cohesion of earthwork, 69 Advantages and disadvantages of headwall, 257 Advantages of compound dam, 153 curtain and water cushion walls, 212 earthen over masonry dams, 48, 60 near reservoirs, l stepped waste-weir, 226 Afflux height coefficient, c1, 202 diagram of, 205 Eytelwein's formula, 202 Allowance for settlement of dam, 82 Ambajhari reservoir rainfall and runoff, 17 American specifications for dam material, 96 types of dam, 61 Approach bank, 267 bridge, 268 channel of waste-weir, 186 Apron at base of pitching, 177 Arch ring of outlet culvert, 252 Area, sectional, of dam, 84 Arrangement of report, 301 suggested for gates, 279 Arrangements for large works, 291 Artificial catchments, 6, 11 consolidation of dam necessary, 140 Ashti tank rainfall and run-off, 15 Assuán dam, raising of, 49 Automatic gates of stepped waste-weir, 231-236 level waste-weirs, 223 rain gauge, advantage of, 18,

river gauges desirable, 53

BAKER, Sir Benjamin, on theories of earthwork, 68 Balfour's diagram for afflux heights, etc., 205 Bári Doab canal, loss of discharge, 30 Basin, selection of storage, 4 Bateman's capstan head, 283 Bazin's coefficient, c2, 203 Beale's curve for run-off, 200 Bed slope of tail channel, 212 Benched foundations of dam, 134 Benching sides of gorge, 85 Berms, 87 for repairs of slips, 173 Bhandardara dam, new scheme, 50 Bhátgarh dam, raising of, 49 Bohio dam, concrete trench for, 116 Bombay curves for run-off, 198 Bore holes, not reliable, 101 Borrow pits, not included in storage, 24 plan of, 293 Breaching section, 86 Brick pitching, 178 Bridge, approach foot-, 268

Automatic water level recorder, 13

Available capacity of reservoir, 24

CALCUTTA rainfall and run-off, 17 Canal irrigation more remunerative than irrigation from storage works, 57 Canals, loss by evaporation and absorption, 29 in transit, 2 Capacity, calculation of storage, 23 of reservoir basin, survey of, 51 Capstan heads, 282 Casings of the dam, 95, 139 Catchment area, equivalent, 8 high-flood run-off from, 198 measurement of, 11 Catchments, excessive, silt rapidly, 8 large, utilisable with stepped waste weir, 226 natural, 6

Catchments, necessity for studying Connected catchments, high-flood discharacteristics of, 13 charge from, 196 partly natural, partly artificial, 6, 8 Connecting channels between reservoirs, wholly artificial, 6, 11 yield from. 7 Conservancy of villages in catchment Central puddle walls, 119 area. 285 Consolidation of dam, 139, 295 Centre line of dam, headwall in, 255 necessary to reduce infiltration, 79 outlet tower in, 259 setting out of, 147 Construction Ceylon curve of run-off, 200 and design, defects in, 167 Chainage marks on top of dam, 147, 296 of dam to be slow, 84, 85, 139 Changes in chemical constitution of of earlier works, method of, 294 soils, 167 uniform, necessary, 143 Contour plan for reservoir works, 51 of section of dam, 75 Channel, section of, 208 Contours, survey for determining tail, bedslope of, 212 capacity, 23 Channels, high-level generally best, 245 Contract work, petty, preferable to regular, 149 Chenab canal, rules limiting irrigated area, 37 Contraction of tail channel, 208 Control, double over sluices, 268 Chézy's formula for channel discharge, of outlet essential, 242 Core walls for drystone toes, 152 Classification of dams, 59 reservoir catchments, 6 Kreuter's, proposal for, 125 masonry for dams, 65-67 silt in reservoirs, 43 preferable to puddle walls, Clay basin of reservoir most retentive, 122 steel plate for dams, 62 puddle, behaviour with water, 72 Clear drainage harmless, 128 Cost of storage reservoirs, preliminary overfall weirs, description of, 182 estimate for, 33 Cotton-soil foundations, treatment of, for gauging, 53 formula for, 207 86, 136 Clerk Maxwell's "historical element" of Cracks, repair of, 142 earthwork, 69 Craig's formula for run-off, 192 Crest of dam-the crest wall, 80 Closure of damweir, effective length of, 187 arrangements for, 292 assistance by outlet, 246 Crops, rotation of, 38 under irrigation, proportions of, 37 final, 163 Cross ridge suitable for outlet approach first, 160 bank, 243, 268 importance of, 154 objections to reduction of section determining silt sections for deposit, 45 for, 159 ordinary method, 154 wall of outlet, 268 Croton dam, core wall of, 66 preliminary, 159 revised method, 156 Crushers for stone metal, 295 second, 162 Culturable area, proportion of irrigable area, 36 Cohesion of earthwork, 69 Culturable submerged area of reservoir, Combined reservoirs for irrigation and town water supplies, 285 proportion of to irrigable area, 38 Culvert, outlet, form of arch ring, 252 Comparative cost of storage, 31 Comparison of near and distant reserthickness of arch ring, 253 voirs, l Composite dams, 60 under dam, 247 Curved or oblique weirs, effect on Compound damdischarging power, 187 Curves for high-flood run-off, 198 advantages of, 153 drystone toes for, 151-153 Concrete key trenches, 108 mixers, 295 Curving approach channel in plan, 187 Cyclones, provision for discharge of runpacking of pitching, 177 off from, 194 pitching, 178 trench for Bohio dam, 116 Daily runs-off, tabular statement of, 18 trenches 107 Dam, allowance for settlement, 82

Dam, American types, 61 Deposits in reservoir basins, 39, 43 benched foundations of, 134 Depth of maximum flood on waste-Bohio, concrete trench for, 116 weir, 189 puddle trench, 73, 99 casings of, 95, 139 classification of, 59 Description of project, 299 closure of large, 159-164 Determination of silt byordinary and revised cross-sections, 45 methods, 154, 156 observations of inflow and outflow, compound, advantages of, 153 consolidation of, 79, 139, 295 silt boxes, 46 crest of-the crest wall, 80 Diagonal drains down dam-slopes dandisposition of material in, 92 gerous, 89 drystone toes of compound, 151-Dickens' formula for run-off, 191 153 Dischargeearthen, with masonry core walls, flood, of stepped waste-weir, 236 65, 259 from tanks in series, 196 effect of percolation on, 77 of clear overfall weir, formula for, empirical section for, 72, 149 finishing off of, 145 of drowned waste-weir, formula for, free board of, 76 206 general formation of, 137 Discharge of waste-weir channelheight of, 75 calculation of, 203 " hydraulic fill," 62 formulæ for, 202 junctions of earthwork, 144 200 feet wide, 205 maintenance of, 296 Discharge of waste-weir per lineal foot, material, American specifications 181 Discharging capacity of temporary for, 96 objections to high earthen, 149 waste-weir, 158 observations during construction, Distant and near reservoirs, comparison 146, 296 of. 1 relative cost of the, and waste Double control over sluices, 268 weir, 90, 189 "rock-fill," 62 Drain, downstream, 124 Kreuter's auxiliary, 125 section of gorge embankment, 84 rear, 126 when on inferior foundasurface, 123 tions, 86 Drainagesectional area of, 84 flow, clear and discoloured, 128 sections for, 74 necessary for water-logged irrigated selection of material for, 91 lands, 37 site for, 3 of berms, 88 self-consolidation of, 72, 82 dams, necessity for, 122, 132, side slopes, 77 133 slope outlet, 270, 275 earthwork essential, 69. spreading and mixing materials, ordinary cross drains irregular, top width, 76 134 watering during construction, 137 slips, 173, 174 width at high-flood and fullslope of dam, 145, 146 supply levels, 81 ring of outlet culvert, 250 Damp earthwork the most stable, 69 self-, of earthwork, 129, 138, 169 Darwin, Sir George, on theories of Drainsearthwork, 68, 70 foundation and trenches, 132 Deep reservoirs lose least by evaporaopen and underground, 128 tion, 25 system of, proposed for dams, 123 Defects in construction and design, Drowned channels and weirs, 182 " Dry well," 259 effect of, 167 Deficiency of the theory of earthwork, 67 Drystone toe, construction of, 152 Deflection of rainfall by hills, 7 description of, 151 Delta," definition of, 35 wings of outlet headwall, 256 Duration of supply, estimate of, 32 "Duty," definitions of, 34 Demarcation of land to be acquired, 41,

EARTHEN embankments-Famine workpreparation of benched foundaadvantages of, 60 tions by, 135 classification of, 59 with masonry core walls, 65-67 puddle trench unsuitable for, 115 suitability of reservoirs for, 57 Earthenware pipe outlets, 254 utility of water supply reservoirs Earthworkfor, 291 deficiency of theory of, 67 specification effect of sloping layers of, 70 Fanning's on, of causes acting subsematerials, 96 quently to its construc-Faulty foundations, 166 tion, 70 Feed channels, equivalent catchment general causes affecting stability of, of, 9 objections to. 9 self-drainage of, 129, 138, 169 Fencing the dam, 146 Efflorescence evidence of unsuitability Filter inlet, 290 of soil, 168 mechanical sand, 290 Filtration, 287 Ekruk tank, loss from evaporation of, 27 rate of, through soils, 73 rainfall and run-off, 15 Financial returns to be embodied in Elkington's system of upward drainage, report, 301 Finishing off dam, 145 Embankment. See Dam. First closure of dam, 160 at gorge or river crossing, 84 Fissured rock, treatment of, 100, 105, 131 sections for, 74 strata at ridges, 5 Empirical allowances for runs-off, 196 objectionable in resersection for high earthen dam, voir basins, 4, 40 72, 149 Flank and saddle weirs, 183 Equilibrium valves, 276 Flood absorption-Equivalent catchment area, 8 mathematical calculation of, 219, Estimate comparative of dam and wastepractical calculations of, 222 weir combined, 90, 189 rules for, 220 of expenditure from storage, 32 utilisation of, 217 project, 303 utilised by stepped waste-weir, 226 run off from daily rainfall, 20 Flood calculations of stepped wastestorage required for certain area, weir, 236 32 cuts, safety, 188 preliminary of cost of reservoirs, 33 depth, maximum on waste-weir, Evaporation and absorption-189 in canals, 29 observations necessary, 193 reservoirs, 24 regulation, utilisation of outlet allowances for, 29 for, 245, 279 observations of, 26 Floods, action of moderate and of slopes required to prevent intense, 218, 226 guttering, 146 excessive, over waste weirs, Excavation-217 for slip repairs to be done in Flushing pool for main rear drain, 127 Fore-and-tail bays of outlet, 249, 263 sections, 174 in reservoir bed, 118 Formation, general, of dam, 137 templates, 148 of concrete trenches, 107 Excessive waste-weir floods, 217 Formulæ Executing work, method of, 149 for flood discharge of weirs, 202, Experiments on infiltration into dam, 206, 207 rate of maximum run-off, 193-Eytelwein's formula for afflux height, 195, 196 limited utility of, 193 Foundationbenched, of dam, 134 Facings of "rock-fill" dams, 61 Factors producing maximum rate of drains do not induce percolation, 134 run-off, 190

inferior of dam, 86

flood-

Foundationof headwall in centre line of dam. 256 waste weir, 182, 186 trenches and drains, 132 Foundationsorder of natural, 131, 132 treatment of, in "cotton-soil," 136 sandy river beds, 136 Free-board of dam, 76 Frictional resistance of drystone toes, 151 to slipping of earthwork, 68 Fujiyama, Japan, slopes of, 71

GARRETT'S calculations for absorption, 220 Gates of sluices, 272 suggested arrangements for, 279 testing of, 276 Gauge for outlet discharge, 264 Gauges for main and other drains, 128, 147 Gauging streams, 14, 53 Geological investigation of dam site and reservoir basin, 4 Ghat catchments to be utilised first, 8, 55 Glaisher's law for minimum rainfall, 12 Gohna lake, history of, 62 Gorge embankment, treatment of, 84, 135 Grating for outlet and under-sluices, 229, 251, 264, 270 Grooved rollers, 141

Gross capacity of reservoir, 24

Guides for lifting rods, 281

HAND roller for top of dam, 141 Harrows for mixing dam material, 138 Háthmati canal, loss of discharge, 29 Hawksley's law for minimum rainfall, Headwallacross open channel round dam, 262 in centre line of dam, advantages and disadvantages of, 257 in centre line of dam, description of, 255 of outlet, 266 of tunnel round dam, 262 Heavy falls of rain, estimate of yield from, 21 materials increase stability of

dam, 78, 151

Hedging dam, 146

Herschel's test for binding gravel, 97 High-flood run-off, 198—202 High level channel from waste weir, 188 generally best, 245 Higham's rules for flood-absorption, 219 Hills deflect rainfall, 7
"Historical element" of earthwork, 69 Horizontal thrust of mass of sand, 70 Huli Ela reservoir, breach of, 139 Hulsar tank run-off, 15 "Hydraulic fill" dams, 62

IMPERMEABILITY desirable for dams, Impermeable material required for puddle trench, 105 Importance of closure of dam, 154 Indian practice regarding puddle walls, 121 Infiltrationinto dam, effect of, 78 not caused by puddle trench drain, 114, or foundation drains, 134 the principal cause of slips, 168 Inlet and outlet channels, 263 filter, 290 Instruments, reserve of surveying, 296 Intensity of rain-fall, effect on run-off, Iron culvert under dam, 247 pipe outlet, 254 Irregular drainage due to ordinary cross drains, 134 Irrigable areaestimate of storage required for, 32 proportion to culturable area, 36 proportion to submerged culturable area, 38 Irrigation-

JOINTS for lifting rods, 282 Jubbulpore run-off, 15 Junctions of earthwork, 144 streams favourable for dam site, 5

proportions of crops under, 37

reconnaissance survey, 49 under reservoirs and canals com-

pared, 35, 57

KHARIF irrigation duty larger than rabi. Khás tank rainfall and run-off, 14 Kreuter's proposals for drainage of dams, 125

LAKES, regulating power of, 216 Height of dam, ordinary limit of, 75, 149 | Land for reservoir, acquisition of, 40, 41

of, l

Layers, slopes of, 143 thickness of, 142 Leakage round outlet culvert, 250 Level and theodolite observations, 147 for outlet sill, 47, 245 Lifting rods, 280 Lining of tunnels expensive, 262 Longitudinal slope of reservoir basin, importance of, 4 Loss by evaporation and absorption in reservoirs, 24 observations in canals, 29 reservoirs, 26 Loss in transitdown canals, 2 natural stream beds, 2 Lowering, rapid, of reservoir level, 128, 169, 226 Máhánadi, rainfall and run-off, 16 Maintenance of dam, 296 outlet, 298 reservoir, 298 waste-weir, 297 Masonry dam best suited for steep gorge, 85 most stable form, 60, 285 Material of damdisposition of, in section, 92 selection of, 91 the heavier the better, 78, 151 Materials for works, sites to be ascertained, 51 Metal crushers, 295 Method of executing work, 149 Mhasvad tank, rainfall and run-off, 15 Minor arrangements for work, 148 Mixing materials of dam, 138 Mixture of dam material, 92-96 Money value of loss of storage by evaporation, 29 Monsoonconditions affecting loss by evaporation, 26 Monsoon irrigationreduction of storage capacity for, 23 utility of subsidiary reservoirs for, Monthly allowance for evaporation, etc., Murum suitable for dam foundations, Mutha canal, loss of discharge, 30 Nagpur run-off experiments, 15, 17

Natural catchments, 6

foundations, order of, 131

strata not water-tight, 97

Necaxa "hydraulic-fill" dam, failure of, 63 Necessity for drainage of dam, 122 Nirá canal, loss of discharge, 30 Nulla puddle trenches, 116 OBJECTIONS to culvert under dam, 247 high earthen dams, 149 level waste-weir, 223 stepped waste-weir, 227 Oblique weirs, effect of, 187 Observationsduring construction of dam, 146, 296 of inflow and outflow to determine silt, 47 of rainfall and run-off necessary for many years, 21 Oopahalli tank run-off, 15 Open and underground drains, 128 Outfall of tail channel, 213 Outletchannel, alignment of, 263 leading across stream, 244 culvert, form of arch ring, 252 general remarks on, 251 inspection of, 265 under dam, 247 dam slope, 270, 275 for water-supply scheme, 287 gauge, 264 headwall, 265 in centre line of dam, 255-259 location at temporary waste weir, 157, 257 of, 242 maintenance of, 298 number of, 244 object of, 242 open channel round dam, 262 pipe, 254 regulating works, 265 sill, determination of level of, 47. 245 siphon, 254 subsidiary uses of, 245, 279 tower, 265 in centre line of dam, 259 junction with culvert, 249 tunnel round dam, 261 use of for carrying away silt, 42, 246 utilisation as flood regulator, 245, 279 for water power, 280

Near and distant reservoirs, comparison

Partition wall of outlet, 268
Pashan tank, loss by evaporation, 28

Patchings on dam not to be allowed, 144	Puddle—
Patna canal, loss of discharge, 30	trench not suitable for famine
Pavement of outlet culvert, 252	work, 115
Percolation—	nulla, 116
into dam, effect of, 78	object of, 97
maximum amount along ground	position of, 98
line, 123 not induced by foundation drains,	side slopes of, 102 upstream trench in bed of
134, or puddle trench drain, 114	main, 100
prevention of at upstream part of	walls, central, 119
dam, 79, 130	not adopted in India, 121
Permeable material not to be used for	slope, 120
puddle, 106	Pumping from reservoirs, 24, 290
Pillars, setting out, 147	Pumps, 295
Pipe hanger for outlet, 289	
outlet, 254	
Pitching—	QUANTITIES of work in closure of dam,
concrete and brick, 178	164
packing of, 177	Quarry spaul layer below pitching, 174
extent and thickness of, 176	Quinquennial rotation of crops, 38
foundation and top courses, 177	
laying of, and defects in, 175	RABI duty smaller than kharif, 36
necessity for, 174 repair of, 297	Rainfall and river discharge observa-
Plans of project, 301	tions, 52
Plant, general remarks on, 294	run-off, tabular statement
tram, 294	of daily, 18
Plantation of reservoir margin, 41	deflection of by hills, 7
Ploughs for mixing dam material, 138	natural disposal of, 12
" Pole-and-plug" valves, 273	variation, English laws of, 12
Positions of weirs, flank and saddle,	Rain-gauges, necessity for several, 14
183	Raising dam only 30 feet in one season,
Preliminary closure of dam, 159	139
reconnaissance survey, 49	dams to restore storage silted
Profile of slips, 169	up, 49
Programme of famine relief works, 58 work for closures, 165	Rajputana tanks, loss by evaporation,
Project, report on, 299	etc., 27 Ramming inferior to rolling, 141
Proportion of crops under irrigation, 37	Rankine on theories of earthwork, 68
silt to water, 44	—70
Protective works for tail channel, 209	Rawlinson's limit of depth for puddle
Proximity of storage for water-supply	trench, 73
schemes, 284	Rear drains, 126
Puddle—	Reconnaissance survey required, 49
behaviour with water, 72	Redhill tank, observations of loss, 27
trench bed, preparation of, 100,	Reduction of—
105	bedfall and slope of tail channel,
bottom width, 101	209
completion of filling, 104	silt by outlet, 246
continuity of filling, 104 crossing of outlet culvert,	deposit in reservoirs, 42
249	Regulating power of lakes, 216 works of outlets, 265
river, etc., 109	Regulation of reservoir levels by out-
depth of, 73, 99, 107	let, 245
drain, construction of, 111	Reinold's automatic gates, 231
infiltration not caused	Relative cost of—
by, 114	concrete and puddle trenches, 108
drainage of, 110	dam and waste weir, 90, 189
filling of, 105, 115	Replenishment of reservoirs—
height of filling, 103	average to be considered, 22
length of, 103	proper, essential, 7

Safety flood cuts, 188 Report to be attached to project, 299 Sandy layers in puddle trench, treat-ment of, 103 Reservoirbasin, contour survey for, 51 river bed foundations, 136 geological investigation of, 4 nature of deposits on, 39 Sanitation of catchment area, 285 not usually culturable, 39 Saturation of ground, effect on run-off retentiveness of, 40 of, 18 bed, excavation in, 118 Scrapers for rollers, 141 catchments, classification of, 6 Sectional area of dam, 84 flood-absorption calculations, 222 Sections for dam embankments, 74 irrigation exhausts land, 41 of waste-weir walls, 185 maintenance of, 298 required at particular sites, 84 survey for works of, 50 Selection of material for dam, 91 temporary for works purposes, 157 Self-consolidation of dam, 72, 80, 82, Reservoirs-140 combined for town supplies, 285 Self-drainage of earthwork, 129, 138, comparison of near and distant, 1 169 subsidiary, utility and cost of, 10 Setting out centre line of dam. 147 Restriction of reservoir level, 216, 218, pillars, 147 226 templates, 148 Retaining walls inferior to drystone toes, 153 Settlement of dam, allowance for, 82 unequal, danger of, 140, 166 "Retrogression of levels," 210 Shrinkage of earthwork, 142 Revenue matters to be discussed in Side slopes of dam, 77 report, 300 Sill of outlet, level of, 47, 245 prospects of reservoirs, 56 Silt determination bycross sections, 45, 299 Revetments of grass or reed, 179 Ridge lines facilitate drainage, 132 observations of inflow and out-Ridges diminish cost of dam, 3, 5 flow, 47 River crossing of puddle trench, 109 silt boxes, 46 "Rock-fill" dams, 62 Silt in reservoirs, classification of, 43 Rock the best foundation for dams, 131 reduction of, 42, 226, Rollers for dam consolidation, 140, 295 298 Rotation of crops, 38 outlet-sill to allow space for, 48, 245 proportion of to water, 44 Run-offdetermination of, 11 reduction by outlet, 246 Siltingefficiency of catchment, 11 empirical allowance for, 196 estimated value of reduction by outlet, 257 estimation from daily rainfall, 20 up of reservoir, storage capacity formulæ for maximum rate of, 191 -193 for, 22 limited utility of, 193 Siphon over the dam, 254 maximum rate of, factors produc-Site and works description in report, 299 ing, 190 of dam, selection of, 3 proportion small when rainfall Slab drains in puddle trench, 111 Slipping of subsoils to be prevented, 125 light, 13 to rainfall of, 14 Slips, causes of, 166 in black "cotton-soil," 171 tabular statement of daily, 18 tabular statement of daily rainfall gritty soil, 171 and, 17 Rushikulya rainfall and run-off, 16 profile of, 169 Ryves' formularepair of, 172—174 adapted to combined catchments, Slope of tail channeleffect of reduction of, 212 reduction of, 209 for run-off, 191 Slope puddle walls, 120 Slopes of damfinishing off at slips, 174 SADDLE and flank weirs, 183 maintenance of, 297 best for outlet location, 243 desirable for temporary waste watering during construction, 137 Slopes of layers, 143 weir, 158

Subsidiary reservoirs-Sluices and valves, 272 for town supplies, 285 double control over, 268 maintenance of, 298 utility and cost of, 10 Suitability of reservoir works for sill of, 272 under-, 230 famine relief, 57 Small storages of little utility, 55 Surface drain, 123 Soddening of ground below undesirable, 111 \mathbf{dam} Surface of dam slope, making up, 142 Survey for reservoir capacity, 51 Soils, order of suitability for foundaworks, 50 Suspended main in outlet culvert, 289 tions, 131 Sound construction and design necessary, 167 Special gangs and staff, 135, 293 Tail- and fore-bay of outlet, 249, 263 Tail channel-Specifications for the project, 303 bed slope of, 212 Split rollers, 141 Spoil, utilisation of in dam, 96 defined channel for, 209, 227 Spreading materials of dam, 138 outfall of, 213 Stability of earthwork, general causes parallel to waste-weir, 214, 230 affecting the, 68 protective works, 210 Statement of daily runs-off, 18 section of, 208 Tanks in series, objections to and dis-charges from, 195 Tell-tales for lifting rods, 281 Statistics of rainfall and yield for report, 300 Staunching ringsfor tunnel round dam, 262 Templates, setting out, 148 of outlet culvert, 250 Temporary crest of stepped waste-weir, 229, 231 Staunching walls and forks for headwall, waste weir, 157 for location of outlet, Steam rollers, advantage of, 140 157, 257 Steel plate cores to dams, 62 Testing gates, 276
Theodolite and level observations, 147 Steep slope unsuitable for outlet location, 243 Stepped waste-weir-Theory of earthwork, deficiency of, 67 advantages of, 226 Thickness of layers, 142 detailed description of, 229 outlet culvert ring, 253 towers, 266 flood calculation of, 236 general description of, 224 Toe wall for sandy river bed foundaobjections raised to, 227 tions, 136 saving effected by, 238-241 Toe walls, 89 working of, 237 for repair of slips, 173 Steps in outlet tower for inspection 266 Tools for works, 296 Top of dam to be porous, 145 Stone-metal crushers, 295 width of dam, 76 Tower, outlet, 259, 265, 288 Stoney's sluice, 235 Stops for sluices, 282 Storagejunction with culvert, 249 amount of, dependent on duty, 34 Town water supplies required for water supply, combined reservoirs for, 285 284 masonry dams for, 285 basin, selection of, 4 outlet tower for, 265, 288 proximity to town, 284 two years' storage required, 285 capacity, calculation of, 23 proportion to yield from catchment, 21 Trained men for special works, 135, 293 comparative cost of, 32 Tram plant, 294 Transit, loss in, down canals, 2 estimate of, required for certain stream-beds, 2 for two years unnecessary, except Transvaal, curve of run-off, 200 for town supplies, 29, 285 Trench, construction of outlet culvert in, 250, 252 puddle. See Puddle trench. rate of Maladevi project, 240 reservoir, preliminary estimate for, Trenches, foundation and drains, 132 Trial pits for testing dam foundation, Stream beds—loss in transit down, 2 Subsidences, repair of, 142

Trial pits of work under construction, 146 Triennial rotation of crops, 38 Tunnel round the dam, 261 Underground and open drains, 128 Under-sluices, 230 Unequal settlement, danger of, 140, 166 Uniform construction necessary, 143 disposition of materials of dam, 94 Upstream slope not likely to slip, 150 Upward drainage of rear drain, 127 Utilisation ofghát catchments, 55 property of flood absorption, 217 rainfall and run-off observations, spoil in dam, 96 Utility of reservoirs in times of scarcity, VALVE rods, 280 tower, approach to, 251, 267 Valves and sluices, 272 equilibrium, 276 "pole and plug," 273 -275 Variation of condition of earthwork in dam, 70 Vent of outlet culvert, size of, 253 Visvesvaraya's automatic gates, 234 Wave-breaker course of pitching, 177 dam, 109 Waves, height of in reservoirs, 176 ample provision necessary for, 195 Wedge-shaped

Wall across deep river crossing of Waste weirapproach channel, 186 channel and drowned, 182 channel discharge calculation of, 203 formula for, 202 of 200 feet channel, 205 clear overfall, 182 different forms and discharges of, 181 effective length of crest, 187 flank and saddle, positions of, 183 flank embankments utilisable for breaching sections, 87 floods, description of in report, 300 formula for discharge of clear overfall, 207 formula for discharge of drowned, 206 level, objections to, 223 maintenance of, 297

Waste weirrelative cost of the, and the dam 90, 189 RUI run-off, empirical allowances for 196 M sections of, 185 stepped, advantages of, 226 detailed description ΑD 229 general description of, 22 highest section utilisable ces. as outlet, 227 objections to, 227 ion... reduction of length due to 226 water cushion, 230 in [temporary, 157 to be on bank opposite to outlet millic with parallel tail channel, 214, 230 Water cushions in series, 211 level, lowering of, for repairs, 128, I69 recorder, 13 power, utilisation of outlet for, 280 Water supply reservoirsproximity of storage, 284 utility for famine work, 291 works for, 287 Water to be laid on over works, 295 **9**5. Watering dam during construction, 137 Watertight connection of outlet culvert with trench, 251 junction between masonry and earthwork, 109

RAM

I

supply levels, 81 temporarily increased during construction, 143 Working area, plan of, 292 Works, large, detailed arrangements for, general arrangements for,

Width of dam at high-flood and full-

Whiting's curve of run-off, 200

trench, 104


291 road along downstream toe, 146 roads outside dam slopes, 144

section for

puddle

YARROW dam, drainage of puddle trench, 73 Yield from catchment, factors affecting, 7

Bradbury, Agnew & Co. Ld., Printers, London and Tonbridge.

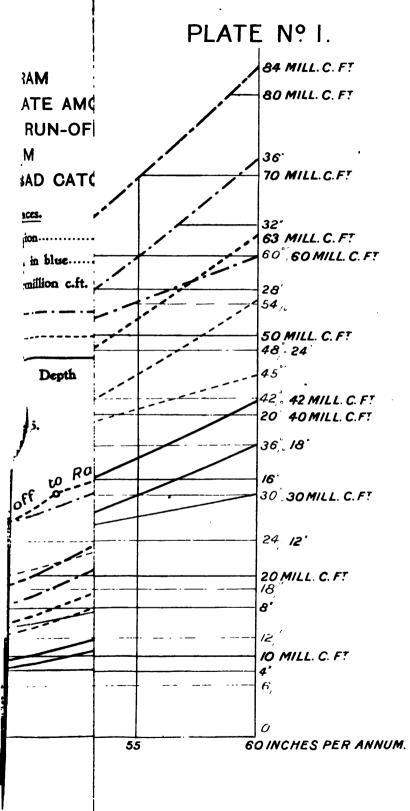







PLATE N

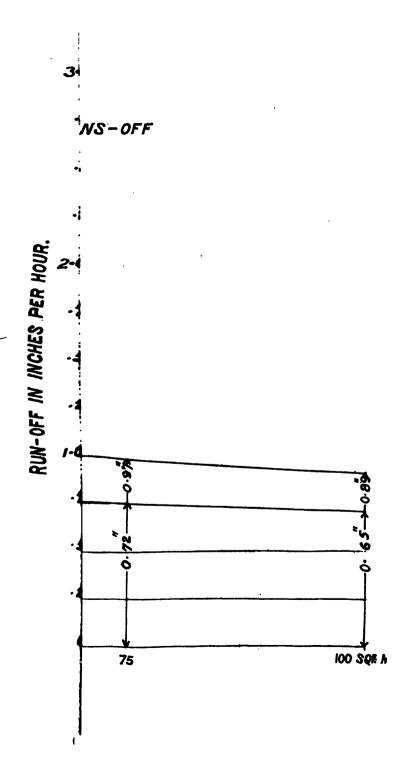



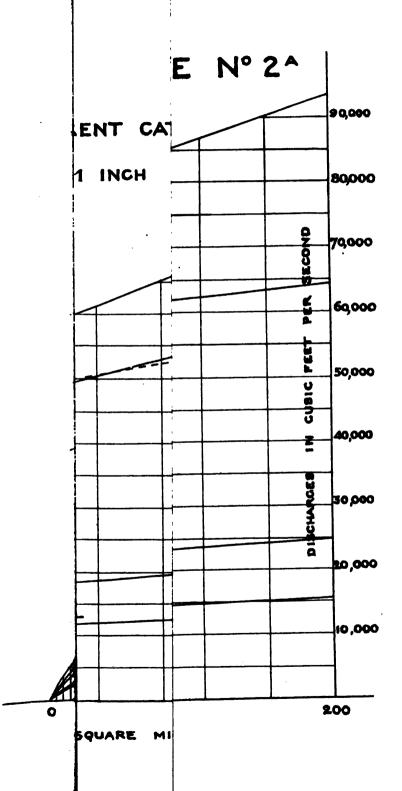

		į
	`	


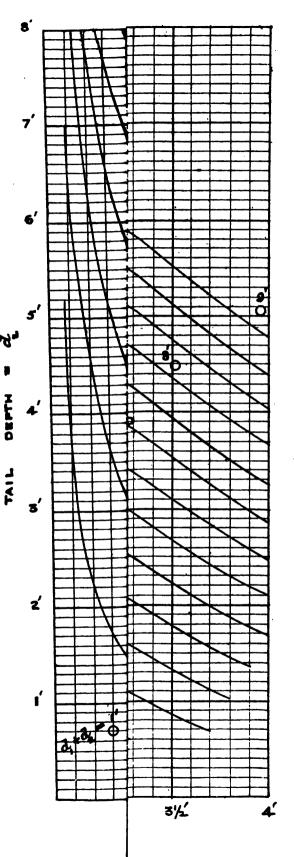



PLATE N° 28


WITH VARYING TAIL CHANNEL DEPTHS AND AFFLUX HEIGHTS DIACRAM OF WASTE WEIR DISCHARGES


Vide PAGE 205.


	•			
				1

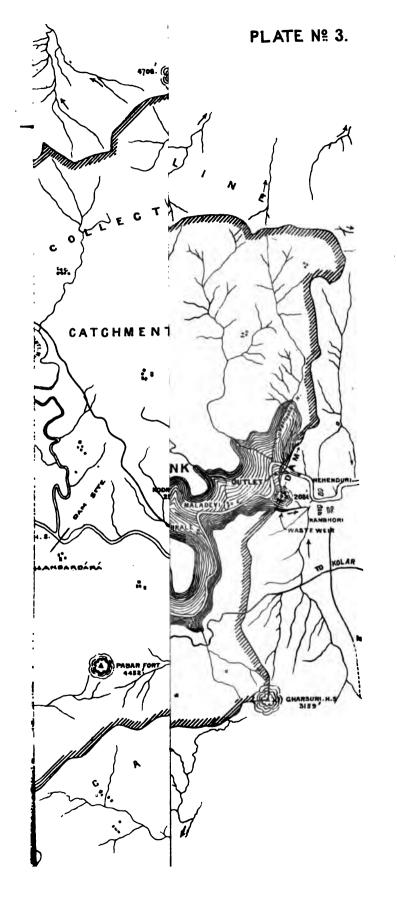



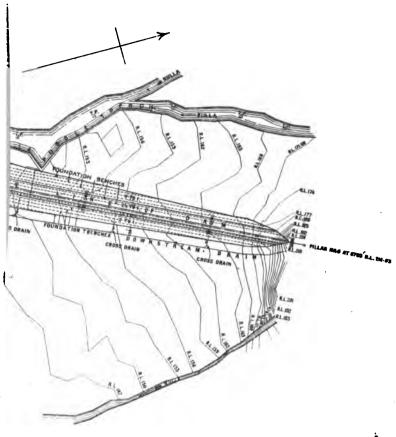

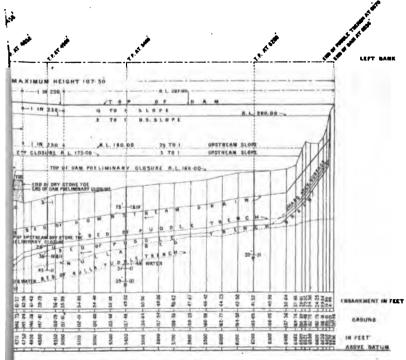






MÁLÁDEVI LATE Nº 5. — CROSS SECTIONS — SEALE.

TYPE SECTION F1G_7. CROSS SECTION AT A.B. 6, 131, 133, 134, 143

•				
	•			
	·			
				ĺ
		•		İ
	•			
	•			
				i
				1

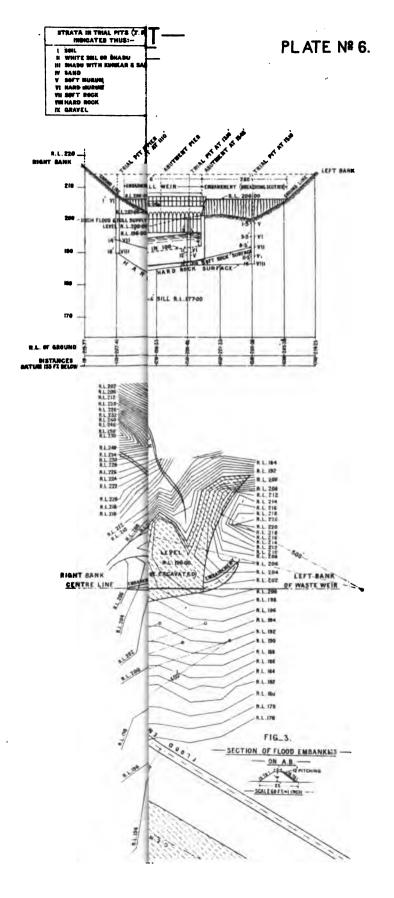




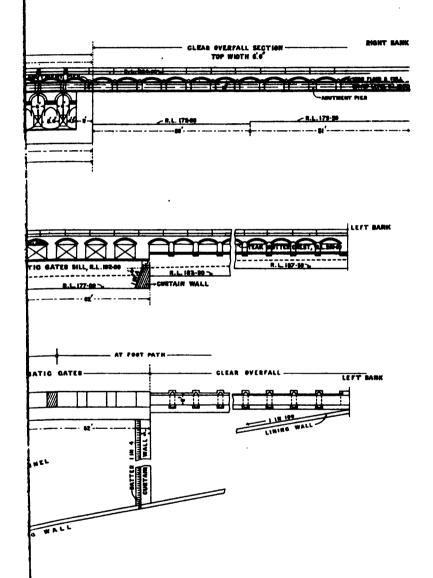


		•	-	
	v.			
•			•	
				i i
				1
				i


PLATE Nº 8.

IONS-

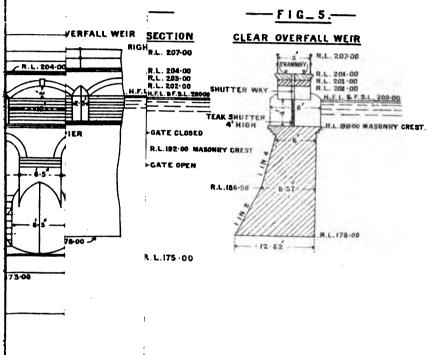

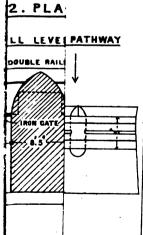

	•			
٠				
•				
		•		
	·			
			•	

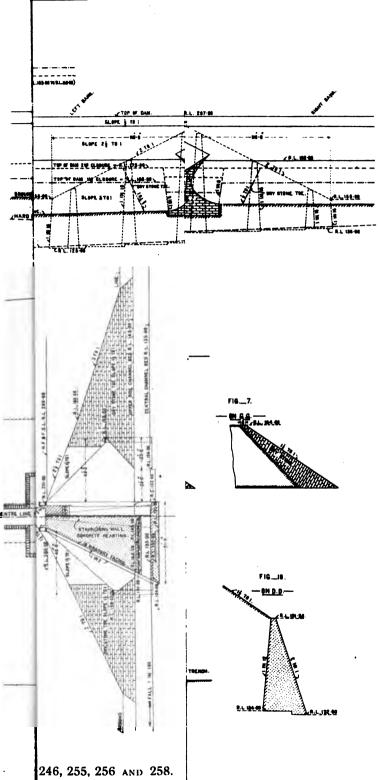

		·	
	•		


204-00 R.L.205-00 204-00 R.L.204-00 014-1-31 R.L.201-00 H.F. B.F. S.E.E. 200-00 FIG. I. STABILITY DIAG MEAN SECTION. SCALES WALL _ 20 FEET | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO INC. | INFOO I H.F.L. 200-00 -7-78-- R.L.1 R.L. 156-00 ABUTMENT LOSURE H. F. L. 169-00 PILASTER ABUTMENT. SE H. F. L. 160 00 GUIDE: LIFTING RODS CONCRETE WALL MABORRY FACING DOUBLE RAIL FOR NEEDLES 42 6 TURBINE SLUIGE VALVE IRON RAIL GRATING SLUICE GATE .135 00 R.L. 130-00 -152, 800 LBS TOP PLAN. R.L. 120-00 W. WEIGHT œ

FIG. 3. SECTION ON A. B.


	·			
		•		
·				
			•	




SCALE_ 2 - I FOOT.

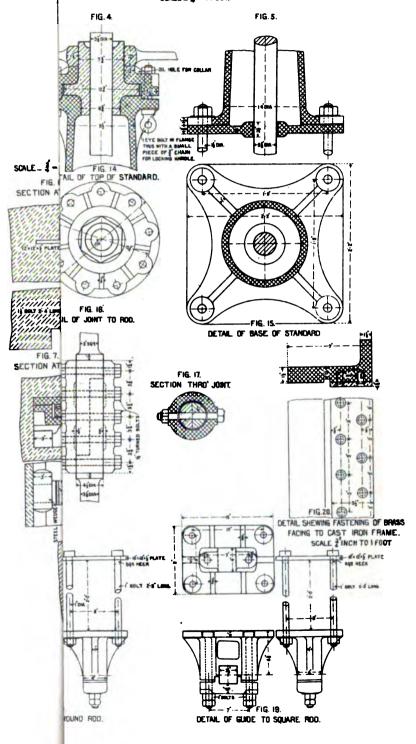


	·		

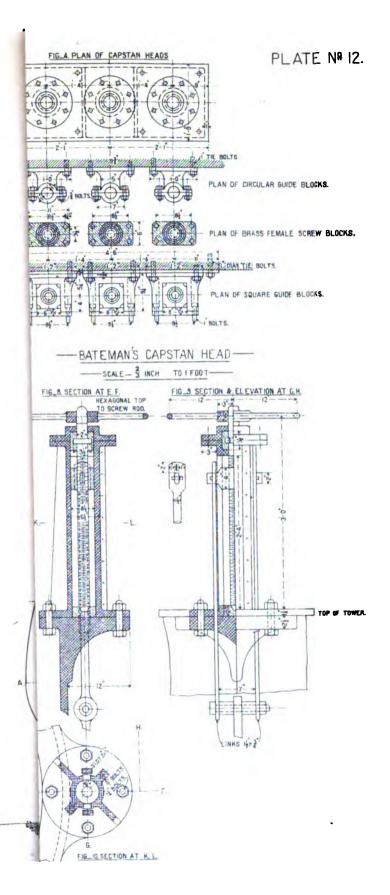




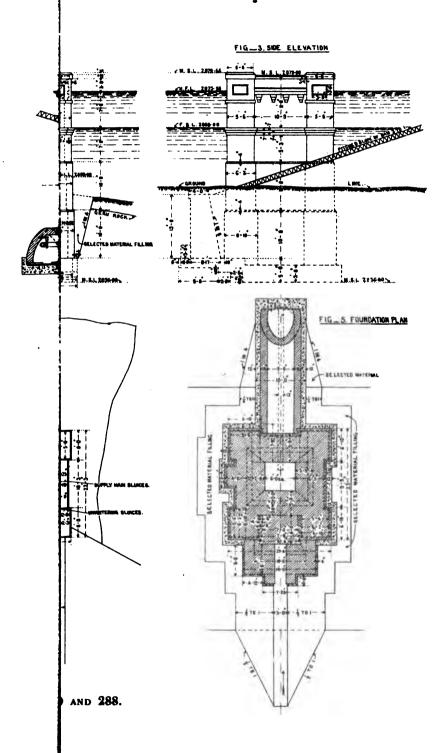

٠			
		•	

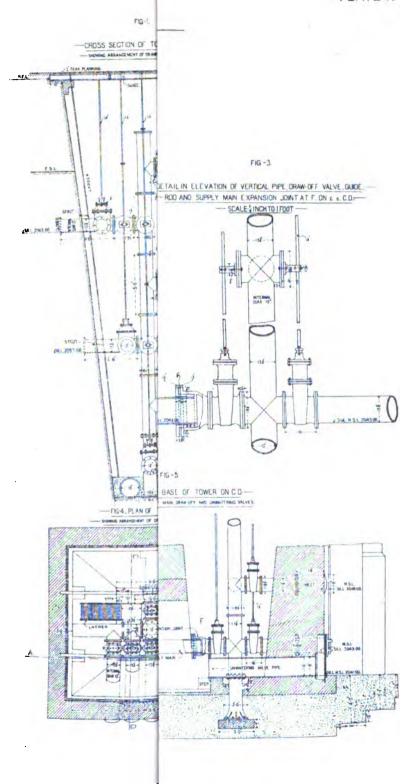

	•	
		•



___ 15100P880P8

ant

b89088900121a

SWM 178036 378



